F14A

Instruction Manual

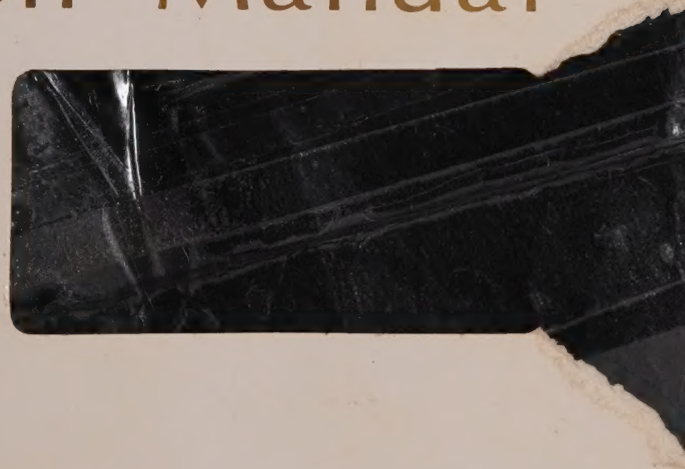

FLUKE

ELECTRONICS FOR INDUSTRY
INSTRUMENTS / COMPONENTS

JOHN FLUKE MFG. CO., INC.
P.O. Box 7428 Seattle, Washington 98133

February, 1969

MODEL 891A & 891AR

DC DIFFERENTIAL VOLTMETER

891A & 891AR serial no. _____ and above.

© COPYRIGHT, JOHN FLUKE MFG. CO., INC., 1970

TABLE OF CONTENTS

SECTION	TITLE	PAGE
I	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1. Introduction	1-1
	1-5. Electrical Specifications	1-1
	1-6. Differential Voltmeter	1-1
	1-7. Conventional Voltmeter	1-1
	1-8. General Specifications	1-2
	1-9. Environmental Specifications	1-2
	1-10. Mechanical Specifications	1-3
II	OPERATING INSTRUCTIONS	2-1
	2-1. Introduction	2-1
	2-4. Operating Features	2-1
	2-6. Operation from 115/230 Volt AC Power Lines	2-1
	2-9. Preliminary Operating Procedures	2-1
	2-11. Operational Test	2-1
	2-15. Operating Notes	2-4
	2-16. Differential Off-Null Input Resistance	2-4
	2-18. Ground Loop Currents	2-4
	2-20. Use of Shorting Link	2-5
	2-22. DC Common Mode Voltages	2-5
	2-24. Operation on the TVM Mode	2-5
	2-26. Operation as a Differential Voltmeter	2-5
	2-28. Optional Recorder Operation	2-5
	2-30. Applications	2-6
	2-32. Measurement, of Excursions About a Nominal	2-6
	2-34. Operation as a Null Detector	2-6
	2-36. Measurement of High Resistances	2-7
	2-38. Overload Protection	2-7
III	THEORY OF OPERATION	3-1
	3-1. Introduction	3-1
	3-3. Overall Block Diagram Analysis	3-1
	3-4. Introduction	3-1
	3-6. Conventional (TVM) Voltmeter Mode	3-1

(continued on page ii)

TABLE OF CONTENTS, *continued*

SECTION	TITLE	PAGE
III	**THEORY OF OPERATION,** *continued*	
	3-8. Differential (NULL) Voltmeter Mode	3-2
	3-10. Recorder Output	3-2
	3-12. Individual Circuit Description	3-2
	3-13. Introduction	3-2
	3-15. Power Supply/Battery Charger	3-2
	3-18. The Reference Supply	3-2
	3-26. Kelvin-Varley Divider	3-4
	3-31. Null Detector	3-4
	3-36. Input Divider	3-6
	3-39. Optional Recorder Output	3-6
IV	**MAINTENANCE**	**4-1**
	4-1. Introduction	4-1
	4-5. Service Information	4-1
	4-8. Maintenance Access	4-2
	4-9. The Model 891A Disassembly Instructions	4-2
	4-11. The Model 891AR Disassembly Instructions	4-2
	4-13. General Maintenance	4-2
	4-14. Periodic Cleaning	4-2
	4-17. Fuse Replacement	4-3
	4-19. Battery Replacement	4-3
	4-21. Precalibration and Troubleshooting	4-3
	4-22. Introduction	4-3
	4-25. Reference Amplifier/Reference Inverter Checks	4-3
	4-28. Null Detector Checks	4-8
	4-31. Kelvin-Varley Checks	4-9
	4-34. Optional Recorder Output Checks	4-9
	4-37. Calibration Procedures	4-10
	4-38. Introduction	4-10
	4-42. Meter Mechanical Zero Adjust	4-10
	4-44. Zener Reference Supply Calibration	4-10
	4-46. Null Detector Calibration	4-10
	4-48. Kelvin-Varley Divider Calibration	4-12
	4-50. Voltage Range Calibration	4-12

(continued on page iii)

TABLE OF CONTENTS, *continued*

SECTION	TITLE	PAGE
V	LIST OF REPLACEABLE PARTS	5-1
	5-1. Introduction	5-1
	5-4. Column Descriptions	5-1
	5-5. How to Obtain Parts	5-2
	5-8. List of Abbreviations	5-2
	5-9. Serial Number Effectivity	5-33
	APPENDIX A	
	WARRANTY	
	LIST OF SALES REPRESENTATIVES	
	LIST OF FACTORY AUTHORIZED SERVICE CENTERS	
	SCHEMATIC DIAGRAMS	

LIST OF ILLUSTRATIONS

FIGURE	TITLE	PAGE
Frontispiece	Model 891A and Model 891AR DC Differential Voltmeter	iv
1-1	Model 891A Outline Drawing	1-2
1-2	Model 891AR Outline Drawing	1-2
2-1	The Model 891A Controls, Terminals, and Indicators	2-2
2-2	The Model 891AR Controls, Terminals, and Indicators	2-3
2-3	Readout Dials Versus NULL SENS Checks	2-4
2-4	Off-Null Input Resistance	2-4
2-5	Bridge Detector-Floating Supply	2-6
2-6	Bridge Detector-Floating Null Detector	2-6
3-1	Model 891 Block Diagram	3-1
3-2	Reference Amplifier/Reference Inverter - Simplified	3-3
3-3	Null Detector Block Diagram	3-5
4-1	Required Test Equipment	4-1
4-2	Adjustment and Test Point Locations (Sheet 1 of 3)	4-4
4-2	Adjustment and Test Point Locations (Sheet 2 of 3)	4-5
4-2	Adjustment and Test Point Locations (Sheet 3 of 3)	4-6
4-3	Reference Amplifier/Reference Inverter Checks - Equipment Connections	4-7
4-4	Reference Amplifier/Reference Inverter Waveforms	4-8
4-5	Input DC Voltage Versus Range - Checks	4-9
4-6	Null Detector Waveforms	4-9

(continued on page v)

LIST OF ILLUSTRATIONS, *continued*

FIGURE	TITLE	PAGE
4-7	Input Voltages Versus Readout Dial Settings - Checks	4-9
4-8	Recorder Output Waveforms	4-10
4-9	Summary of Calibration Adjustments	4-11
4-10	TVM Range Checks	4-12
4-11	Jumper Wire Location	4-13
4-12	Jumper Wire Selection	4-13
4-13	Vernier Dial Set Screw Location	4-13
5-1	891A DC Differential Voltmeter (Sheet 1 of 2)	5-4
5-1	891A DC Differential Voltmeter (Sheet 2 of 2)	5-5
5-2	Front Panel Assembly (891A)	5-6
5-3	Reference Amplifier P/C Assembly	5-8
5-4	Reference Inverter P/C Assembly	5-12
5-5	Reference Inverter P/C Assembly	5-14
5-6	Null Detector P/C Assembly	5-18
5-7	Kelvin-Varley P/C Assembly	5-22
5-8	Rear Panel Assembly (891A)	5-24
5-9	891AR DC Differential Voltmeter (Sheet 1 of 2)	5-26
5-9	891AR DC Differential Voltmeter (Sheet 2 of 2)	5-27
5-10	Front Panel Assembly (891AR)	5-28
5-11	Rear Panel Assembly (891AR)	5-29
5-12	Battery and Recorder Output Options	5-30

THE MODEL 891A DC DIFFERENTIAL VOLTMETER

THE MODEL 891AR DC DIFFERENTIAL VOLTMETER

SECTION I

INTRODUCTION AND SPECIFICATIONS

1-1. INTRODUCTION

1-2. The Fluke Model 891A and AR DC Differential Voltmeters provide conventional or differential measurement of voltages from 10 microvolts to 1100 volts dc. Conventional (TVM) measurements with an accuracy of ±3% of the selected range are available and are normally made to initially determine the relative magnitude of the measured dc voltage. The differential (NULL) mode is then used with an improved accuracy of up to 250% over that of the conventional mode to determine the precise magnitude of the measured dc voltage. One linear meter scale greatly simplifies all measurements made with the instrument. Whenever the instrument is operated on the differential mode, an in-line digital readout representing the magnitude of the measured voltage is available from the front panel readout dials.

1-3. Two versions of the instrument are available and are identified as the Model 891A and the Model 891AR. The Model 891A is a portable unit, half-rack in width, with a tilt-down carrying handle. This handle detents into the instrument's feet to serve as a tilt bale during bench top use of the instrument. The Model 891AR is also a portable unit, but is of proper width for relay rack installation. Carrying of this instrument is provided by two front panel handles while a tilt bale located on the bottom of the instrument facilitates bench top use.

1-4. A rechargeable battery option and a recorder output option are available for either version of the instrument. These options can be installed at the factory, upon request, or in the field. Option Kit 891A-7001 comprises the rechargeable battery pack and when installed in the instrument is identified as the -01 option on the rear panel decal. Option Kit 891A-7002 comprises the recorder output and when installed in the instrument is identified as the -02 option on the rear panel decal.

1-5. ELECTRICAL SPECIFICATIONS

1-6. DIFFERENTIAL VOLTMETER

ABSOLUTE ACCURACY
±(0.01% of input +0.001% of range +10 uv) from 0 to ±1100 volts dc at 23°C ±2°C at up to 80% relative humidity.
±(0.02% of input +0.001% of range +10 uv) from 0 to ±1100 volts dc from 10°C to 40°C (50°F to 104°F) at up to 70% relative humidity.

INPUT AND NULL VOLTAGE RANGES

INPUT RANGE	NULL RANGES
1	0.001, 0.01, 0.1
10	0.001, 0.01, 0.1, 1.0
100	0.01, 0.1, 1.0, 10
1000	0.1, 1.0, 10, 100

INPUT RESISTANCE
Infinite at null from 0 to 1100 volts dc.

METER RESOLUTION

INPUT RANGE (VOLTS)	RESOLUTION PPM OF RANGE	RESOLUTION VOLTAGE
1	10	10 uv
10	1	10 uv
100	1	100 uv
1000	1	10 mv

VOLTAGE DIAL RESOLUTION

INPUT RANGE (VOLTS)	RESOLUTION PPM OF RANGE	RESOLUTION VOLTAGE
1	10	10 uv
10	10	100 uv
100	10	1 mv
1000	10	10 mv

1-7. CONVENTIONAL VOLTMETER (TVM)

ACCURACY
±3% of range.

RANGES AND INPUT RESISTANCE

INPUT RANGE (VOLTS)	INPUT RESISTANCE (MEGOHMS)
1000	100
100	100
10	100
1	100
*0.1-0-0.1	100
*0.01-0-0.01	10
*0.001-0-0.001	10

10% over-ranging on each range
*These ranges obtained using null ranges with all Readout dials at zero.

1-8. GENERAL SPECIFICATIONS

ELECTRICAL DESIGN
Completely solid-state.

INPUT RESISTANCE OF NULL DETECTOR
10 megohms on the 0.01 and 0.001 volt ranges and 100 megohms on all other ranges.

REFERENCE ELEMENT
Temperature compensated zener diodes.

REGULATION OF REFERENCE SUPPLY
0.0005% for a 10% line voltage change.

INSTRUMENT STABILITY (Peak-to-Peak)
10 ppm per hour
20 ppm per day
40 ppm per month
90 ppm per year

KELVIN-VARLEY DIVIDER ACCURACY
±0.005% of dial setting above 1/10 of full-scale.

RECORDER OUTPUT
Available as the -02 option, adjustable from 0 to ±0.2 volts for an end-scale meter deflection. Low side is grounded and loading does not affect meter deflection accuracy.

POLARITY
Reversible with a front panel control.

WARMUP TIME
Less than one minute.

DC COMMON MODE REJECTION
120 db (1 uv/volt of common mode voltage) for maximum of ±500 volts.

AC COMMON MODE REJECTION
Up to 100 volts ac peak-to-peak, 50 to 500 Hz, produces no measurable instrument error.

INPUT POWER
115/230 volts ac, 50 to 500 Hz, at approximately 4 watts for line operation and approximately 8 watts when recharging batteries on the -01 option equipped instruments. Minimum of 8 hours of operation on fully charged batteries of the -01 option equipped instruments.

1-9. ENVIRONMENTAL SPECIFICATIONS

OPERATING TEMPERATURE RANGE
Within all specifications from 10°C to 40°C (50°F to 104°F), derated at 15 ppm/°C outside these limits to 0°C and 50°C (32°F and 122°F).

HUMIDITY
Within all specifications up to 80% R.H. below 25°C.
Within all specifications up to 70% R.H. above 25°C.

STORAGE TEMPERATURE RANGE
Model 891A/AR
-40°C to 70°C (-40°F to 158°F).
Model 891A/AR-01
-40°C to 60°C (-40°F to 140°F).

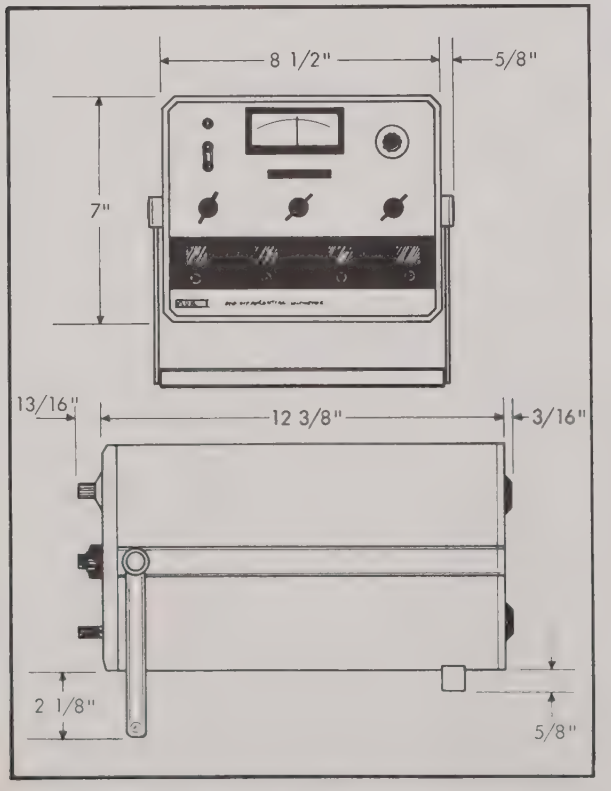

Figure 1-1. MODEL 891A OUTLINE DRAWING

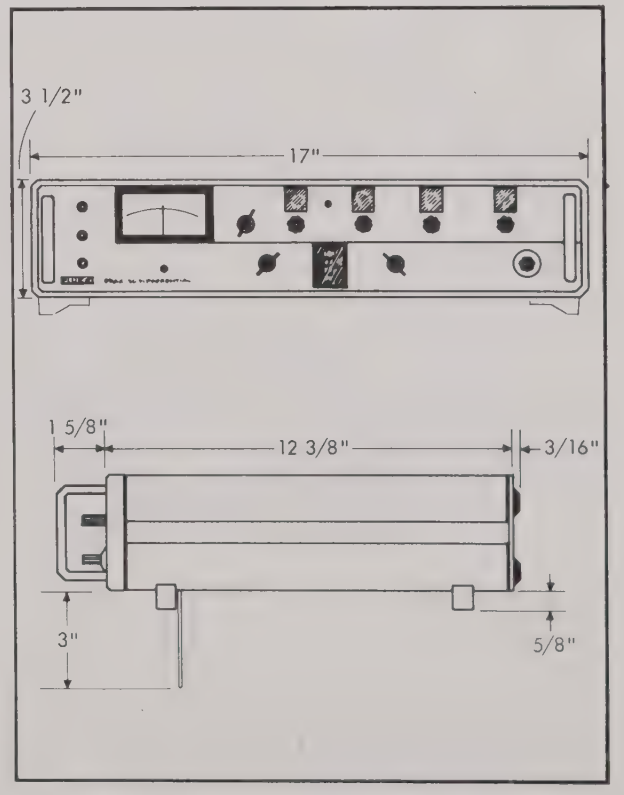

Figure 1-2. MODEL 891AR OUTLINE DRAWING

SHOCK
Meets requirements of MIL-T-945A and MIL-S-901B.

VIBRATION
Meets requirements of MIL-T-945A.

1-10. MECHANICAL SPECIFICATIONS

SIZE
Model 891A - 9-3/4" wide x 7" high x 13-3/8" deep.
Model 891AR - 17" wide x 3-1/2" high x 14-3/16" deep. (19" wide upon installation of mounting brackets).

WEIGHT
Model 891A - Approximately 12 lbs.
Model 891AR - Approximately 12 lbs.
Option Kit 891A-7001 - Approximately 2 lbs.
Option Kit 891A-7002 - Approximately 0.3 lbs.

OPTION KIT 891A-7001
Provides a rechargeable battery pack for installation in both versions of the instrument.

OPTION KIT 891A-7002
Provides a recorder output for installation in both versions of the instrument.

SECTION II

OPERATING INSTRUCTIONS

2-1. INTRODUCTION

2-2. This section of the manual contains information necessary for you to effectively operate your Model 891 DC Differential Voltmeter. It is recommended that you thoroughly read and understand this section of the manual before attempting to operate your instrument.

2-3. Should any difficulties be encountered during the operation of your instrument, please feel free to contact your nearest John Fluke Sales Representative or write directly to the John Fluke Mfg. Co., Inc., P. O. Box 7428, Seattle, Washington 98133, with a statement of your problem. A complete list of Sales Representatives is contained at the rear of this manual.

2-4. OPERATING FEATURES

2-5. All of the controls, terminals, and indicators for the Model 891A and the Model 891AR are illustrated and described in Figure 2-1 and Figure 2-2.

2-6. OPERATION FROM 115/230 VOLT AC POWER LINES

2-7. The Model 891 may be operated from either a 115 or 230 volt ac power line. The input power transformer primary is composed of two windings which, when connected in parallel, allows the instrument to be operated from a 115 volt ac power line or, when the windings are connected in series, allows the instrument to be operated from a 230 volt ac power line.

2-8. A rear panel 115/230 slide switch (S5) provides the necessary power transformer primary winding connections when placed to the desired 115 or 230 volt position.

2-9. PRELIMINARY OPERATING PROCEDURES

2-10. Connect the Model 891 power cord to available line power. If your instrument does not contain the -01 option, perform only step a. If your instrument contains the -01 option, perform steps a through d.

WARNING!

The instrument case is connected to the round pin of the three-prong connector located on the power cord. Whenever the instrument is operated from ac line power, ensure that this round pin is connected to a high quality earth ground.

a. Place the instrument controls as follows and allow at least one minute of circuit stabilization before attempting any measurements.

POWER	ON/LINE OPR
RANGE	1000
NULLS SENS	TVM
POLARITY	+
Readout dials	000. 00

Note!

The Readout dial labeled 00 in the preceding step, represents the extreme right-hand vernier dial.

b. Place the -01 option equipped instrument POWER switch to BAT CHK, observing that the meter needle deflects to the left of the -. 2 volt increment. If the batteries are adequately charged, the instrument can be operated on battery power by placing the POWER switch to either BAT OPR or BAT OPR/LINE ISOL. To completely isolate your instrument from the line power ground, disconnect the power cord from line power.

c. If the BAT CHK test results in a deflection of less than .2 volts on the meter, place the POWER switch to BAT CHG and operate the instrument from line power until the batteries are adequately charged. All measurements can be performed during recharging of the batteries. Should the batteries fail the BAT CHK test after 16 hours of recharging, replacement of the batteries may be necessary. Refer to Section IV, paragraph 4-19 and 4-20 for battery replacement instructions.

2-11. OPERATIONAL TEST

2-12. The following information is provided for the operator to initially verify instrument operation. These tests will only check relative instrument operation and are not intended as instrument performance checks. Should you wish to check the accuracy of the instrument against the specifications contained in Section I, refer to the Performance Checks contained in Section IV of this manual.

2-13. To determine relative instrument operation, perform the operations described in the Preliminary Operating Procedures (paragraphs 2-9 and 2-10) and proceed as follows:

a. Place the RANGE control to 1.

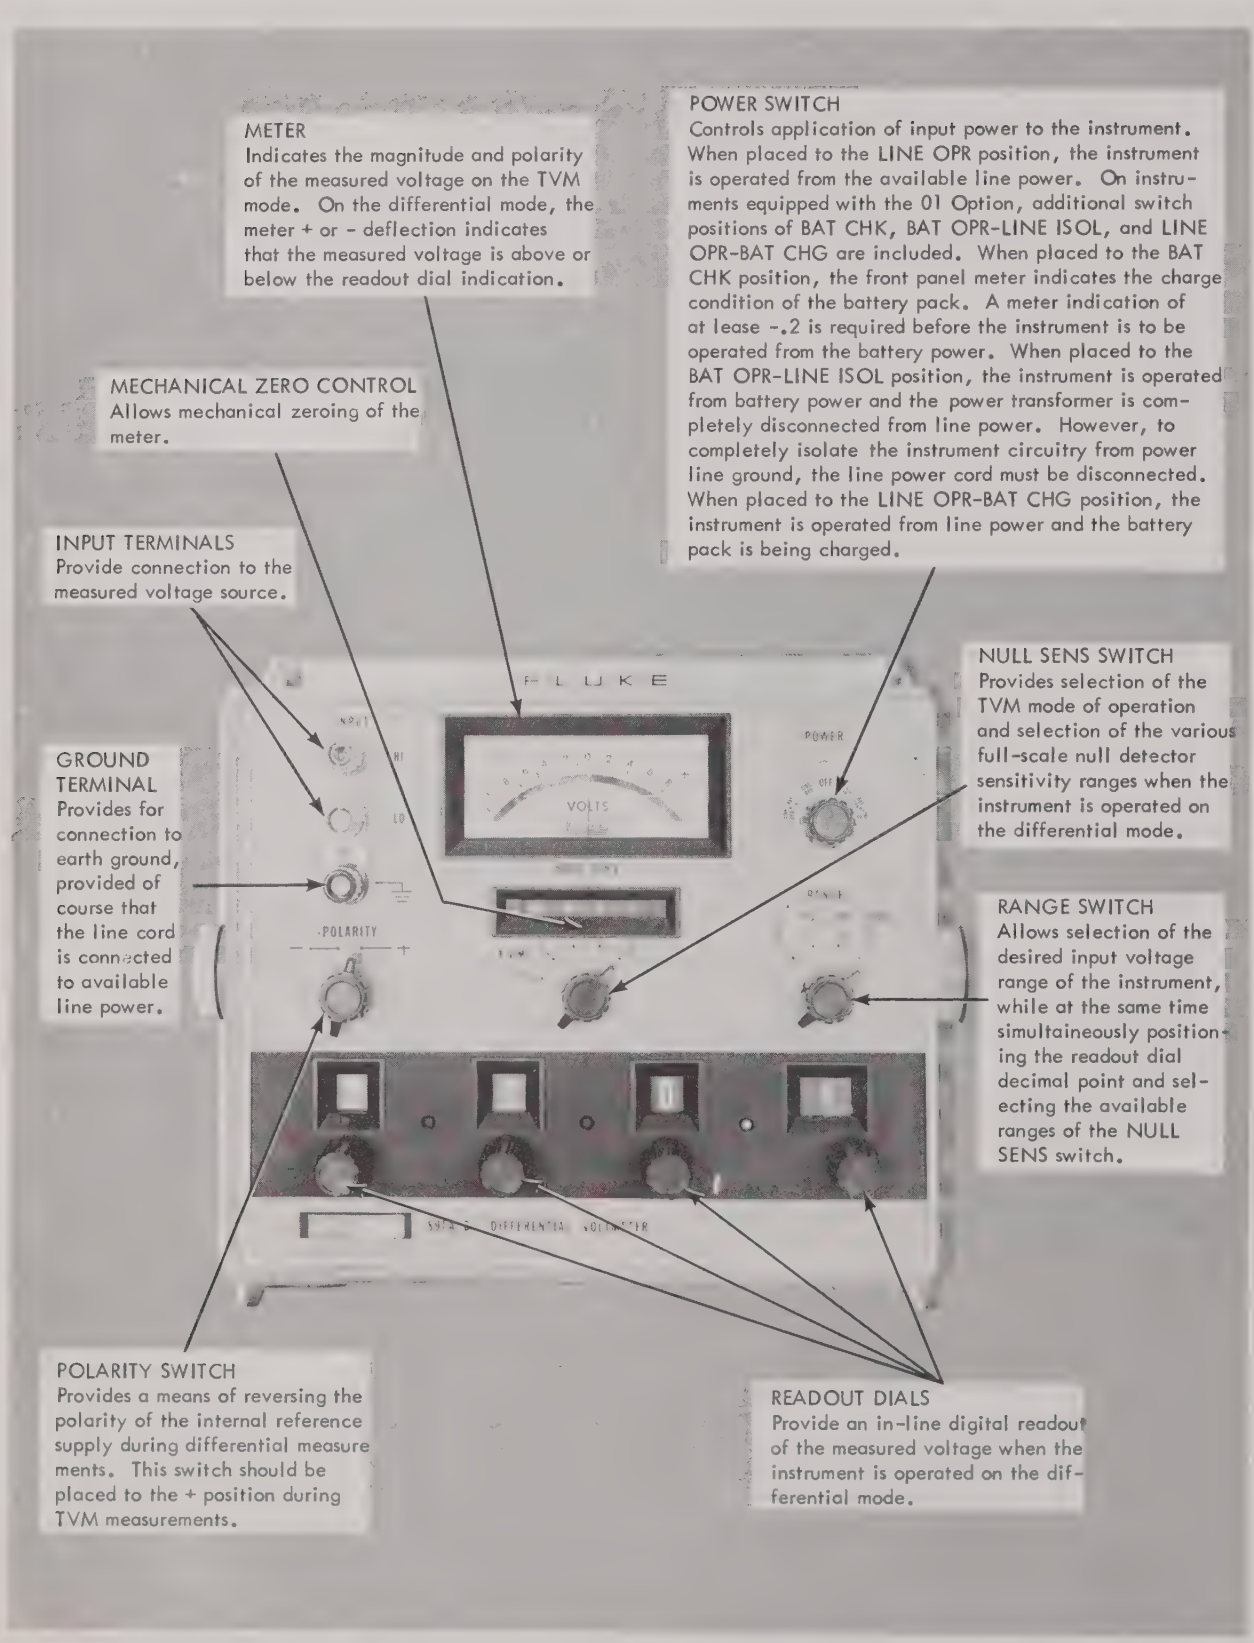
METER
Indicates the magnitude and polarity of the measured voltage on the TVM mode. On the differential mode, the meter + or - deflection indicates that the measured voltage is above or below the readout dial indication.
POWER SWITCH
Controls application of input power to the instrument. When placed to the LINE OPR position, the instrument is operated from the available line power. On instruments equipped with the 01 Option, additional switch positions of BAT CHK, BAT OPR-LINE ISOL, and LINE OPR-BAT CHG are included. When placed to the BAT CHK position, the front panel meter indicates the charge condition of the battery pack. A meter indication of at lease -.2 is required before the instrument is to be operated from the battery power. When placed to the BAT OPR-LINE ISOL position, the instrument is operated from battery power and the power transformer is completely disconnected from line power. However, to completely isolate the instrument circuitry from power line ground, the line power cord must be disconnected. When placed to the LINE OPR-BAT CHG position, the instrument is operated from line power and the battery pack is being charged.
MECHANICAL ZERO CONTROL
Allows mechanical zeroing of the meter.
INPUT TERMINALS
Provide connection to the measured voltage source.
NULL SENS SWITCH
Provides selection of the TVM mode of operation and selection of the various full-scale null detector sensitivity ranges when the instrument is operated on the differential mode.
GROUND TERMINAL
Provides for connection to earth ground, provided of course that the line cord is connected to available line power.
RANGE SWITCH
Allows selection of the desired input voltage range of the instrument, while at the same time simultaneously positioning the readout dial decimal point and selecting the available ranges of the NULL SENS switch.
POLARITY SWITCH
Provides a means of reversing the polarity of the internal reference supply during differential measurements. This switch should be placed to the + position during TVM measurements.
READOUT DIALS
Provide an in-line digital readout of the measured voltage when the instrument is operated on the differential mode.
FLUKE
VOLTS
POLARITY
POWER
OFF

Figure 2-1. THE MODEL 891A CONTROLS, TERMINALS, AND INDICATORS

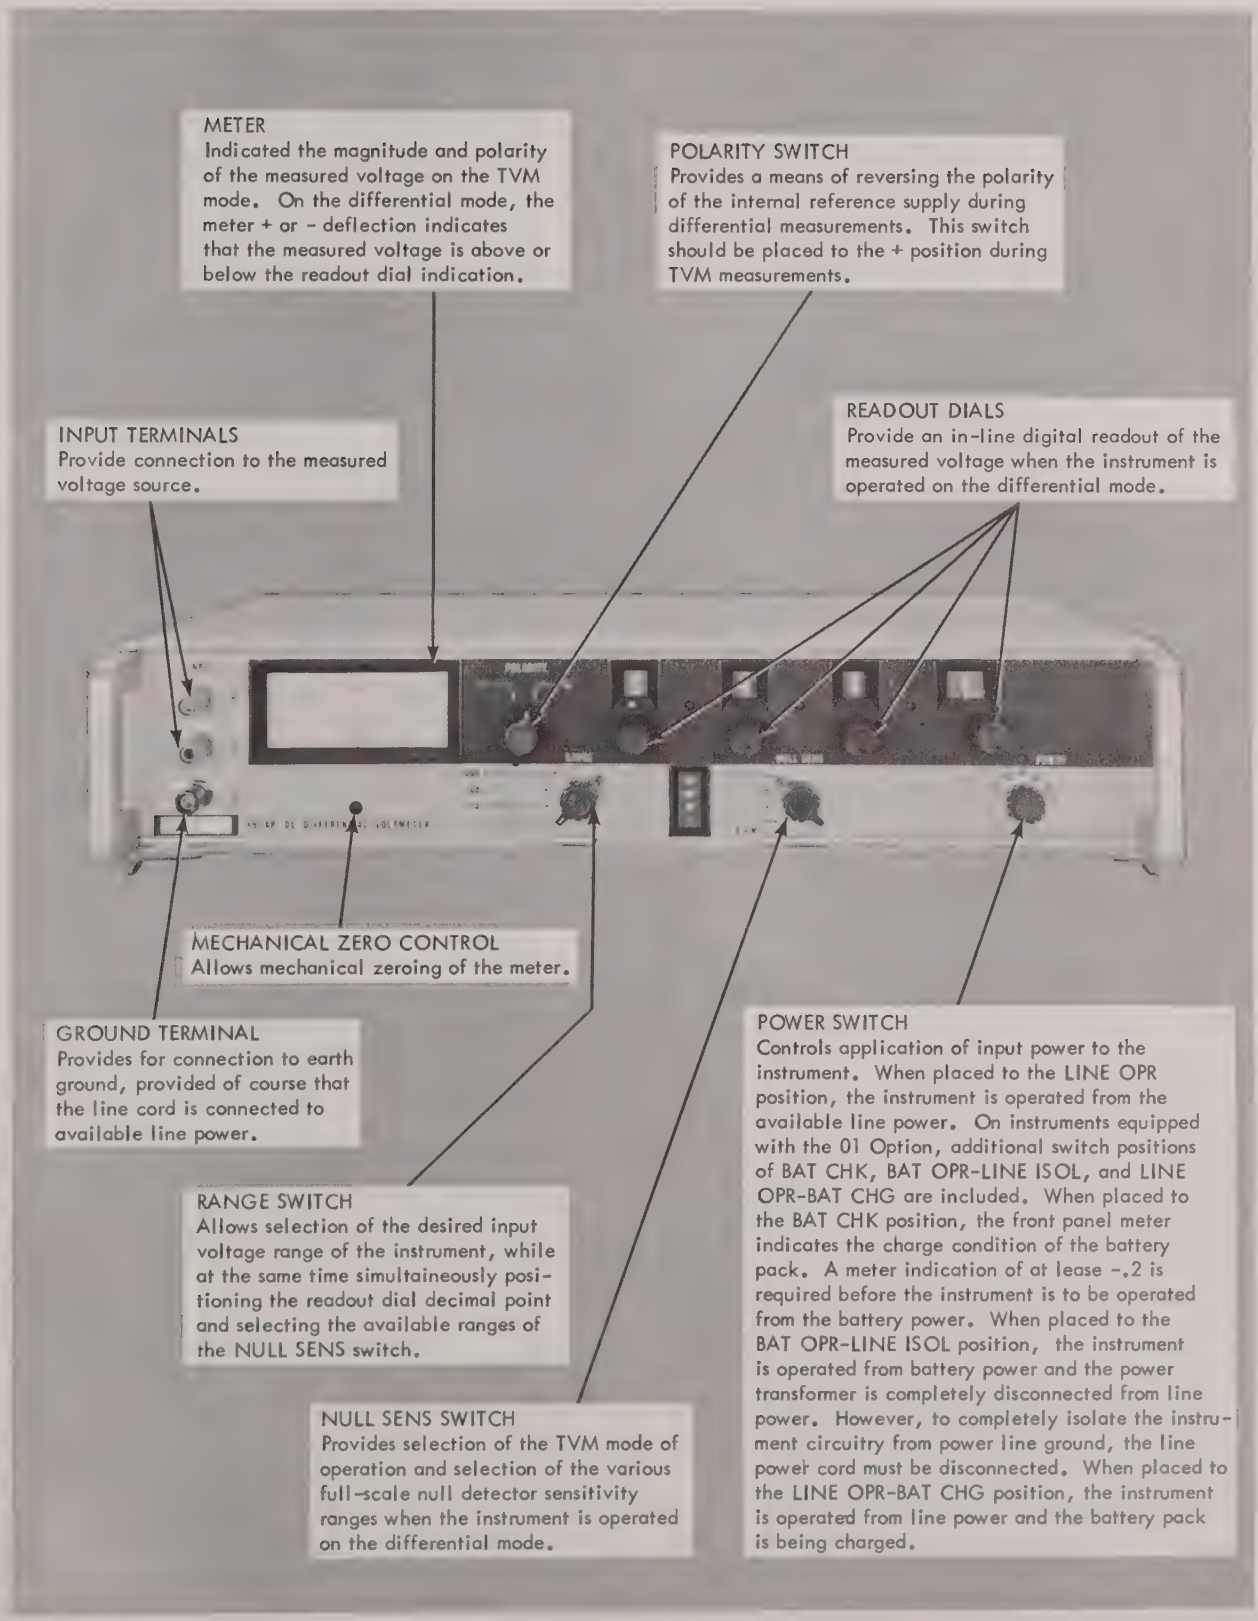
METER
Indicated the magnitude and polarity of the measured voltage on the TVM mode. On the differential mode, the meter + or - deflection indicates that the measured voltage is above or below the readout dial indication.
POLARITY SWITCH
Provides a means of reversing the polarity of the internal reference supply during differential measurements. This switch should be placed to the + position during TVM measurements.
INPUT TERMINALS
Provide connection to the measured voltage source.
READOUT DIALS
Provide an in-line digital readout of the measured voltage when the instrument is operated on the differential mode.
MECHANICAL ZERO CONTROL
Allows mechanical zeroing of the meter.
GROUND TERMINAL
Provides for connection to earth ground, provided of course that the line cord is connected to available line power.
RANGE SWITCH
Allows selection of the desired input voltage range of the instrument, while at the same time simultaineously positioning the readout dial decimal point and selecting the available ranges of the NULL SENS switch.
NULL SENS SWITCH
Provides selection of the TVM mode of operation and selection of the various full-scale null detector sensitivity ranges when the instrument is operated on the differential mode.
POWER SWITCH
Controls application of input power to the instrument. When placed to the LINE OPR position, the instrument is operated from the available line power. On instruments equipped with the 01 Option, additional switch positions of BAT CHK, BAT OPR-LINE ISOL, and LINE OPR-BAT CHG are included. When placed to the BAT CHK position, the front panel meter indicates the charge condition of the battery pack. A meter indication of at lease -.2 is required before the instrument is to be operated from the battery power. When placed to the BAT OPR-LINE ISOL position, the instrument is operated from battery power and the power transformer is completely disconnected from line power. However, to completely isolate the instrument circuitry from power line ground, the line power cord must be disconnected. When placed to the LINE OPR-BAT CHG position, the instrument is operated from line power and the battery pack is being charged.

Figure 2-2. THE MODEL 891AR CONTROLS, TERMINALS, AND INDICATORS

b. Touch the HI INPUT terminal and the chassis of the instrument with your hand, observing that the meter pointer deflects to the right or left.

c. Place the POLARITY switch to the - position and repeat step b. The meter pointer should deflect in the opposite direction by approximately the same amount observed in step b.

d. Remove the shorting strap from between the LO and ground INPUT terminals and connect the strap between the HI and LO INPUT terminals.

e. Perform the Readout dials versus NULL SENS checks of Figure 2-3, observing that the meter pointer indicates -1 for each particular check.

READOUT DIALS	NULL SENS
.000X	.001
.00100	.001
.01000	.01
.10000	.1

Figure 2-3. READOUT DIALS VERSUS NULL SENS CHECKS

f. Place the Readout dials, NULL SENS, and POLARITY switches to their respective .10000, .1, and + positions, observing that the meter pointer indicates -1.

g. Retaining the control positions of step f, place the RANGE switch to each available position observing that the meter pointer indicates -1 in all positions of the RANGE switch.

2-14. If the results of the Operational Test agree with information given, it can be assumed that the instrument is operating properly and measurements of dc voltages can now be performed.

2-15. OPERATING NOTES

2-16. DIFFERENTIAL OFF-NULL INPUT RESISTANCE

2-17. Input resistance of the Model 891 is infinite at null, as no current flows between the measured source and the internal reference supply of the instrument. However, a small current does flow between the measured source and the internal reference supply whenever the instrument is not exactly nulled. For example, when the meter pointer is deflected 10% of full-scale on the .001 volt NULL SENS range, the input resistance of the instrument is 10^{11} ohms per volt of the measured input voltage or 10^{12} ohms for an input measured voltage of 10 volts dc. A graph of these apparent off-null input resistances is contained in Figure 2-4.

2-18. GROUND LOOP CURRENTS

2-19. A potential difference often exists between different points of power system grounds. Consequently, current may flow from one power system ground through the voltmeter and the voltage source being measured to another power system ground. These ground loop

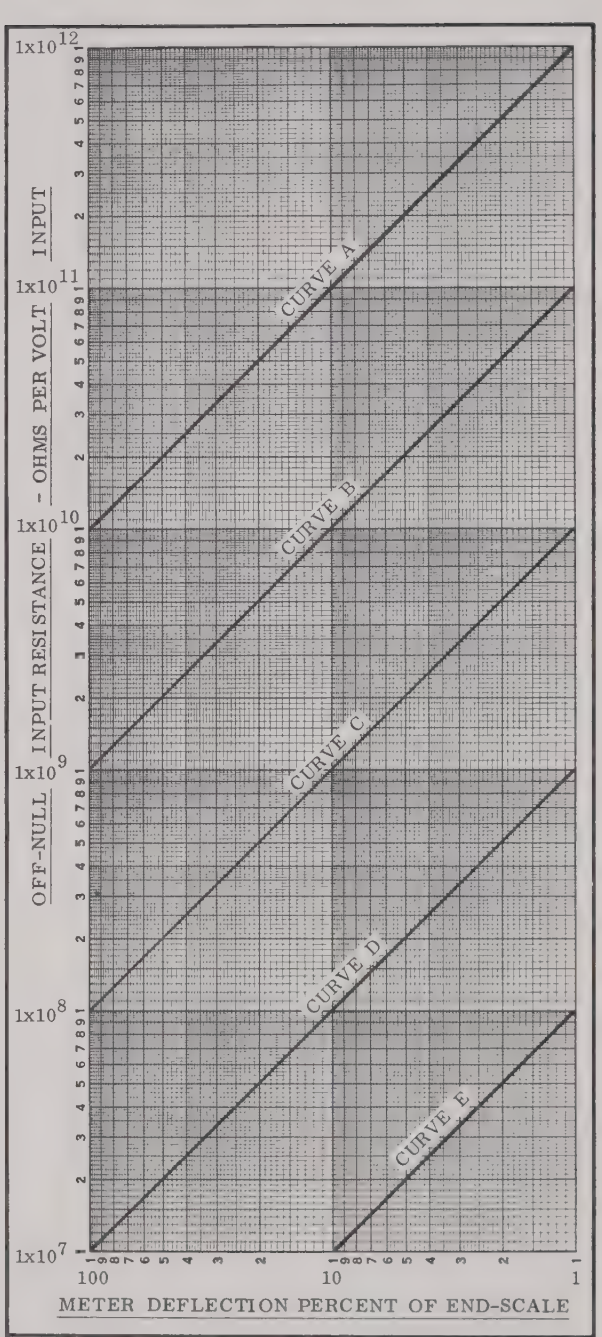

RANGE	NULL SENS	CURVE	RANGE	NULL SENS	CURVE
1000	100	E	10	1	C
	10	D		.1	B
	1	C		.01	B
	.1	B		.001	A
100	10	D	1	.1	B
	1	C		.01	A
	.1	B		.001	A
	.01	B		.001	A

Figure 2-4. OFF-NULL INPUT RESISTANCES

currents should be avoided as they generate voltages that degrade measurement accuracy. To prevent these ground loop currents when the system being measured is grounded, remove the shorting strap between the LO INPUT terminal and the ground terminal or, if your instrument contains the -01 option, operate the BAT OPR/LINE ISOL position of the POWER switch.

2-20. USE OF SHORTING LINK

2-21. The ground INPUT terminal is directly connected to the chassis of the instrument. Consequently, whenever measurement of a voltage having a reference other than ground is performed, the shorting link between the LO INPUT terminal and the ground terminal must be removed.

2-22. DC COMMON MODE VOLTAGES

2-23. DC common mode measurement errors are caused partly by leakage currents through ground loops. Great care has been taken in the design and construction of this instrument to isolate the circuitry from chassis ground. Accurate dc measurements can be made with the Model 891 in the presence of common mode voltages of up to 500 volts dc. The dc common mode rejection is at least 120 db or one microvolt of error per common mode volt up to 70% relative humidity above 25°C. If the common mode voltage is greater than 50 volts, the measurement should be made several minutes after hookup for best accuracy due to the time required to charge the stray capacitance through the extremely high leakage resistance to ground.

2-24. OPERATION ON THE TVM MODE

2-25. The Model 891 can be used to make dc voltage measurements from ±10 microvolts to ±1,100 volts dc with an accuracy of ±3% of the selected range. To operate the instrument as a transistorized voltmeter (TVM), perform the operations described in the Preliminary Operating Procedures (paragraphs 2-9 and 2-10) and proceed as follows:

a. Connect the circuit to be measured between the HI and LO INPUT terminals. If one side of the voltage source being measured is grounded, connect the grounded side to the LO INPUT terminal.

b. Place the RANGE switch to the lowest voltage range possible while maintaining an on-scale meter pointer deflection. The meter pointer indication multiplied by the RANGE switch position is the value of the measured voltage. Left or right deflection of the meter pointer corresponds to a negative or positive polarity of the measured voltage, respectively.

c. Measurement of voltages from 0.02 millivolts to 0.1 volts dc is accomplished on respective NULL SENS positions of .001 through .1. In this application the RANGE switch is set to 1 and the Readout dials to .00000. The resulting meter indication multiplied by the NULL SENS switch position is the value of the measured voltage. Left or right deflection of the meter pointer corresponds to a negative or positive polarity of the measured voltage, respectively.

2-26. OPERATION AS A DIFFERENTIAL VOLTMETER

2-27. An improved accuracy of up to 250 times over that of the TVM mode is obtained when the instrument is operated as a dc differential voltmeter. To operate the instrument as a dc differential voltmeter, proceed as follows:

a. Determine the approximate value and polarity of the measured dc voltage by performing the TVM mode measurements described in paragraphs 2-25 and 2-26.

b. Place the POLARITY switch to the respective polarity observed in the TVM mode measurement and set the Readout dials to the TVM measurement value.

CAUTION!

Whenever the NULL SENS switch is placed to a position other than TVM, a voltage corresponding to the Readout dial indication appears between the LO and HI INPUT terminals. A personnel hazard does not exist as the source resistance is 90 megohms on the 100 and 1000 volt ranges. However, this potential can damage high input impedance semiconductor devices such as field effect transistors.

c. Place the NULL SENS switch to successively higher null sensitivity positions while adjusting the Readout dials to obtain a center-zero meter pointer indication.

d. The Readout dial digit indication directly corresponds to the magnitude of the measured dc voltage and the POLARITY switch position indicates the polarity of the measured voltage.

2-28. OPTIONAL RECORDER OPERATION

2-29. Instruments equipped with the -02 option provide an isolated recorder output voltage which is available at the rear panel terminals. The recorder output dc voltage is adjustable from zero to ±0.2 volts dc for a full-scale meter deflection and is used to drive a zero-center recorder. To utilize the recorder output, proceed as follows:

a. Connect the recorder to the rear panel RECORDER OUTPUT terminals.

Note!

The LO RECORDER OUTPUT terminal is connected to chassis ground. If a ground reference is undesirable, operate the Model 891 on battery power with its power cord disconnected from line power.

b. Turn the recorder on and place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	10

NULL SENS	1
POLARITY	+
Readout dials	1.00 00

c. Connect the shorting link between the front panel LO and HI INPUT terminals and adjust the RECORDER OUTPUT level control for the desired full-scale left indication on the recorder. The left full-scale meter excursion point on the recorder is now plotted and from this information the full-scale right point can be determined.

d. Remove the shorting link from between the LO and HI INPUT terminals and proceed with the desired measurement.

2-30. APPLICATIONS

2-31. The Model 891 DC Differential Voltmeter, because of its high input impedance and calibrated meter end-scale, can be used in many special applications. These applications, to mention a few are; measurement of voltage excursions about a nominal, measurement of extremely high resistances, and as a null detector. The following applications are general in nature and may be further expanded upon as you become more familiar with the use of your instrument.

2-32. MEASUREMENT OF VOLTAGE EXCURSIONS ABOUT A NOMINAL

2-33. The instrument can be used to measure voltage excursions about a nominal value whenever the instrument is operated as a dc differential voltmeter. The meter end-scale is calibrated to be a known percentage of the Readout dial settings determined by the null sensitivity selected with the NULL SENS switch. For example, by selecting a null sensitivity of .1 with the NULL SENS switch on any voltage range, a full-scale left or right meter deflection represents ±1.1% of the Readout dial settings. To measure voltage excursions about a nominal, proceed as follows:

a. Perform the Preliminary Operating Procedures of paragraphs 2-9 and 2-10.

b. Determine the nominal value of the dc voltage being measured, using the TVM mode of the Model 891. Refer to paragraphs 2-24 and 2-25 for TVM mode operating procedures.

c. Place the Readout dials to the nominal value measured in step b and select the desired full-scale meter sensitivity with the NULL SENS switch.

d. The voltage excursions about the Readout dial digit indication can now be determined by the left or right meter deflection.

2-34. OPERATION AS A NULL DETECTOR

2-35. The Model 891, because of its high input impedance on the differential mode, can be used to monitor small voltage differences in bridge circuits, potentiometers, and other measuring devices. In most of these applications the circuits are adjusted for zero deflection or a null on the Model 891. Equipment connections for two types of null detector configurations are illustrated in Figure 2-5 and 2-6. To operate the instrument as a null detector, perform the preliminary operating procedures described in paragraphs 2-9 and 2-10 and proceed as follows:

a. Select the desired equipment application as illustrated in Figure 2-5 and 2-6 and make the appropriate equipment connections.

b. Place the Model 891 NULL SENS switch to the desired null detector sensitivity and adjust the circuit being measured for a zero or null deflection on the Model 891 meter.

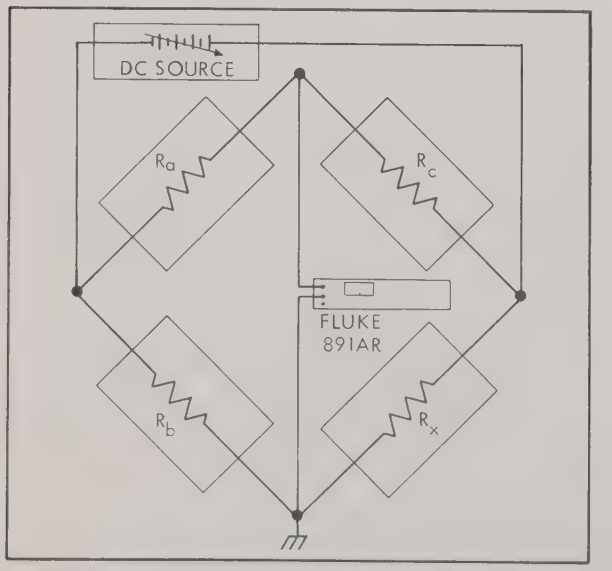

Figure 2-5. BRIDGE DETECTOR - FLOATING SUPPLY

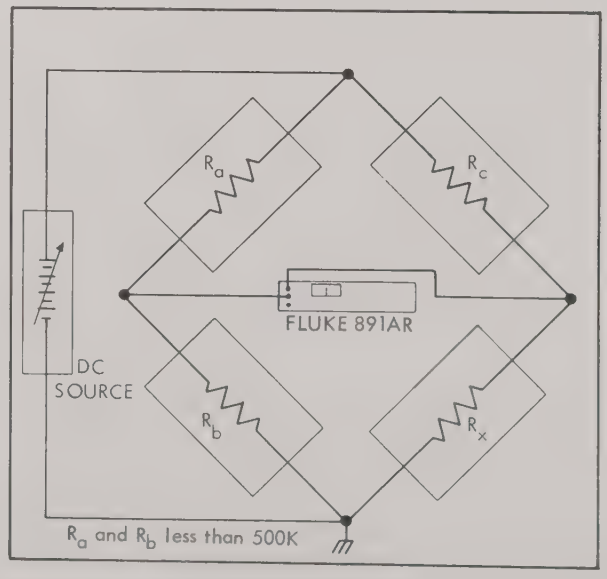

Figure 2-6. BRIDGE DETECTOR - FLOATING NULL DETECTOR

2-36. MEASUREMENT OF HIGH RESISTANCES

2-37. The Model 891 can be used as a megohmmeter for rapid measurements of high resistance from 10 to 10^6 megohms with a typical accuracy of ±5%. To measure high values of resistance, perform the preliminary operating procedures described in paragraph 2-9 and 2-10 and proceed as follows:

a. Place the RANGE switch to 10 and the NULL SENS switch to .01. If the estimated value of the resistance to be measured is more than 10^{10} ohms, place the NULL SENS switch to .001.

b. Connect the unknown resistance between the LO and HI INPUT terminals. Use short isolated leads to prevent measuring the leakage resistance between the leads.

c. Rotate the Readout dials to obtain a meter deflection of -1 and use the following calculations to determine the value of the unknown resistance.

$$R_X = \left(\frac{E_{ro}}{E_m} - 1\right) R_{nd}$$

R_X = Unknown resistance

R_{nd} = Null detector input resistance of 10 megohms for NULL SENS settings of .01 and .001 and 100 megohms on all other settings.

E_{ro} = Readout dial voltage

E_m = Meter deflection in volts (proportional to selected NULL SENS)

2-38. OVERLOAD PROTECTION

2-39. The Model 891 input circuitry is designed to withstand up to a 1,200 volt input on any voltage range. Should the instrument be subjected to prolonged voltage overloads, excessive dissipation in the protective devices will result which cause generation of thermal voltages. These thermal voltages will take several minutes to subside after the overload is removed.

SECTION III

THEORY OF OPERATION

3-1. INTRODUCTION

3-2. The theory of operation for the Model 891 DC Differential Voltmeter is contained in this section of the manual. A block diagram analysis is used to functionally describe the overall instrument operation followed by a detailed circuit description of each particular block section. A block diagram of the instrument is illustrated in Figure 3-1 and the schematic diagram is located at the rear of the manual.

3-3. OVERALL BLOCK DIAGRAM ANALYSIS

3-4. INTRODUCTION

3-5. The Model 891 circuitry is composed of a 1.1, 11, 110 and 1100 VDC reference supply, a Kelvin-Varley divider, an input divider, a null detector, a meter, and an optional recorder output. These circuits are interconnected by various switching arrangements when performing the desired conventional (TVM) or differential (NULL) dc voltage measurements.

3-6. CONVENTIONAL (TVM) VOLTMETER MODE

3-7. When the instrument is used as a conventional voltmeter (TVM), the instrument circuitry is connected as illustrated in Figure 3-1. The input divider is connected across the input terminals of the instrument, providing a constant 100 Megohm input impedance on all ranges. With a full-scale input voltage applied to the input terminals of the instrument, the selected tap of the input divider provides an input voltage of ±1.0 millivolt dc to the input of the null detector which drives the front-panel meter. The gain of the null detector is precisely controlled by negative feedback to produce a full-scale meter deflection for any full-scale input voltage applied to the instrument. For positive or negative voltage measurements in the TVM mode, the POLARITY switch should be in the positive (+) position,

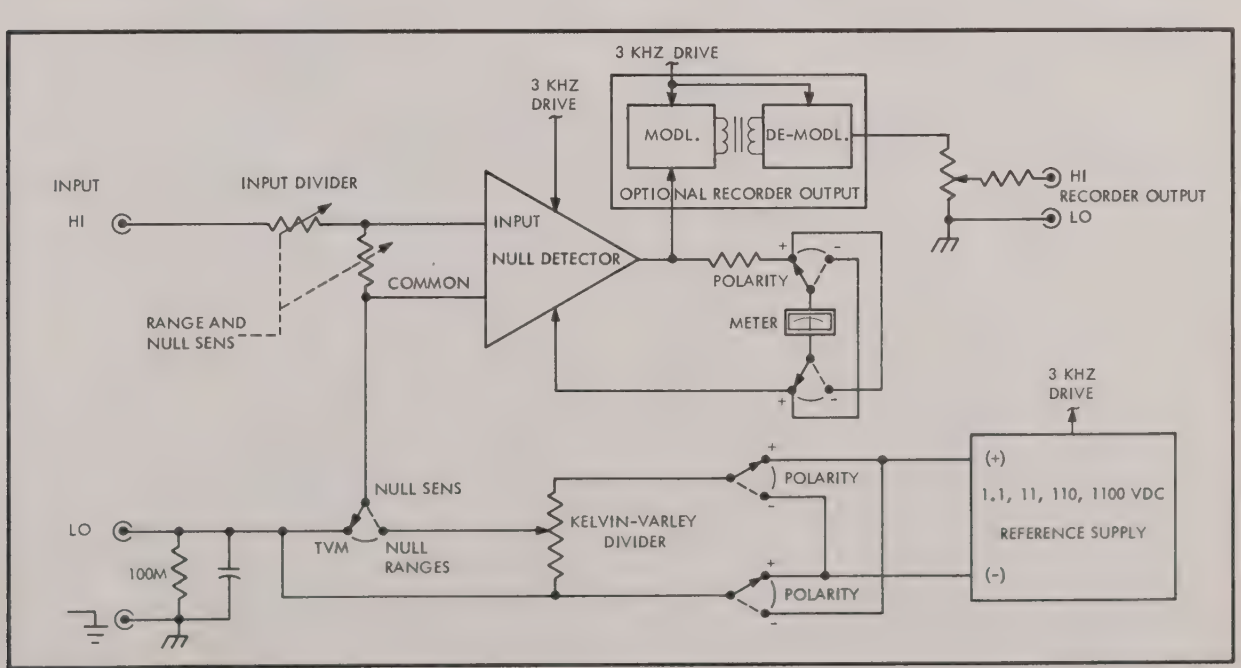

Figure 3-1. MODEL 891A/AR BLOCK DIAGRAM

thus allowing the panel meter to indicate the magnitude and polarity of the measured voltage.

3-8. DIFFERENTIAL (NULL) VOLTMETER MODE

3-9. By placing the NULL SENS switches of Figure 3-1 to the NULL RANGES position, the instrument circuitry is connected as a dc differential voltmeter. In this mode of operation the NULL SENS switch selects a suitable resistance value from the input divider resistors that determines the instrument full-scale sensitivity and applies the output of the Kelvin-Varley divider to the common input of the null detector. The dc input voltage applied to the instrument is then compared to the Kelvin-Varley divider output voltage by the null detector and any resulting difference used to drive the zero-center meter. Any + right or - left meter deflection corresponds to an input voltage below or above the Kelvin-Varley divider output voltage, respectively. For positive or negative voltage measurements, the meter terminals and Kelvin-Varley divider input voltage polarity can be reversed through the contacts of the POLARITY switch.

3-10. RECORDER OUTPUT

3-11. The optional recorder output provides isolation between the null detector output and the recorder output. The null detector output voltage is modulated by a 3 kHz drive signal derived from the reference supply. The resulting signal is then transformer coupled to the demodulator which is driven at the same 3 kHz rate. The resulting synchronously demodulated dc voltage is applied through a variable resistor to the recorder output terminals. The variable resistor provides adjustment of the full-scale recorder output level.

3-12. INDIVIDUAL CIRCUIT DESCRIPTION

3-13. INTRODUCTION

3-14. The circuitry of the Model 891 is composed of a power supply/battery charger, a reference supply comprised of a reference amplifier and a reference inverter, a null detector, a Kelvin-Varley divider, an optional recorder output, a meter, input divider resistors, a RANGE switch, a NULL SENS switch, a POLARITY switch, and a POWER switch. These circuits will be described in detail using simplified circuit diagrams and the functional schematic diagram.

3-15. POWER SUPPLY/BATTERY CHARGER

3-16. The input power transformer T1 receives 115 or 230 volts ac through the contacts of the POWER switch S2BR-1 and S2BR-2. The primary winding of T1 is constructed in such a manner as to allow the instrument to be operated from 115 volts ac, windings in parallel, or 230 volts ac, windings in series. Switch S5 provides the desired 115/230 volt ac power connections. Fuse F1 protects the instruments circuitry from overloads. The secondary winding of T1 has four taps which supply ac voltages to the instrument's power supply and battery charger. The ac voltages present at pins 8 and 10 are full-wave rectified by diodes CR1, CR2, and the capacitors C1 and C2 located in the A2 Reference Amplifier Assembly.

3-17. On the Model 891 -01 version instruments, the ac voltage present at pins 9 and 11 of T1 is full-wave rectified by diodes CR3 and CR4 and applied across R9 and BT1. When the POWER switch S2 is placed to the BAT CHG position, the contacts of S2BF bypass resistor R9 providing maximum charging current to the rechargeable battery pack of BT1. The lamp DS1 functions as a ballast, limiting the charge current to the optimum value for rapid charging. Resistor R9 is unbypassed in all other positions of S2BF, providing a trickle-charge for the battery pack in the LIN OPR position of the POWER switch. Checking of the battery pack voltage level is obtained when the POWER switch S2 is placed to the BAT CHK position. Switches S2BR-1, S2BR-2, S2BF, S2AF, and S2AR provide the necessary switching action, removing any ac input voltage and placing the meter M1 in series with A2R4. The meter and A2R4 are then in parallel with the series-pass transistor A2Q2, thus providing a check of the battery pack under the actual operating load condition.

3-18. THE REFERENCE SUPPLY

3-19. GENERAL. Reference voltages of 1.1, 11, 110, and 1100 volts dc, upon which the stability of the instrument relies, and a 3 kHz output signal are produced by the Reference Supply. The circuitry of the Reference Supply consists of two regulator stages and a dc-dc converter. A block diagram of these circuits is illustrated in Figure 3-2.

3-20. BLOCK DIAGRAM DESCRIPTION. The dc to dc converter regulator provides a pre-regulated voltage to the zener current regulator and a regulated voltage to the dc to dc converter. The zener current regulator provides a closely regulated dc current for the reference zener diodes of CR3 and CR4 from which the 1.1 and 11 volt dc reference voltages are derived. These same zener diodes also provide a stable reference voltage for the dc to dc converter comparison amplifier. The dc to dc converter produces the 110 and 1100 volt dc reference voltages and a 3 kHz drive signal. The reference divider junction provides a sample of the 110 and 1100 volt dc reference voltage to the dc to dc converter comparison amplifier which controls the input dc voltage to the dc to dc converter. Consequently, a stable 110 or 1100 volt dc reference voltage related to the zener reference voltage is obtained. The 3 kHz drive signal is used to produce operating voltages for the null detector and optional recorder output circuits.

3-21. CIRCUIT DESCRIPTION. The unregulated dc voltage from the power supply or the dc output voltage of the battery pack is applied to terminal 3 of the Reference Amplifier Assembly. This voltage is used to provide an input dc voltage to the dc to dc converter regulator circuitry. Initial turn-on of the dc to dc converter regulator circuitry is accomplished with the circuitry comprised of A2R1, CR1, CR2, CR5 and Q4. The voltage developed at the junction of R1 and CR5 forward biases CR1 and transistor Q4. Conduction of Q4 is initially through the low impedance path of CR2, thus providing a dc input voltage to the zener current regulator. The resulting zener reference voltage biases the comparison amplifier circuitry of Q3, Q5, and Q6 into conduction. As the dc to dc converter regulator

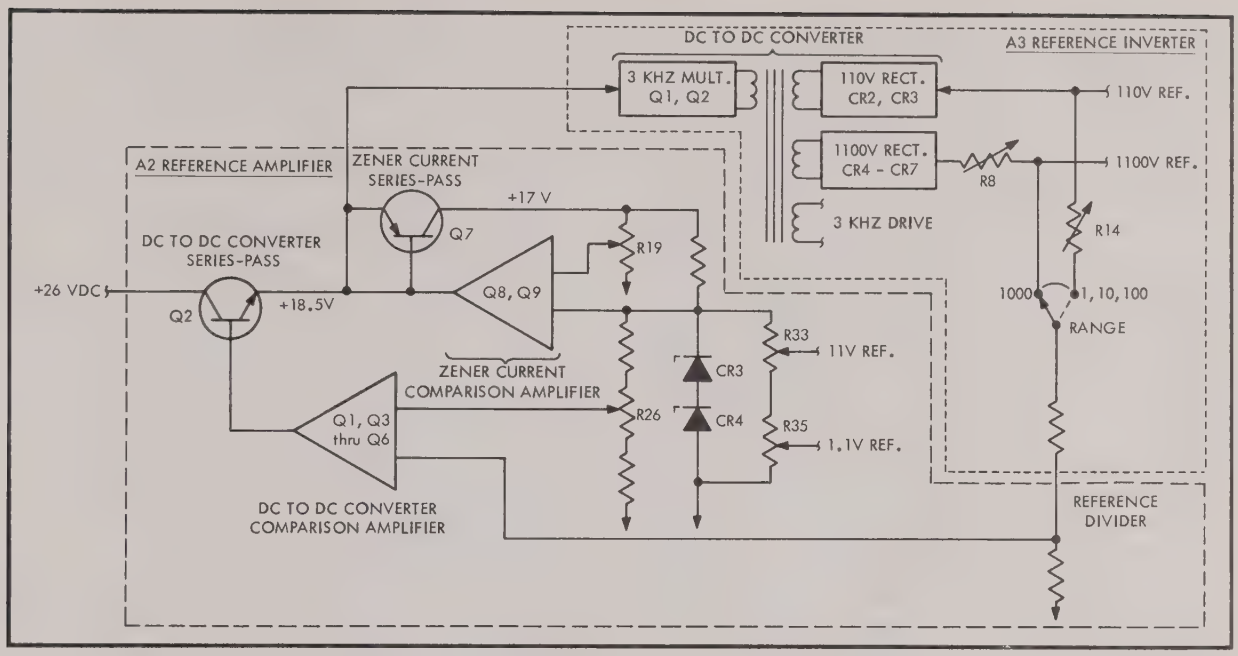

Figure 3-2. REFERENCE AMPLIFIER/REFERENCE INVERTER - SIMPLIFIED

output approaches the nominal +18.5 volt dc level, diodes CR1 and CR2 are reversed biased, disconnecting the turn-on circuitry from the regulator circuitry. Transistor Q4 then functions as a buffer amplifier between the series-pass driver Q1 and the comparison amplifier output from Q5.

3-22. The zener current regulator circuitry is composed of transistors Q7 through Q9, zener diodes CR3 and CR4 and associated resistors. Transistor Q7 is the series-pass element while resistor R13 provides starting current to initially turn-on the reference elements of CR3 and CR4. The resistive network of R17 through R19 form a divider across the output of the zener current regulator and provides a sample of its output voltage to the base of Q9. Resistor R19 provides adjustment of the output voltage of the zener current regulator. Transistors Q8 and Q9 comprise a differentially connected comparison amplifier with the zener voltage of CR3 and CR4 providing a reference at the base of Q8. This reference voltage has a very low temperature coefficient from which the instrument derives its measurement stability. The output of the differential connected comparison amplifier controls the conduction of the series-pass transistor Q7 and determines the output voltage of the zener current regulator. This output voltage establishes a fixed current through the zener diodes of CR3 and CR4. Two resistive dividers comprised of R26 through R31 and R32 through R36 are connected across the zener diodes of CR3 and CR4. The divider composed of R26 through R31 is used to provide a reference voltage to the dc to dc converter comparison amplifier Q3. The divider composed of R32 through R36 is used to produce the 1.1 and 11 volt dc reference voltage applied to the Kelvin-Varley divider on the 1 and 10 volt ranges of the instrument. Variable resistor R26 provides adjustment of the dc to dc converter regulator output voltage while R33 and R35 provide adjustment of the 1.1 and 11 volt dc reference voltages.

3-23. The dc to dc converter regulator circuitry is comprised of transistors Q1 through Q6 and associated resistors and capacitors. Transistor Q2 is the series-pass element whose conduction is controlled by the series-pass driver Q1 and the two differentially connected comparison amplifiers of Q3, Q5 and Q6. Transistor Q3 receives a reference voltage through R25 from the previously described zener current regulator. A sample of the Reference Inverter Assembly dc output voltage present at terminal 8 is developed across R21 and R22 and applied to the other base Q3. Transistor Q3 compares the sample of the Reference Inverter Assembly output voltage to the zener reference voltage and amplifies any resulting difference. Transistors Q5 and Q6 comprise the second stage of the comparison amplifier and amplify any resulting voltage difference detected by Q3. The output of Q5 is applied to the series-pass driver Q1 through the common-base buffer Q4. The series-pass driver controls the base current of Q2 which in turn determines the output voltage of the dc to dc converter regulator and consequently, any resulting output voltage of the Reference Inverter Assembly.

3-24. The output voltage of the dc to dc converter regulator is applied to terminal 3 of the Reference Inverter Assembly. This voltage is used to provide operating voltages for the 3 kHz transformer coupled multivibrator composed of Q1, Q2 and T1. A low-pass filter comprised of R1, C1 and C2 provides decoupling of any 3 kHz variations that could be applied back to the reg-

ulator circuitry. Resistor R2 provides the dc current to the bases of Q1 and Q2 necessary to initially start the multivibrator. Diode CR1 functions as a clamper and capacitor C1 bypasses CR1 to provide a low resistance source to the bases of Q1 and Q2. Upon application of an input dc voltage, assuming that Q1 will conduct harder than Q2, the collector of Q1 clamps the upper end of the center-tapped winding of T1 to zero volts dc. The base-drive winding associated with R3 applies a positive going signal to the base of Q1, driving the transistor into saturation. The lower end of the center-tapped winding is driven to +36 volts dc by autotransformer action causing the base-drive winding associated with R4 to apply a negative going signal to the base of Q2 cutting-off the transistor. This condition will persist for a period proportional to the flux capacity of the transformer core, which in this case is approximately 150 microseconds. At the end of this period, the voltages across the transformer windings are reversed by the collapsing lines of flux, driving transistor Q1 into cut-off and Q2 into saturation, thus establishing the second half-cycle of the 3 kHz signal. The resulting 3 kHz signal is then coupled to the secondary of T1 where it is used to provide drive signals and the 110 and 1100 dc reference voltages. Variable resistor R5 provides a means of reducing any capacitive coupling effects to the winding in the shield of T1.

3-25. The secondary signals of T1 that are available at terminals 6 through 10 of the Reference Inverter Assembly are used to provide drive signals to the Null Detector and optional Recorder Output circuitry. Two full-wave voltage doublers in the remaining secondary windings of T1 product the 110 and 1100 volt dc reference voltages used by the Kelvin-Varley divider. These voltages are used on the 100 and 10000 voltage ranges of the instrument. The full-wave voltage doubler composed of CR3, CR4, R6 and C4 through C6 produces the 110 dc reference voltage available at terminal 2 of the Reference Inverter Assembly. Resistor R14 provides adjustment of this reference voltage. The full-wave voltage doubler composed of CR4 through CR7, R7 through R11 and C7 through C9 produces the 1100 volt dc reference voltage available at terminal 1 of the Reference Inverter Assembly. Resistor A2R26 provides adjustment of the resulting input voltage. A resistive divider comprised of R9 through R11 provides a load for the voltage doubler when this reference voltage is not being used and functions as a bleeder when power is removed from the circuit. Regulation of the 110 and 1100 volt dc reference voltage is accomplished by feeding a sample of the selected reference voltage back to the dc to dc converter regulator circuitry. Switches S1AR-1 and S1AR-2 select the desired sections of a resistive divider composed of R12 through R16 and the resistors R21 and R22 located in the Reference Amplifier Assembly. This sample of the output reference voltage controls the level of the input voltage applied to the 3 kHz multivibrator which determines the level of the secondary voltages of T1 and in turn controls the output level of the full-wave voltage doublers used to develop the 110 and 1100 volt dc reference voltages.

3-26. KELVIN-VARLEY DIVIDER

3-27. GENERAL. Continuous division of the reference supply voltages, while presenting a constant load to the reference supply, is accomplished with a Kelvin-Varley divider. The divider is composed of matched fixed resistors R1 through R34, trimmers R35 and R36, potentiometer R37 and rotary switches S6 through S8.

3-28. CIRCUIT DESCRIPTION. Rotary switch S6 controls the first order division of the reference supply voltage. The first resistive divider of R1 through R12 is arranged in 12 equal parts of 100K ohms. The contacts of S6 connect the 200K ohm effective resistance of the second divider in parallel with the selected two parts of the first divider, thus producing a selected resistance value of 100K ohms. This selected resistance value is in series with the remaining ten 100K ohm parts of the first divider and presents a constant load resistance of 1.1M ohms to the reference supply. There are eleven equal voltage steps available from the first divider which can be selected by the rotary switch S6. Since the reference supply output voltage is either 1.1, 11, 110, or 1,100 volts dc, the rotary switch S6 is calibrated in 0.1, 1, 10, or 100 volt increments.

3-29. The second, third, and fourth order divisions of the reference supply voltage are provided by the corresponding resistive dividers R13 through R23, R24 through R34, and potentiometer R37. The second and third order dividers function in a manner similar to the first order divider with their associated switches S7 and S8 performing the desired connections. Each of these dividers are composed of 11 equal value resistors, thus providing ten equal divisions of the preceding divider output voltage. Potentiometer R37 comprises the fourth order divider which operates on the same principle as the preceding dividers but provides a continuously variable output voltage at its wiper. Resistors R35 and R36 provide the necessary trimming resistance for the fourth order divider.

3-30. The voltage appearing at the wiper of R37 is the output voltage of the Kelvin-Varley divider. This voltage directly corresponds to the readout dials digit value for the particular reference supply voltage being used. The RANGE switch S1AF2 selects the appropriate reference supply voltage of 1.1, 11, 110, or 1100 volts dc corresponding to the 1, 10, 100, or 1000 volt ranges of the instrument. The NULL switch S3AF applies the Kelvin-Varley output voltage to the null detector common on the various null ranges of the instrument. Whenever the instrument is operated on the TVM mode, S3AF disconnects the output of the Kelvin-Varley divider from null detector common and connects the low input common to null detector common. Reversal of the Kelvin-Varley output voltage polarity is provided by the POLARITY switches S4AF1 and S4AF2.

3-31. NULL DETECTOR

3-32. GENERAL. The Null Detector is a chopper stabilized dc amplifier using an insulated field effect transistor as a chopper. DC operating voltages for the amplifier are produced from a 3 kHz drive signal supplied by the dc-to-dc converter, thus providing maximum isolation for the amplifier circuitry free from power line frequency variations and harmonics. Circuitry of the Null Detector consists of a power supply, an 84 Hz multivibrator, a chopper driver, a chopper, a low-

pass filter, a carrier amplifier, a synchronous demodulator and a meter. A block diagram of these circuits is illustrated in Figure 3-3.

3-33. BLOCK DIAGRAM DESCRIPTION. All operating voltages for the Null Detector circuitry are provided by the power supply comprised of half-wave rectifiers CR3 and CR4. These ±6.8 volt dc voltages are produced from a 3 kHz drive signal developed in the Reference Inverter. The 84 Hz multivibrator provides chopper and demodulator drive voltages at a rate asynchronous to the power line frequency. Input dc voltages applied to the null detector input are passed through a low-pass filter to reduce any normal mode interference and then squarewave modulated at an 84 Hz rate by the chopper Q1. The chopper driver Q11 provides an 84 Hz drive signal to the gate of the chopper and a cancellation signal to the drain. This cancellation signal is 180° out of phase with the chopper gate signal and provides cancellation of any spikes generated internally in the chopper Q-1. The carrier amplifier is comprised of five amplifier stages whose gain is controlled by negative emitter feedback. Any amplified ac signals are then demodulated by the synchronous demodulator Q8 which is driven in synchronism with the chopper Q1. The resulting dc voltage is then used to drive the front-panel meter to indicate both the polarity and magnitude of the input voltage on the TVM mode or the off-null magnitude of the NULL mode. Negative feedback through the meter to the null detector input determines the overall gain of the null detector.

3-34. CIRCUIT DESCRIPTION. The 3 kHz drive signal applied to terminal 8 of the Null Detector Assembly is half-wave rectified to provide ±6.8 volt dc operating voltages for the null detector circuitry. Diodes CR3 and CR4 along with C17 through C19 and R33 and R34 form the half-wave rectifiers used to produce the dc operating voltages. Synchronous drive voltages for the null detector circuitry are provided by the 84 Hz collector-coupled multivibrator comprised of Q9, Q10, C14 and R23 through R26. The 84 Hz collector signal of Q9 is used to provide the demodulator drive for Q8. Transistor Q11 supplies an 84 Hz squarewave from its emitter to the gate of Q1. This signal is derived from the collector of Q10 in the 84 Hz multivibrator. Resistor R27 provides adjustment of the squarewave signal amplitude applied to the gate of Q1. The collector signal of Q11 is coupled by C5 and C4 to the output of Q1 where it is used to null out any spikes internally generated in Q1. Adjustment of this compensating signal is provided by potentiometer R31 located in the collector circuit of Q11.

3-35. The resulting squarewave signal present at the junction of R3 and Q1 is coupled by C3 to the input stage of the carrier amplifier. This signal is proportional to the difference between any feedback voltage from the meter circuit and the input voltage at terminal 2. The carrier amplifier is comprised of four common-emitter amplifiers of Q2 through Q5 and complimentary push-pull output amplifier of Q6 and Q7. Negative emitter feedback through the network composed of R10 and R15 through R18, C8 and C11 controls the gain of the carrier amplifier and consequently the null detector input impedance. Variable resistor R17, located in the feedback circuit provides adjustment of this input impedance. The emitter signal of Q6 and Q7 is coupled by C12 and R20 to the synchronous demodulator Q8. Transistor Q8 is driven in synchronism with the chopper Q1 and is operated in the inverse mode to secure minimum saturation voltage. The resulting demodulated signal is filtered by the low-

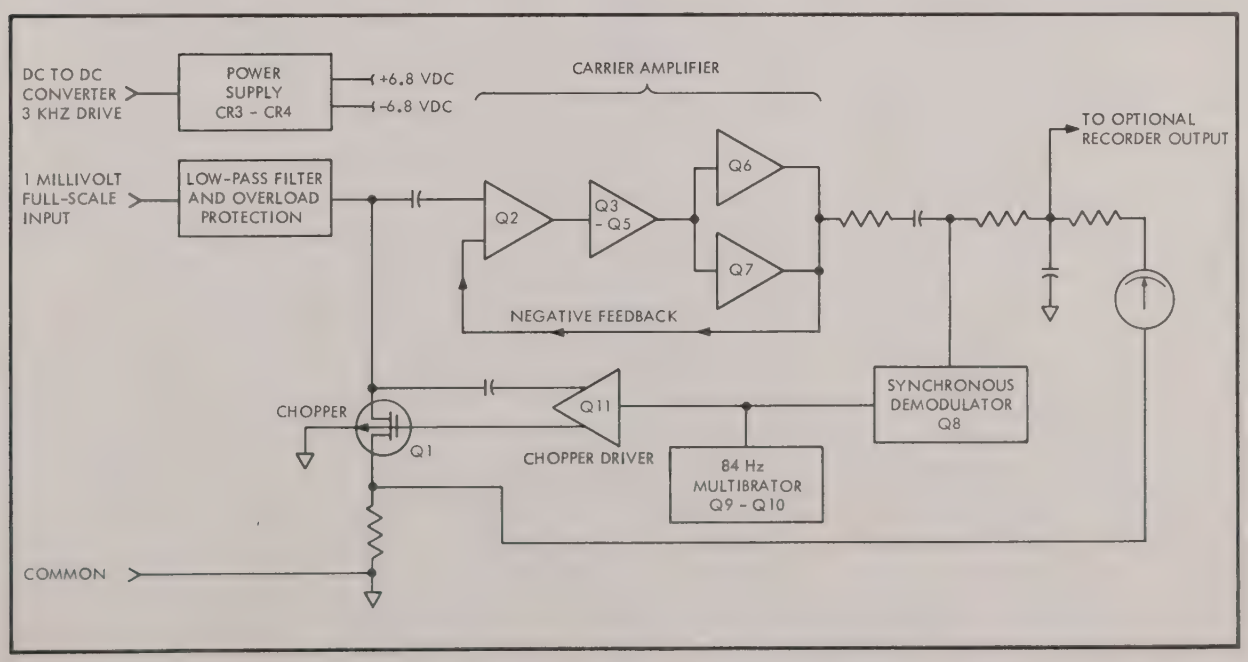

Figure 3-3. NULL DETECTOR BLOCK DIAGRAM

pass filter comprised of R21 and C13 and applied to terminal 5 for use in the optional Recorder Output circuitry. This same voltage signal is applied through R22 and the meter circuit to Q1 as a negative feedback signal to control the gain of the null detector. Any current flow through this network causes a corresponding deflection on the meter proportional to the magnitude of the null detector input voltage.

3-36. INPUT DIVIDER

3-37. GENERAL. Full scale input voltages to the instrument on either mode of operation are reduced to one millivolt (±10% overranging) at the input of the null detector by the Input Divider circuitry.

3-38. CIRCUIT DESCRIPTION. The Input Divider is composed of seven series connected resistors R1 through R7 that have a total resistance of 100.1 megohms. When the instrument is operated in the TVM mode, the input impedance is a constant 100 megohms on all voltage ranges and the RANGE switch is used to select the desired tap of the divider network. When the instrument is operated on the differential mode, the NULL and RANGE switches select various taps on the input divider network to provide an input impedance of 10 megohms on the .001 and .01 NULL switch positions, and 100 megohms on all other NULL switch positions.

3-39. OPTIONAL RECORDER OUTPUT

3-40. GENERAL. Instruments equipped with the -02 Option are provided with a RECORDER OUTPUT that is isolated from the null detector circuitry. The Recorder Output circuitry is composed of a modulator and demodulator separated by an isolation transformer. Each circuit is driven at a 3kHz rate by a signal derived from the Reference Inverter Assembly.

3-41. CIRCUIT DESCRIPTION. The dc input voltage applied to terminal 1 of the Recorder Output Assembly is modulated at a 3kHz rate by alternate conduction of Q1 and Q2. Conduction of Q1 and Q2 is controlled by the 3kHz drive signal applied to terminal 3. Transformer T1 couples the resulting signal to its secondary winding where demodulation is accomplished by alternate conduction of Q3 and Q4. Conduction of Q3 and Q4 is controlled by the 3kHz drive signal applied to terminal 4 The resulting dc voltage is then filtered by C1 and R10. Variable resistor R10 provides adjustment of the RECORDER OUTPUT voltage.

SECTION IV

MAINTENANCE

4-1. INTRODUCTION

4-2. This section of the manual contains the information necessary for you to maintain your Model 891 DC Differential Voltmeter. The information is arranged under headings of "SERVICE INFORMATION, DISASSEMBLY INSTRUCTIONS, GENERAL MAINTENANCE, PRECALIBRATION AND TROUBLESHOOTING, and CALIBRATION PROCEDURES." A list of the test equipment required for maintenance of this instrument is contained in Figure 4-1. If the recommended test equipment is not available, other instruments having the equivalent specifications may be substituted.

4-3. Your instrument was completely tested and aligned before leaving the factory and calibration should not be necessary during the first year of operation. However, should you wish to check the instrument accuracy against most of the specifications contained in Section I, the information contained in the Calibration Procedures may be used. The Calibration Procedures are arranged in such a manner that by disregarding the adjustment information they may be used as Instrument Performance Checks.

4-4. We recommend that you thoroughly read and understand this section of the manual before attempting any maintenance on your instrument.

4-5. SERVICE INFORMATION

4-6. Each instrument manufactured by the John Fluke Mfg. Co., Inc. is warranted for a period of one year upon delivery to the original purchaser. Complete warranty information is contained in the Warranty page located at the rear of this manual.

4-7. Factory authorized calibration and repair service for all Fluke instruments are available at various world wide locations. A complete list of factory authorized service centers is located at the rear of this manual. If requested, an estimate will be provided to the customer before any repair work is begun on instruments beyond the warranty period.

EQUIPMENT NOMENCLATURE	SPECIFICATIONS	RECOMMENDED INSTRUMENT
DC Voltage Calibrator	0 - 1000 volts dc with an accuracy of 0.002%	Fluke Model 332B
Oscilloscope	Sweep range: 50 usec/cm Vertical sensitivity: 5 mv/cm	Tektronix 531 with Type L Plug-In Unit
Probe	Passive 100:1	P6007
Multimeter	Ranges: AC - 0 to 100 MA 0 to 300 VAC DC - 0 to 100 MA 0 to 1000 VDC Resistance - 0 to 100 Megohms Accuracy: AC ±1% DC ±0.1%	Fluke Model 853A
Autotransformer	0 - 130 VAC at up to 3 amperes	General Radio Model W5MT
Differential Voltmeter	Range: 0 to 1000 VDC with an accuracy of ±0.06% Input impedance - Infinite at null	Fluke Model 895A
Resistor	10 Megohms ±1%	

Figure 4-1. REQUIRED TEST EQUIPMENT

4-8. MAINTENANCE ACCESS

4-9. THE MODEL 891A DISASSEMBLY INSTRUCTIONS

4-10. The following procedure is to be used to gain access to various parts of the Model 891A:

a. Remove the eight top dust cover attaching screws and remove the dust cover from the instrument.

b. Remove the two screws from the circuit board retaining strap located across the center of the instrument and remove the strap. This allows access to the Null Detector, Reference Amplifier and Reference Inverter printed circuit boards and NULL SENS switch S3.

c. Remove the top front and rear trim strip attaching screws and remove the trim strips from the instrument. This allows access to the front panel binding posts, components on the POWER switch S2, and (if the -01 option is installed) DS1.

Note!

The printed circuit boards are inserted in slide holders and will protrude approximately three inches when the instrument is to be inverted, place a strip of masking tape across the chassis of the instrument to hold the printed circuit boards in place.

d. Remove the eight lower dust cover attaching screws and remove the dust cover from the instrument. This allows access to the Kelvin-Varley Divider Assembly.

e. Remove the lower front and rear trim strip attaching screws and remove the trim strips from the instrument. This allows access to Kelvin-Varley switches S6 through S8 and potentiometer R37.

f. Remove the left and right knurled knobs from the handle assembly and remove the handle from the instrument.

g. Remove the eight left and right rear panel attaching screws and slide the rear panel free from the instrument. This allows access to the power transformer T1, CR1, CR2 and any option components.

h. Loosen the front panel control knob allen set screws and remove the knobs from the front panel. Loosen the two screws securing the shutter cabling to the front panel and then remove the nuts on the front panel binding posts and remove the terminal clips from the binding posts. Remove the left and right front panel attaching screws and slide the front panel forward until free of the instrument. This allows access to the front panel meter and all switch linkages.

i. Remove the right side panel attaching screws and remove the panel from the instrument. This allows access to the RANGE switch S1.

4-11. THE MODEL 891AR DISASSEMBLY INSTRUCTIONS

4-12. The following procedure is to be used to gain access to various parts of the Model 891AR:

a. Remove the six top dust cover attaching screws and remove the dust cover from the instrument. This allows access to the mounting screws of the Kelvin-Varley Divider, Reference Inverter, and Null Detector printed circuit boards.

b. Remove the top front and rear trim strip attaching screws and remove the trim strips from the instrument. This allows access to the front and rear panel components.

c. Remove the six lower dust cover attaching screws and remove the dust cover from the instrument. This allows access to the Reference Inverter printed circuit board mounting screws, all of the switches used in the instrument, and potentiometer R37.

d. Remove the lower front and rear trim strip attaching screws and remove the trim strips from the instrument. This allows further access to the front and rear panel components.

e. Remove the left and right rear panel attaching screws and slide the rear panel free from the instrument. This allows access to the power transformer T1, CR1, CR2, and any option components.

f. Loosen the front panel control knob set screws and remove all of the knobs from the front panel. Loosen the two screws securing the shutter cabling to the front panel. Remove the nuts from the front panel binding posts and remove the terminal clips from the binding posts. Remove the left and right front panel attaching screws and slide the front panel forward until free of the instrument. This allows access to the front panel meter and all switch linkages.

4-13. GENERAL MAINTENANCE

4-14. PERIODIC CLEANING

4-15. This instrument is completely enclosed, therefore no entry for dirt, dust, or lint is provided. Consequently, it is usually only necessary to clean the exterior surfaces of the instrument. To clean the exterior use a cloth moistened with anhydrous ethyl alcohol or Freon T. F. Degreaser, MS 180 Miller-Stephenson Chemical Co., Inc. If either of these cleaning agents are not readily available soap and water applied sparingly to a cloth can be used to clean the exterior of the instrument.

4-16. If it becomes necessary to clean the interior of the instrument a hot deionized or distilled water rinse followed by a thorough drying should be used. Drying temperatures in excess of 160° F should be avoided.

CAUTION!

The use of solvents, particularly keytones, is not recommended because of possible damage to the dielectric materials used in the instrument.

4-17. FUSE REPLACEMENT

4-18. Input line power to the Model 891 instruments is fused to 1/8 ampere by F1. This fuse is located on the rear panel assembly of the instrument in a bayonet fuseholder. When replacing this fuse use a 1/8A, 250 volt, slo-blo, type fuse.

4-19. BATTERY REPLACEMENT

4-20. Battery replacement on instruments containing the -01 option is necessary when 16 continuous hours of battery charging will no longer result in a satisfactory battery check. To replace the batteries, proceed as follows:

a. Obtain access to the battery pack installed on the rear panel using the disassembly procedures for your particular instrument that are described in paragraphs 4-8 through 4-12.

b. Unsolder red (or white) and black battery pack wires from their respective circuit connections and wrap the exposed ends of the wires with electricians tape.

c. Remove the four nuts and screws that attach the battery pack to the rear panel and lift the battery pack free from the instrument.

d. Locate and replace the defective batteries observing proper polarities of connections.

e. Mount the battery pack on the rear panel assembly using the screws and nuts removed in step c.

f. Remove the tape from the black battery pack wire and solder this wire to the terminal on the power transformer from which it was removed in step b.

g. Remove the tape from the red (or white) battery pack wire and solder this wire to the end of the resistor from which it was removed in step b.

h. Reassemble the instrument and check the batteries as described in Section II paragraph 2-9 and 2-10.

4-21. PRECALIBRATION AND TROUBLESHOOTING

4-22. INTRODUCTION

4-23. Before attempting to calibrate the Model 891 DC Differential Voltmeter, a parameter check of the major sections of the instrument circuitry should be performed. These precalibration checks, when the desired results are obtained, will ensure that each major section of the instrument is contributing the least possible error toward overall instrument inaccuracy. When performing these checks it may become necessary to replace component parts in order to obtain the desired results. Under these circumstances, general troubleshooting of the circuitry is necessary. As each malfunction is corrected, a complete recheck of the particular circuitry involved is also necessary.

4-24. The following tests should be performed in a draft free area at an ambient temperature of 21° to 25°C. Adjustment and test point locations are illustrated in Figure 4-2. At the beginning of each check the type of test equipment is given. Refer to Figure 4-1 for the recommended test equipment.

4-25. REFERENCE AMPLIFIER/REFERENCE INVERTER CHECKS

4-26. The Reference Amplifier/Reference Inverter Checks require an autotransformer, an ac ammeter, an oscilloscope and a dc differential voltmeter. Circuit waveforms are illustrated in Figure 4-4. To perform the checks, proceed as follows:

a. Remove the upper and lower dust covers from the instrument. Refer to paragraphs 4-8 through 4-12 for disassembly instructions.

b. Make the equipment connections illustrated in Figure 4-3 and place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	1000
NULL SENS	10V
POLARITY	+
Readout dials	00.0 00

c. Apply 115 volts ac, 50-500 Hz, through the autotransformer to the Model 891. The ac ammeter should indicate less than 25 milliamperes.

d. If your instrument is equipped with the -01 option, place the POWER switch to BAT CHG, observing that the ac ammeter indication does not exceed 60 milliamperes and the ballast lamp DS1 illuminates.

e. Connect the oscilloscope signal input to terminal 3 of the Reference Amplifier Assembly and connect the oscilloscope ground to terminal 6 or 7. The waveform observed on the oscilloscope CRT should not exceed a peak-to-peak indication of 2.5 volts.

f. Disconnect the oscilloscope from the Model 891.

g. Connect the input of the dc differential voltmeter to TP14 of the A2 Reference Amplifier Assembly and connect the common lead to A2 terminal 6 or 7. The voltmeter should indicate +18.5 ±0.5 volts dc.

h. Remove ac power from the Model 891 and connect the dc differential voltmeter input to terminal 2 of the A5 Kelvin-Varley Divider Assembly.

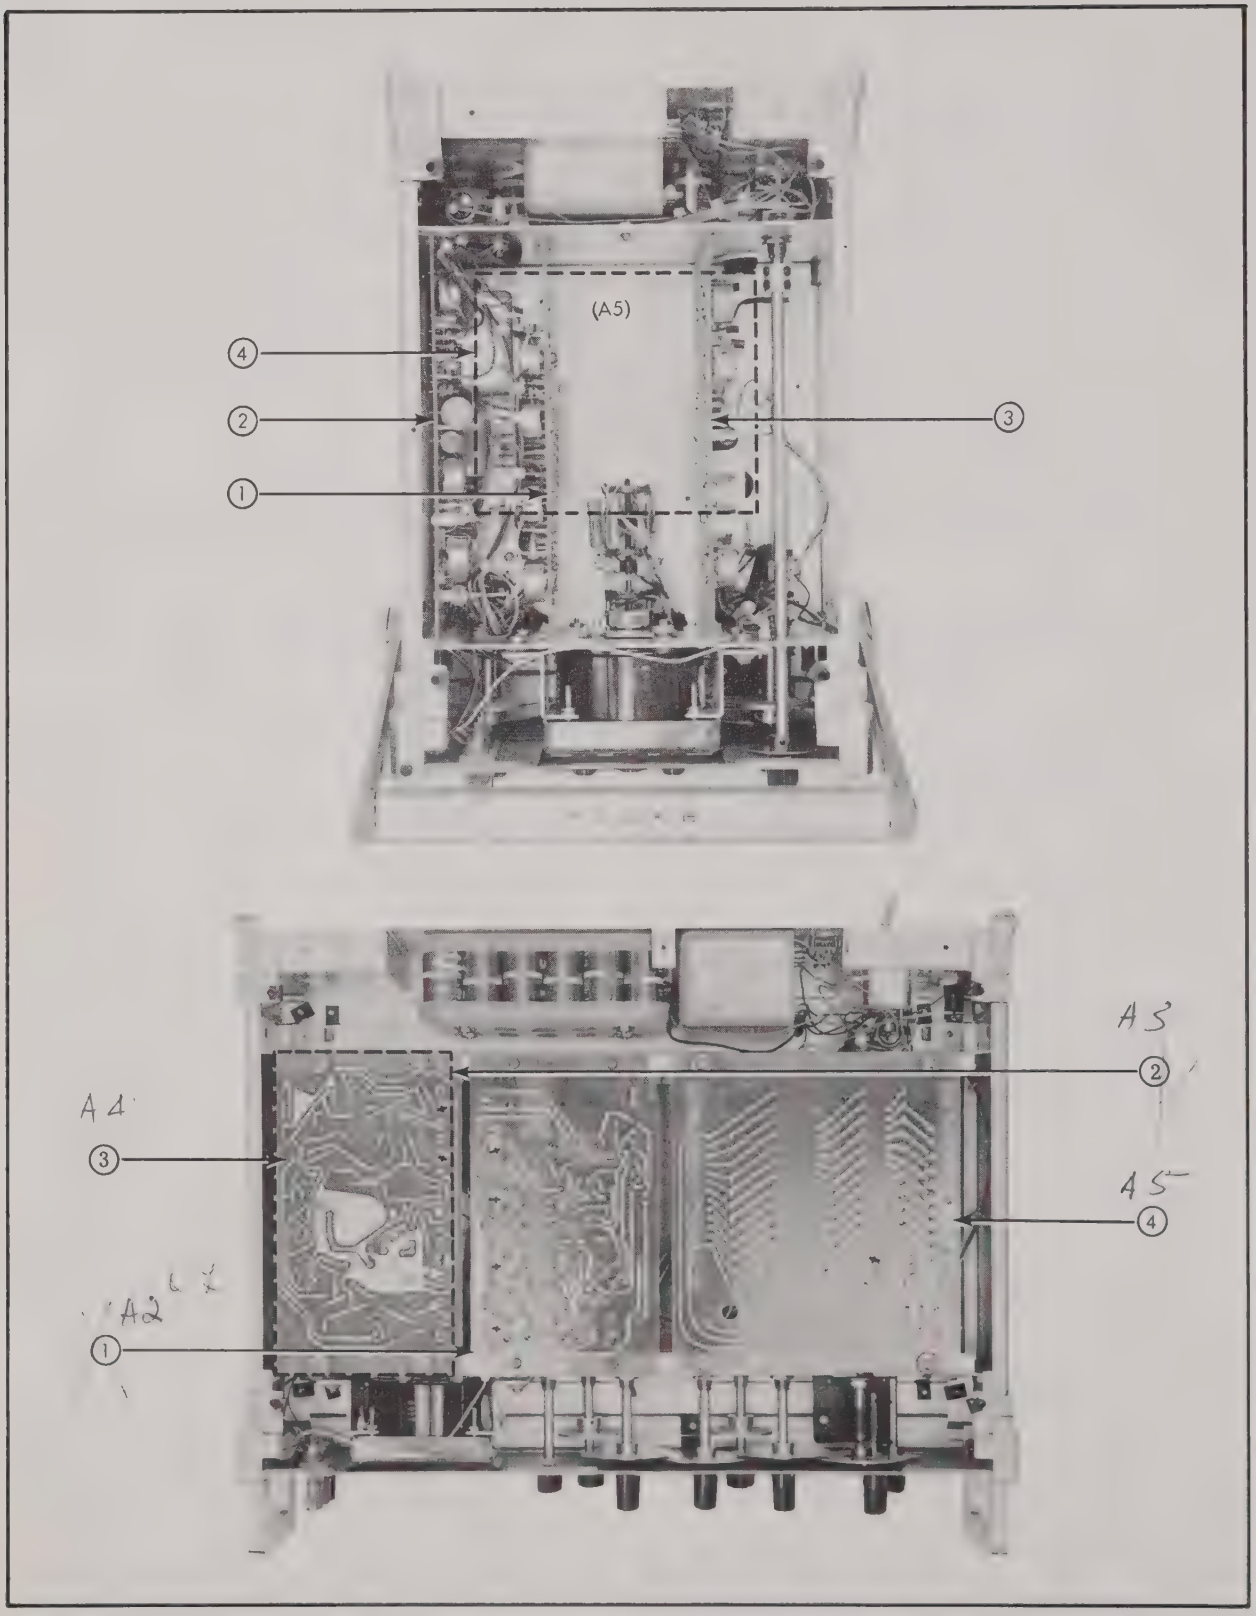

Figure 4-2. ADJUSTMENT AND TEST POINT LOCATIONS (Sheet 1 of 3)

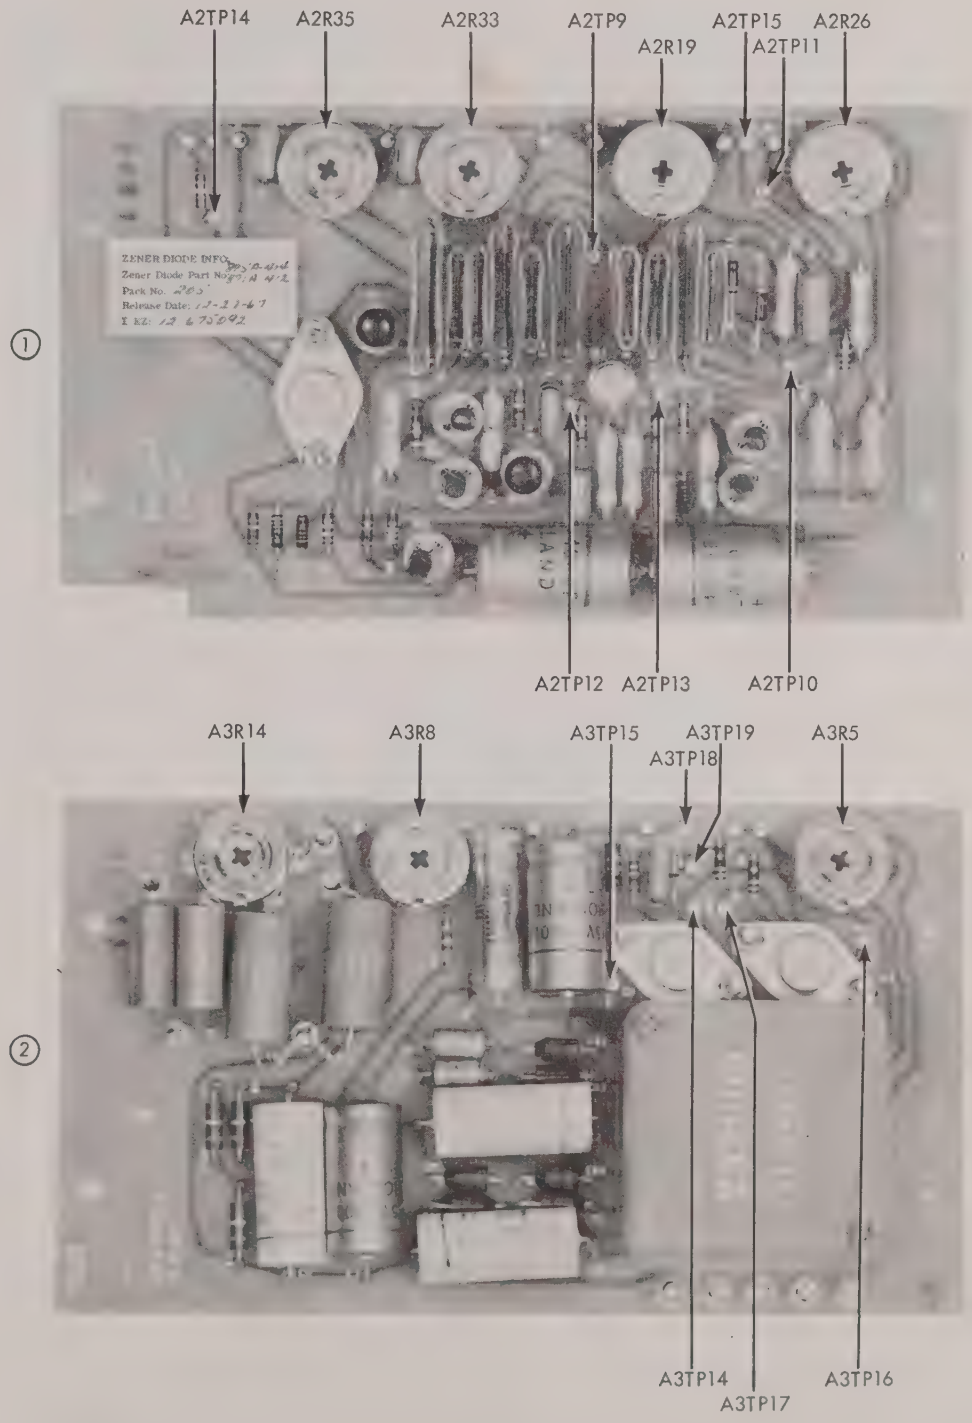

Figure 4-2. ADJUSTMENT AND TEST POINT LOCATIONS (Sheet 2 of 3)

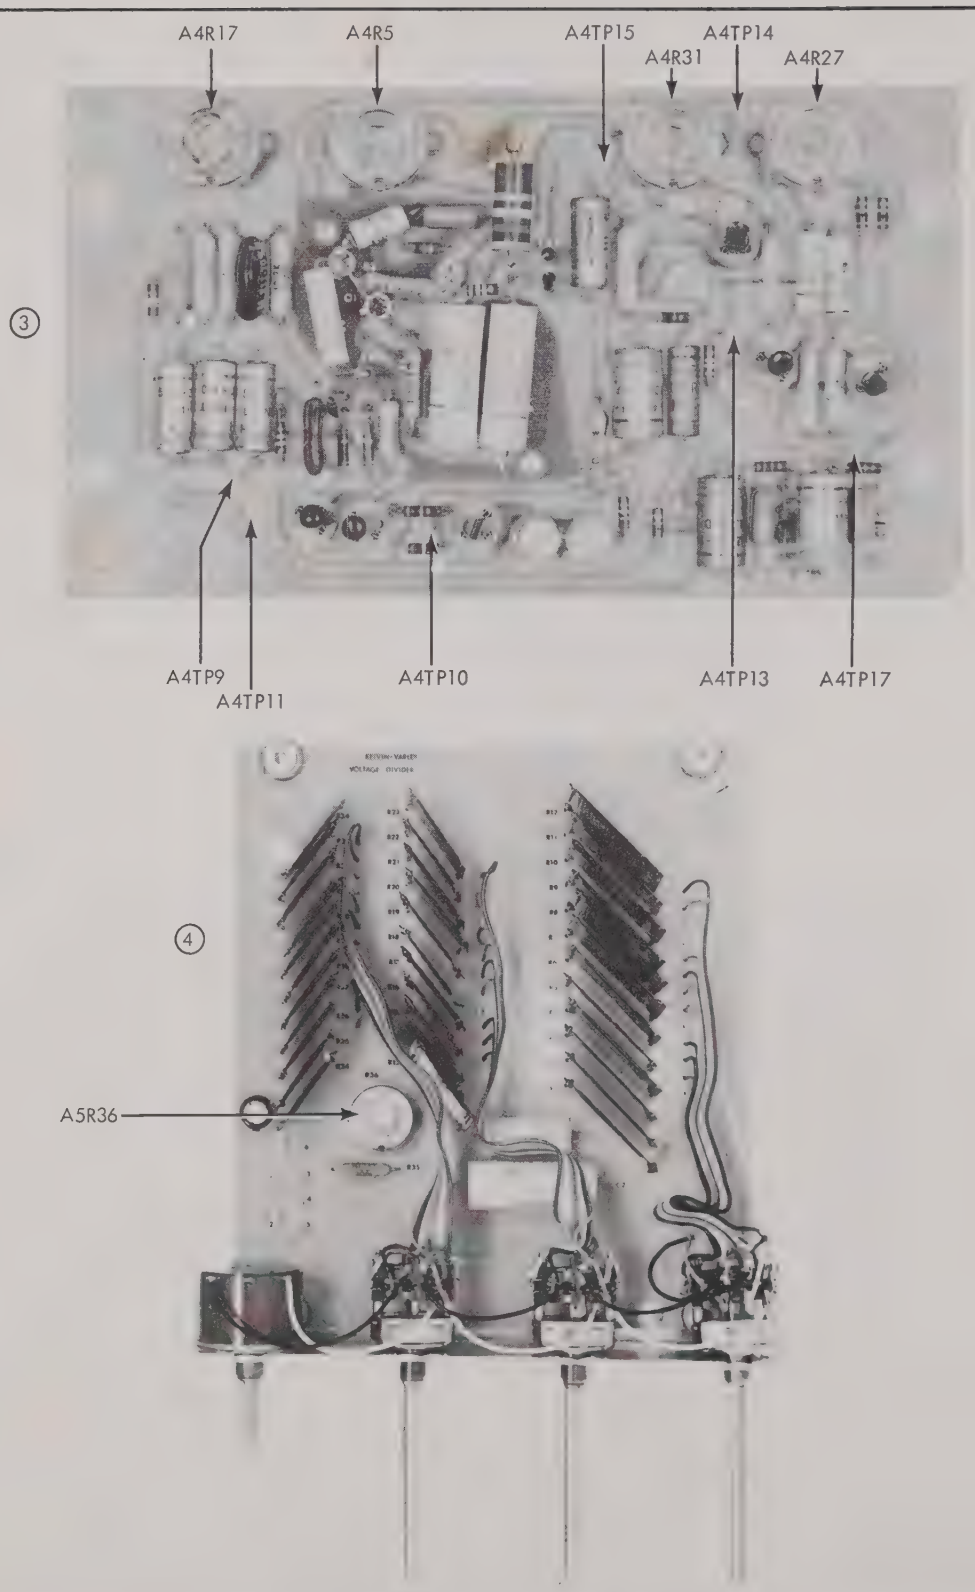

Figure 4-2. ADJUSTMENT AND TEST POINT LOCATIONS (Sheet 3 of 3)

i. Reapply ac power to the Model 891, observing that the dc differential voltmeter indicates 1100 ±0.13 volts dc.

j. Rotate A2R26 to each available limit, observing that the dc differential voltmeter indication changes by at least ±0.2 volts.

k. Adjust A2R26 for an indication of 1100 volts dc on the dc differential voltmeter.

l. Decrease the ac input voltage applied to the Model 891 to 103.5 volts ac with the autotransformer control. The voltage observed on the dc differential voltmeter should not vary more than ±0.0055 volts.

m. Increase the ac input voltage applied to the Model 891 to 126.5 volts ac with the autotransformer control. The voltage observed on the dc differential voltmeter should not vary more than ±0.0055 volts.

n. Remove ac power from the Model 891 and connect the dc differential voltmeter input to A2TP9.

o. Reapply 115 volts ac to the Model 891, observing that the dc differential voltmeter indicates 17 ±0.01 volts dc.

p. Rotate A2R19 to each available limit, observing that the dc differential voltmeter indication changes by at least ±100 millivolts.

q. Adjust A2R19 for an indication of +17 ±0.01 volts dc on the dc differential voltmeter.

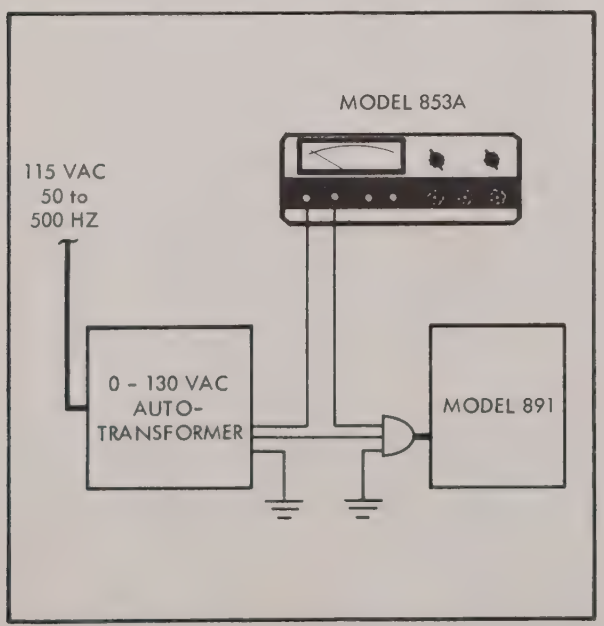

Figure 4-3. REFERENCE AMPLIFIER/REFERENCE INVERTER CHECKS - EQUIPMENT CONNECTIONS

r. Place the RANGE switch to 100 and connect the dc differential voltmeter input to terminal 2 of the A5 Kelvin-Varley Divider Assembly.

s. The dc differential voltmeter should indicate 110 ±0.009 volts dc.

t. Rotate A3R14 to each available limit, observing that the dc differential voltmeter indication changes by at least ±0.010 volts.

u. Adjust A3R14 for an indication of 110 volts dc on the dc differential voltmeter.

v. Place the RANGE switch to 10, observing that the dc differential voltmeter indicates 11 ±0.0009 volts dc.

w. Rotate A2R33 to each available limit, observing that the dc differential voltmeter indication changes by at least ± one millivolt.

x. Adjust A2R33 for an indication of 11 volts dc on the dc differential voltmeter.

y. Place the RANGE switch to 1, observing that the dc differential voltmeter indicates 1.1 volts dc ±0.9 millivolts.

z. Rotate A2R34 to each available limit, observing that the dc differential voltmeter indication changes by at least ±1 millivolt.

aa. Adjust A2R35 for an indication of 1.1 volt dc on the dc differential voltmeter.

ab. Connect the dc differential voltmeter common to terminal 1 of the A4 Null Detector Assembly and the input to TP17.

ac. Place the Model 891 NULL SENS switch to the TVM position and the RANGE switch to the 100 position.

ad. The dc differential voltmeter should indicate -6.8 volts dc ±400 millivolts. Record the exact value.

ae. Place the Model 891 RANGE switch to the 1000 position.

af. Rotate A3R8 to each available limit, observing that the dc differential voltmeter indication changes by at least ±15 millivolts.

ag. Adjust A3R8 for an indication on the dc differential voltmeter that is within 10 millivolts of the voltage recorded in step ad.

ah. Connect the oscilloscope signal input and ground to A3 terminals 10 and 9, respectively. A 3 kHz drive signal having a maximum amplitude of 13.5 volts peak-to-peak should be observed on the oscilloscope trace.

4-27. When the results of these checks agree with the information given, the Reference Amplifier/Reference Inverter Assemblies are functioning properly and the test equipment can be disconnected from the instrument.

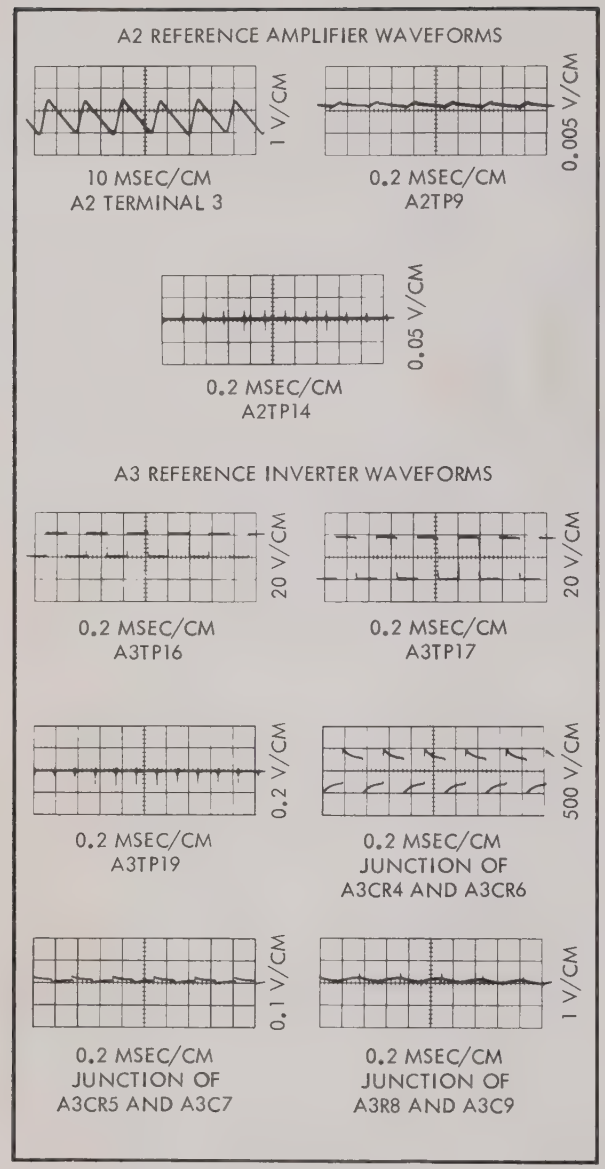

Figure 4-4. REFERENCE AMPLIFIER/REFERENCE INVERTER WAVEFORMS

4-28. NULL DETECTOR/DIVIDER CHECKS

4-29. The Null Detector/Divider Checks require a dc voltage calibrator, a dc differential voltmeter and a 10 megohm 1% resistor. Circuit waveforms are illustrated in Figure 4-6. To perform the checks, apply ac power to the instrument and proceed as follows:

a. Place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	1
NULL SENS	.001
POLARITY	+
Readout dials	.00100

b. Connect the dc differential voltmeter input to TP16 and the common lead to terminal 7 of the Null Detector Assembly. The voltmeter should indicate +6.8 ±0.4 volts dc.

c. Connect the dc differential voltmeter input to TP17, observing that the voltmeter indicates -6.8 ±0.4 volts dc.

d. Disconnect the dc differential voltmeter from the Model 891.

e. Connect a shorting jumper between the LO and HI INPUT terminals and rotate A4R27 and A4R31 fully counter-clockwise.

f. Adjust A4R27 clockwise until a full-scale negative meter indication (-1) is obtained and then rotate the control an additional 10° clockwise.

g. Remove the shorting jumper and adjust A4R31 for an exact zero-center meter indication and then repeat steps f and g as necessary.

h. Connect the shorting jumper between the LO and HI INPUT terminals and adjust A4R5 to each available limit. The meter pointer should deflect above and below the minus 1 indication.

i. Adjust A4R5 for a full-scale (-1) indication on the meter.

j. Remove the shorting jumper between the INPUT terminals and replace with a 10 megohm 1% resistor.

k. Place the Readout dials to .00200 and adjust A4R17 to each available limit, observing that the meter pointer deflects above and below the minus 1 indication.

l. Adjust A4R17 for a full-scale (-1) indication on the meter.

m. Remove the 10 megohm resistor from between the INPUT terminals of the instrument and place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	1
NULL SENS	.001
POLARITY	+
Readout dials	.00000

n. Connect the output of the dc voltage calibrator between the LO and HI INPUT terminals.

o. Apply the dc input voltages versus the ranges indicated in Figure 4-5, observing that the meter indicates full-scale (+1) ± 1-1/2 small divisions.

4-30. When the results of the checks agree with the information given, the Null Detector and Divider circuitry are functioning properly and the test equipment can be disconnected from the instrument.

INPUT DC VOLTAGE	RANGE	NULL SENS
.001	1	1 mv
.01	1	.01v
.1	1	.1 v
1.0	1	TVM
10.0	10	TVM
100.0	100	TVM
1000.0	1000	TVM

Figure 4-5. INPUT DC VOLTAGE VERSUS RANGE-CHECKS

4-31. KELVIN-VARLEY DIVIDER CHECKS

4-32. The Kelvin-Varley Divider Checks require the use of a dc voltage calibrator. The Precalibration and Troubleshooting Checks of paragraphs 4-21 through 4-30 must also have been performed to ascertain that the associated instrument circuitry is functioning correctly. To perform the checks, apply ac power to the instrument and proceed as follows:

a. Place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	10
NULL SENS	.001
POLARITY	+
Readout dials	10.000

b. Apply +10 volts dc from a dc voltage calibrator between the Model 891 LO and HI INPUT terminals.

c. Adjust A2R33 for a zero-center meter indication on the Model 891.

d. Apply the dc input voltages versus the Readout dial settings of Figure 4-7, observing that the Model 891 meter indicates zero-center within the major division deviation.

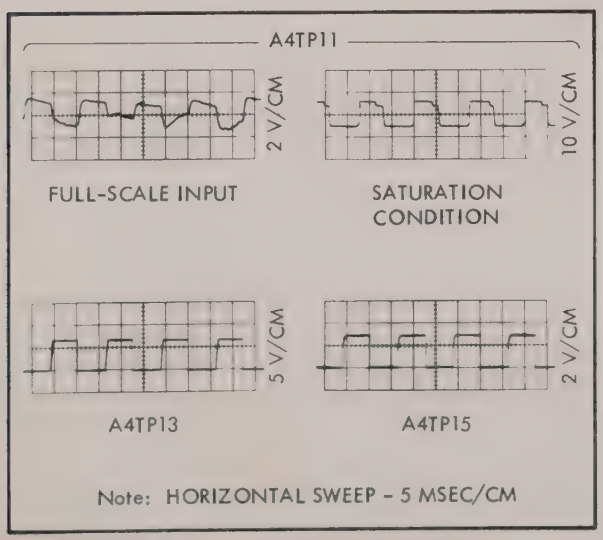

Figure 4-6. NULL DETECTOR WAVEFORMS

INPUT DC VOLTAGE	READOUT DIAL SETTINGS	MAJOR DIVISION DEVIATION
11.000	10.99 X	±5.5
10.000	10.00 O	null reference
10.00	9.99 X	±5.0
9.999	9.99 90	±4.99
8.888	8.88 80	±4.44
7.777	7.77 70	±3.88
6.666	6.66 60	±3.33
5.555	5.55 50	±2.77
4.444	4.44 40	±2.22
3.333	3.33 30	±1.66
2.222	2.22 20	±1.11
1.111	1.11 10	± .55
1.000	1.00 0	± .5

Figure 4-7. INPUT VOLTAGES VERSUS READOUT SETTINGS - CHECKS

4-33. When the results of these checks agree with the information given, the Kelvin-Varley Divider circuitry is functioning properly and the test equipment can be disconnected from the instrument.

4-34. RECORDER OUTPUT OPTION CHECKS

4-35. The Recorder Output Option Checks require the use of a dc differential voltmeter. Circuit waveforms are illustrated in Figure 4-8. To perform the checks, apply ac power to the instrument and proceed as follows:

a. Connect the inputs of a dc differential voltmeter to the rear panel HI and LO RECORDER OUTPUT terminals and rotate the associated level control fully clockwise.

b. Connect a shorting jumper between the LO and HI INPUT terminals of the Model 891 and place the controls as follows:

POWER	ON/LINE OPR
RANGE	1
NULL SENS	.001
POLARITY	+
Readout dials	.00100

c. A dc voltage of -0.2 to -0.28 volts dc should be indicated on the dc differential voltmeter connected to the RECORDER OUTPUT terminals.

d. Rotate the RECORDER OUTPUT level control counter-clockwise, observing that the RECORDER OUTPUT voltage decreases to zero volts.

e. Adjust the RECORDER OUTPUT level control for an indication of 0.2 volts on the dc differential voltmeter.

f. Place the Model 891 Readout dials to .00010, observing that the RECORDER OUTPUT voltage indicated on the dc differential voltmeter is -0.02 volts dc.

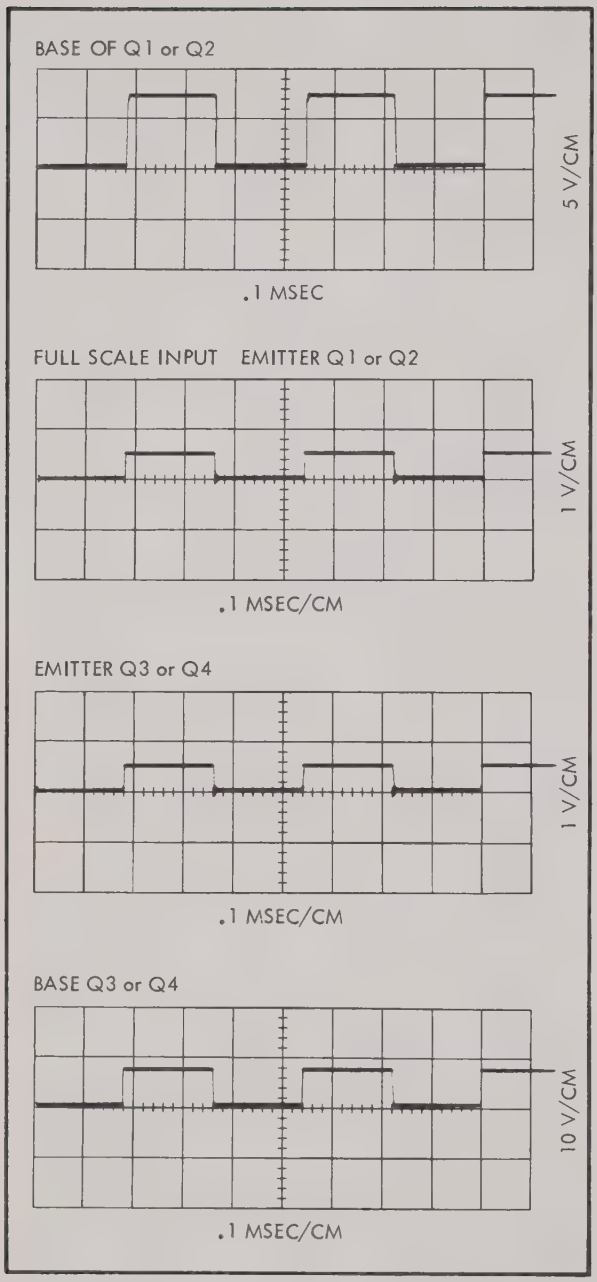

Figure 4-8. RECORDER OUTPUT WAVEFORMS

4-36. When the results of these checks agree with the information given, the Recorder Output Option circuitry is functioning properly and the test equipment can be disconnected from the instrument.

4-37. CALIBRATION PROCEDURES

4-38. INTRODUCTION

4-39. The Model 891 should be checked for calibration annually. Before attempting to calibrate your instrument, it is recommended that the major portions of the instrument circuitry be checked using the methods described in the preceding Precalibration and Troubleshooting (paragraphs 4-21 through 4-36).

4-40. It will be necessary to apply dc voltages from a known accurate source to the input of the instrument during calibration. A dc voltage calibrator such as the John Fluke Model 332B can be used to obtain the necessary accurate dc voltages.

4-41. Calibration of the instrument should be performed on line power with the top and bottom dust covers removed from the instrument. An ambient room temperature from 21° to 25°C in a draft free area should be maintained during calibration. Adjustments and test points locations are illustrated in Figures 4-2. Figure 4-9 contains a list of the calibration adjustments and their effects.

4-42. METER MECHANICAL ZERO ADJUST

4-43. With the power removed from the Model 891, proceed as follows:

a. Position the instrument horizontally (normal position) on the bench.

b. Adjust the meter mechanical zero screw, accessible from the front panel, until the meter pointer indicates zero-center. Back-off the screw adjustment just enough to disengage the cam once the center-zero indication is obtained.

4-44. ZENER REFERENCE SUPPLY CALIBRATION

4-45. To calibrate the Zener Reference Supply, apply ac power to the instrument and proceed as follows:

a. Place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	1
NULL SENS	TVM
POLARITY	+
Readout dials	.00000

b. Connect a dc differential voltmeter to A2TP9 and adjust A2R19 for an indication of +17 ±0.01 volts dc.

c. Disconnect the dc differential voltmeter.

4-46. NULL DETECTOR CALIBRATION

4-47. To calibrate the Null Detector circuitry, proceed as follows:

a. Place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	1
NULL SENS	1 mv
POLARITY	+
Readout dials	.00100

CIRCUITRY	ADJUSTMENTS AND THEIR EFFECTS	
ZENER REFERENCE SUPPLY	A2R19	Used to adjust for 17±0.01 volts dc at A2TP9 and has a minor effect on instrument calibration. Adjustment of this control establishes a specific voltage for the zener diodes which minimizes the zeners temperature coefficient and increases their voltage stability.
NULL DETECTOR	A4R27	Adjusts the gate signal drive level of Q1 for optimum chopping efficiency. Inadequate drive to the gate of Q1 will result in a lower than specified null detector input resistance and a lower gain. Excessive drive to the gate of Q1 (clockwise setting) will reduce the null detector stability.
	A4R31	Adjusts the level of the signal applied to the drain of Q1. This signal is used to cancel out the null detector open-circuit offset effects produced by the gate to drain capacitance of Q1. Misadjustment of this control will produce null detector open circuit offsets particularly noticable on the .001 volt sensitivity.
	A4R5	Adjusts the null detector gain to compensate for variations in the carrier amplifier gain, full-scale meter sensitivity, and feedback resistor tolerances.
	A4R17	Adjusts the carrier amplifier gain which determines the input resistance of the null detector and to a minor degree affects null detector sensitivity.
	A3R8	Adjusted to provide uniform null detector voltages of ±6.8 volts dc on all voltage ranges. This adjustment does not affect instrument calibration.
	A3R5	Adjusted to reduce the 3 kHz common mode signal from A3T1 that is present at the common terminal of the null detector. This adjustment does not affect instrument calibration.
KELVIN-VARLEY DIVIDER	A5R36	Provides a means of trimming the full-scale vernier dial range to compensate for potentiometer resistance tolerance.
1000 VOLT RANGE	A2R26	Adjusts the value of the reference voltage for the +18.5 volt dc regulator to a value necessary to calibrate the 1000 volt range. Adjustment of this resistor will also effect calibration of the 100 volt range but does not effect the 1 and 10 volt range calibration.
100 VOLT RANGE	A3R14	Adjusts the 110 volts dc applied to the Kelvin-Varley Divider on the 100 volt range. Adjustment of this resistor will not effect the calibration of any other voltage range.
10 VOLT RANGE	A2R33	Adjusts the 11 volts dc applied to the Kelvin-Varley Divider on the 10 volt range. Adjustment of this resistor will not effect the calibration of any other range.
1 VOLT RANGE	A2R35	Adjusts the 1.1 volts dc applied to the Kelvin-Varley Divider on the 1 volt range. Adjustment of this resistor will not effect the calibration of any other range.

Figure 4-9. SUMMARY OF CALIBRATION ADJUSTMENTS

b. Connect a shorting jumper between the LO and HI INPUT terminals and rotate A4R27 and A4R31 fully counter-clockwise.

c. Adjust A4R27 clockwise until negative (-) deflection of the meter pointer reaches a maximum and then continue an additional 10° clockwise.

d. Remove the INPUT terminals shorting jumper and adjust A4R31 for a meter pointer indication of zero-center ±1/4 small divisions.

e. Connect the shorting jumper between the LO and HI INPUT terminals and adjust A4R5 for an exact full-scale (-1) meter pointer indication.

f. Replace the shorting jumper between the INPUT terminals with a 10 megohm 1% resistor and place the Readout dials to . 00200.

g. Adjust A4R17 for an exact full-scale (-1) meter pointer indication.

h. Repeat steps e through g until the specified results are obtained.

i. Replace the resistor between the INPUT terminals with a shorting jumper.

j. On each RANGE and NULL SENS switch setting, place the Readout dials to the voltage indicated on the NULL SENS switch, observing that the meter pointer indicates full-scale (-1) ±1 small division. On the one volt range, perform the checks in both positions of the POLARITY switch.

k. Remove the INPUT terminal shorting jumper and place the NULL SENS switch to TVM.

l. Apply the dc voltages to the Model 891 INPUT terminals on the ranges indicated in Figure 4-10, observing that the meter pointer indicates a corresponding positive or negative full-scale (±1) ±1 small division.

INPUT DC VOLTAGE (±0.3%)	RANGE
±1	1
±10	10
±100	100
±1000	1000

Figure 4-10. TVM RANGE CHECKS

m. Remove the dc input voltage and connect a dc differential voltmeter between A4TP17 and the LO INPUT terminal.

n. Place the RANGE switch to 100 and the Readout dials to 00. 000 and record the dc differential voltmeter indication.

o. Place the RANGE switch to 1000 and adjust A3R8 for a dc voltage within ±10 millivolts of the voltage recorded in step n.

p. Disconnect the dc differential voltmeter and connect an oscilloscope ground lead to the LO INPUT terminal and the input lead to terminal 1 of the A4 Null Detector Assembly.

q. Place the RANGE switch to 1000 and the Readout dials to 100. 00. Adjust A3R5 for minimum amplitude of the 3 kHz squarewave observed on the oscilloscope CRT.

4-48. KELVIN-VARLEY DIVIDER CALIBRATION

4-49. To calibrate the Kelvin-Varley Divider, apply ac power to the instrument and proceed as follows:

a. Place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	10
NULL SENS	. 001
POLARITY	+
Readout dials	0. 01 00

b. Apply a dc input voltage between the LO and HI INPUT terminals and adjust its level to obtain a zero-center meter pointer indication.

c. Place the Readout dials to 0. 00 X and adjust A5R36 for a zero-center meter pointer indication.

4-50. VOLTAGE RANGE CALIBRATION

4-51. To calibrate the Voltage Ranges of the Model 891, apply ac power to the instrument and proceed as follows:

a. Disconnect the shorting link from the LO INPUT terminal and place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	1000
NULL SENS	. 1
POLARITY	+
Readout dials	1000. C0

b. Apply a dc calibration voltage of 1, 000 ±0. 002% volts dc between the LO and HI INPUT terminals and center the adjustment A2R26, observing that the Model 891 meter indicates center-zero ±0. 6.

c. If the result of step b is obtained, proceed with step f. If the desired results are not obtained, perform steps d through f.

d. Remove ac power to the instrument and connect the jumpers illustrated in Figure 4-11 between their respective circuit board connections.

e. Reapply ac power to the instrument and, using the information provided in Figure 4-12, clip the corresponding jumper or jumpers.

f. Adjust A2R26 for an exact zero-center meter indication.

g. Reduce the calibration voltage to 100 ±0. 002% volts dc and place the RANGE switch to 100.

h. With the NULL SENS switch to 0. 01, adjust A3R14 for an exact zero-center meter pointer indication.

i. Reduce the calibration voltage to 10 ±0. 002% volts dc and place the RANGE switch to 10.

j. With the NULL SENS switch to . 001, adjust A2R33 for an exact center-zero meter pointer indication.

k. Reduce the calibration voltage to 1 ±0. 002% volts dc and place the RANGE switch to 1.

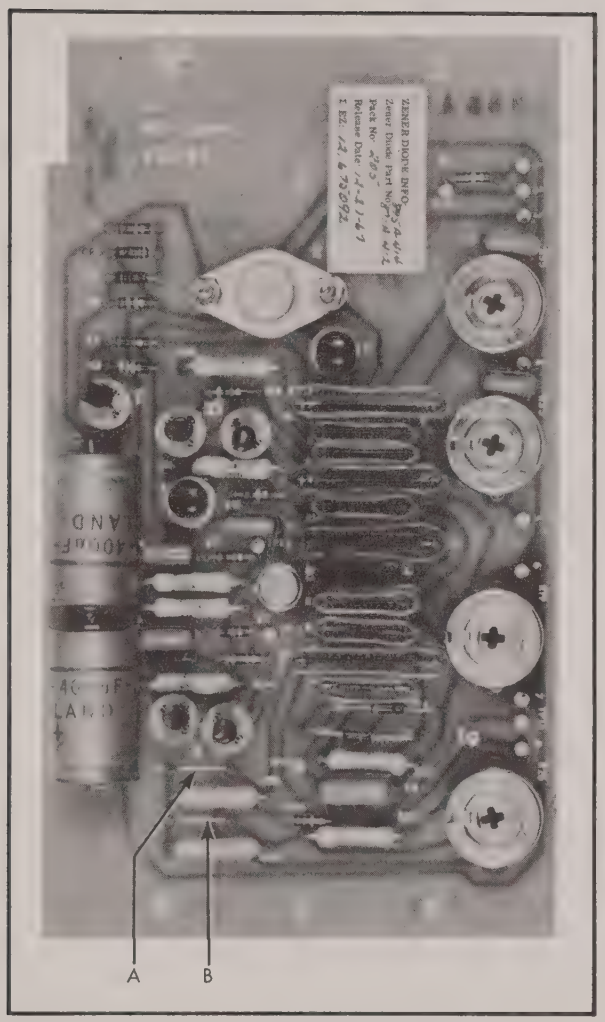

Figure 4-11. JUMPER WIRE LOCATION

l. With the NULL SENS switch to .001, adjust A2R35 for an exact zero-center meter pointer indication.

m. Reduce the calibration voltage to 80 millivolts ±0.1% and place the RANGE switch to 100.

n. Place the Readout dials to 00.080, observing that a zero-center meter indication is obtained within ±1/4 of a small division on the vernier Readout dial.

o. If the results of step n are not obtained, adjust the vernier Readout dial for an exact zero-center meter indication and loosen the set screw that secures the vernier dial indicator to the potentiometer shaft. Refer to Figure 4-13 for location of the set screw.

METER INDICATION	JUMPER WIRE
0 to ±0.6	NONE
-0.6 to -1.8	B
-1.8 to -3.0	A
-3.0 and above	BOTH

Figure 4-12. JUMPER WIRE SELECTION

p. Position the vernier dial indicator for a front panel indication of 80 and securely tighten the set screw.

q. Remove the calibration voltage from the Model 891 and place a shorting jumper between the LO and HI INPUT terminals.

r. Place the Model 891 controls as follows:

POWER	ON/LINE OPR
RANGE	10
NULL SENS	.001
POLARITY	+
Readout dials	00.000

s. Rotate the vernier Readout dial until a full-scale (-1) meter pointer indication is obtained, observing that the vernier Readout dial indication is between 9 and 11.

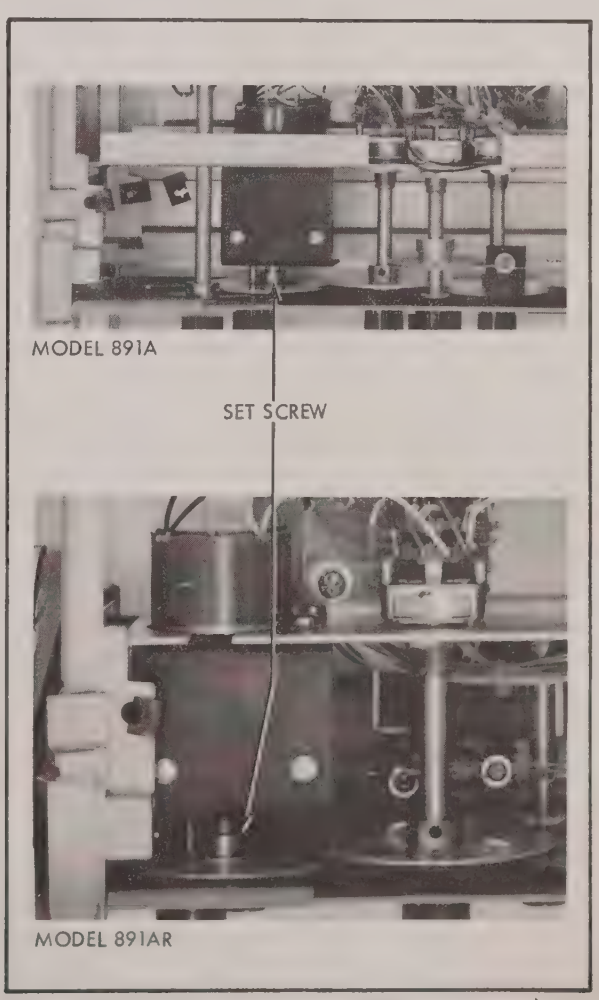

Figure 4-13. VERNIER DIAL SET SCREW LOCATION

SECTION V

LIST OF REPLACEABLE PARTS

5-1. INTRODUCTION

5-2. This section of the manual contains a listing of replaceable components for this instrument. The first listing contains a complete breakdown of all the major assemblies followed by subsequent listings that itemize the components on each major assembly. An illustration accompanies each major assembly listing to aid in locating the listed components.

5-3. Assemblies and subassemblies are identified by a reference designation beginning with the letter A followed by a number (e.g., A1 etc.). Electrical components appearing on the schematic diagram are identified by their schematic diagram reference designation. Components not appearing on the schematic diagram are consecutively numbered throughout the parts list. These components are identified with whole numbers on the arrow call-out illustrations and by index numbers on the grid illustrations. Flagnotes are used throughout the parts list and refer to special ordering explanations that are located in close proximity to the flagnotes.

5-4. COLUMN DESCRIPTION

a. The REF DESIG column indexes the item description to the associated illustration. In general the reference designations are listed under each assembly in alpha-numeric order. Subassemblies of minor proportions are sometimes listed with the assembly of which they are a part. In this case, the reference designations for the components of the subassembly may appear out of order.

b. The INDEX NO. column lists coordinates which locate the designated part on the associated grid illustrations.

c. The DESCRIPTION column describes the salient characteristics of the component. Indention of the description indicates the relationship to other assemblies, components, etc. In many cases it is necessary to abbreviate in this column. For abbreviations and symbols used, see the following page.

d. The six-digit part number, by which the item is identified at the John Fluke Mfg. Co., is listed in the STOCK NO. column. Use this number when ordering parts from the factory or authorized representatives.

e. The Federal Supply Code for the item manufacturer is listed in the MFR column. An abbreviated list of Federal Supply Codes is included in the Appendix.

f. The part number which uniquely identifies the item to the original manufacturer is listed in the MFR PART NO. column. If a component must be ordered by description, the type number is listed.

g. The TOT QTY column lists the total quantity of the items used in the instrument and reflects the latest Use Code. Second and subsequent listings of the same item are referenced to the first listing with the abbreviation REF. In the case of optional subassemblies, plug ins, etc. that are not always part of the instrument, or are deviations from the basic instrument model, the TOT QTY column lists the total quantity of the item in that particular assembly.

h. Entries in the REC QTY column indicate the recommended number of spare parts necessary to support one to five instruments for a period of two years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for one year or more at an isolated site, it is recommended that at least one of every part in the instrument be stocked. In the case of optional subassemblies, plug-ins, etc. that are not always part of the instrument, or are deviations from the basic instrument model, the REC QTY column lists the recommended quantity of the item in that particular assembly.

i. The USE CODE column identifies certain parts which have been added, deleted or modified during

the production of the instrument. Each part for which a Use Code has been assigned may be identified with a particular instrument serial number by consulting the Serial Number Effectivity List at the end of the parts list. Sometimes when a part is changed, the new part can and should be used as a replacement for the original part. In this event a parenthetical note is added in the DESCRIPTION column.

5-5. HOW TO OBTAIN PARTS

5-6. Standard components have been used wherever possible. Standard components may be ordered directly from the manufacturer by using the manufacturer's part number, or parts may be ordered from the John Fluke Mfg. Co. factory or authorized representative by using the Fluke part number. In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

5-7. You can insure prompt and efficient handling of your order to the John Fluke Mfg. Co. if you include the following information:

a. Quantity.

b. FLUKE Stock Number.

c. Description.

d. Reference Designation.

e. Instrument model and serial number.

Example: 2 each, 177105, Transistors, 2N3565, Q107-108 for 845AR, s/n 168.

If you must order structural parts not listed in the parts list, describe the part as completely as possible. A sketch of the part, showing its location to other parts of the instrument, is usually most helpful.

5-8. LIST OF ABBREVIATIONS

ac	alternating current	MHz	megahertz	rfi	radio frequency interference
Al	Aluminum	M	megohm		
amp	ampere	met flm	metal film	res	resistor
assy	assembly	ua	microampere	rms	root mean square
cap	capacitor	uf	microfarad	rtry	rotary
car flm	carbon film	uh	microhenry	sec	second
C	centrigrade	usec	microsecond	sect	section
cer	ceramic	uv	microvolt	S/N	serial number
comp	composition	ma	milliampere	Si	silicon
conn	connector	mh	millihenry	scr	silicon controlled rectifier
db	decibel	m	milliohms	spdt	single-pole, double-throw
dc	direct current	msec	millisecond	spst	single-pole, single-throw
dpdt	double-pole, double-throw	mv	millivolt	sw	switch
dpst	double-pole, single-throw	mw	milliwatt	Ta	tantalum
elect	electrolytic	na	nanoampere	tstr	transistor
F	fahrenheit	nsec	nanosecond	tvm	transistor voltmeter
Ge	germanium	nv	nanovolt	uhf	ultra high frequency
gmv	guaranteed minimum value	Ω	ohm	vtvm	vacuum tube voltmeter
h	henry	ppm	parts per million	var	variable
Hz	hertz	piv	peak inverse voltage	vhf	very high frequency
hf	high frequency	p-p	peak to peak	vlf	very low frequency
IC	integrated circuit	pf	picofarad	v	volt
if	intermediate frequency	plstc	plastic	va	voltampere
k	kilohm	p	pole	vac	volts, alternating current
kHz	kilohertz	pos	position	vdc	volts, direct current
kv	kilovolt	P/C	printed circuit	w	watt
lf	low frequency	rf	radio frequency	ww	wire wound

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
		DC DIFFERENTIAL VOLTMETER Figure 5-1	891A					
A1		Front Panel Assembly (See Figure 5-2)						
A2		Reference Amplifier P/C Assembly (See Figure 5-3)	232793 (891A-4001)	89536	232793	1		
A3		Reference Inverter P/C Assembly (See Figure 5-4)	232801 (891A-4002)	89536	232801	1		G
A3		Reference Inverter P/C Assembly (See Figure 5-5)	250175 (893A-4002)	89536	250175	1		H
A4		Null Detector P/C Assembly (See Figure 5-6)	232819 (891A-4003)	89536	232819	1		
A5		Kelvin-Varley P/C Assembly (See Figure 5-7)	232827 (891-4004)	89536	232827	1		
A7		Rear Panel Assembly (See Figure 5-8)						
M1		Meter, 100-0-100 ua	236513	89536	236513	1		
P1,P2		Line cord (not illustrated)	226100	91934	2270	1		
R1		Res, car flm, 90M ±1%, 2w	192138	75042	MEHT-X	1		
R2		Res, car flm, 9M ±0.5%, 1w	107557	75042	Type C13	1		
R3		Res, car flm, 1M ±1%, ½w	107219	75042	Type C12	1		
R4		Res, car flm, 90k ±0.5%, ½w	107292	75042	Type C12	1		
R5		Res, car flm, 9k ±0.5%, ½w	107250	75042	Type C12	1		
R6		Res, car flm, 900Ω ±0.5%, ½w	107771	75042	Type C12	1		
R7		Res, car flm, 100Ω ±0.5%, ½w	107730	75042	Type C12	1		
R9		Res, comp, 1k ±10%, 1w	109371	01121	GB1021	1		
R10		Res, comp, 100k ±5%, ½w	168054	01121	EB1045	1		M
S1		Switch, rotary, RANGE	242867	89536	242867	1		
S2		Switch, rotary, POWER	242917	89536	242917	1		
S3		Switch, rotary, NULL	242875	89536	242875	1		
S4		Switch, rotary, POLARITY	242883	89536	242883	1		
1		Coupler, power switch	104505	89536	104505	1		
2		Cover, bottom (not illustrated)	230169	89536	230169	1		
3		Cover, top (not illustrated)	230151	89536	230151	1		
4		Dial, 0-9	232215	89536	232215	2		
5		Dial, 0-10	232207	89536	232207	1		

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
6		Dial, 0-100	242859	89536	242859	1		
7		Foot, plastic (not illustrated)	230037	89536	230037	4		
8		Handle	231456	89536	231456	1		
9		Indicator, ON-OFF flag	232223	89536	232223	1		
10		Shaft, power switch	232157	89536	232157	1		
11		Trim strip, front (not illustrated)	230771	89536	230771	2		
12		Trim strip, rear (not illustrated)	230789	89536	230789	2		
13		Trim strip, side insert (not illustrated)	230920	89536	230920	2		

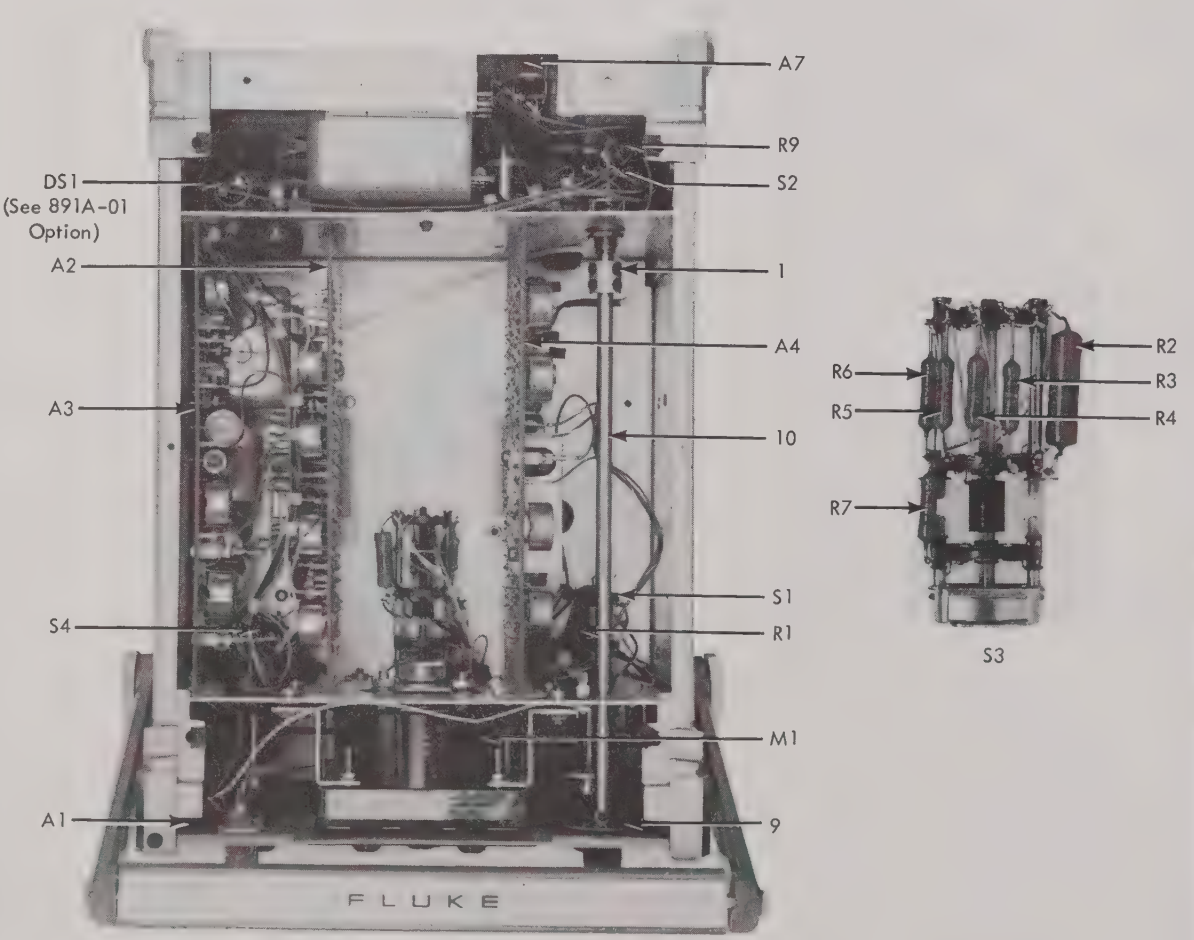

Figure 5-1. 891A DC DIFFERENTIAL VOLTMETER (Sheet 1 of 2)

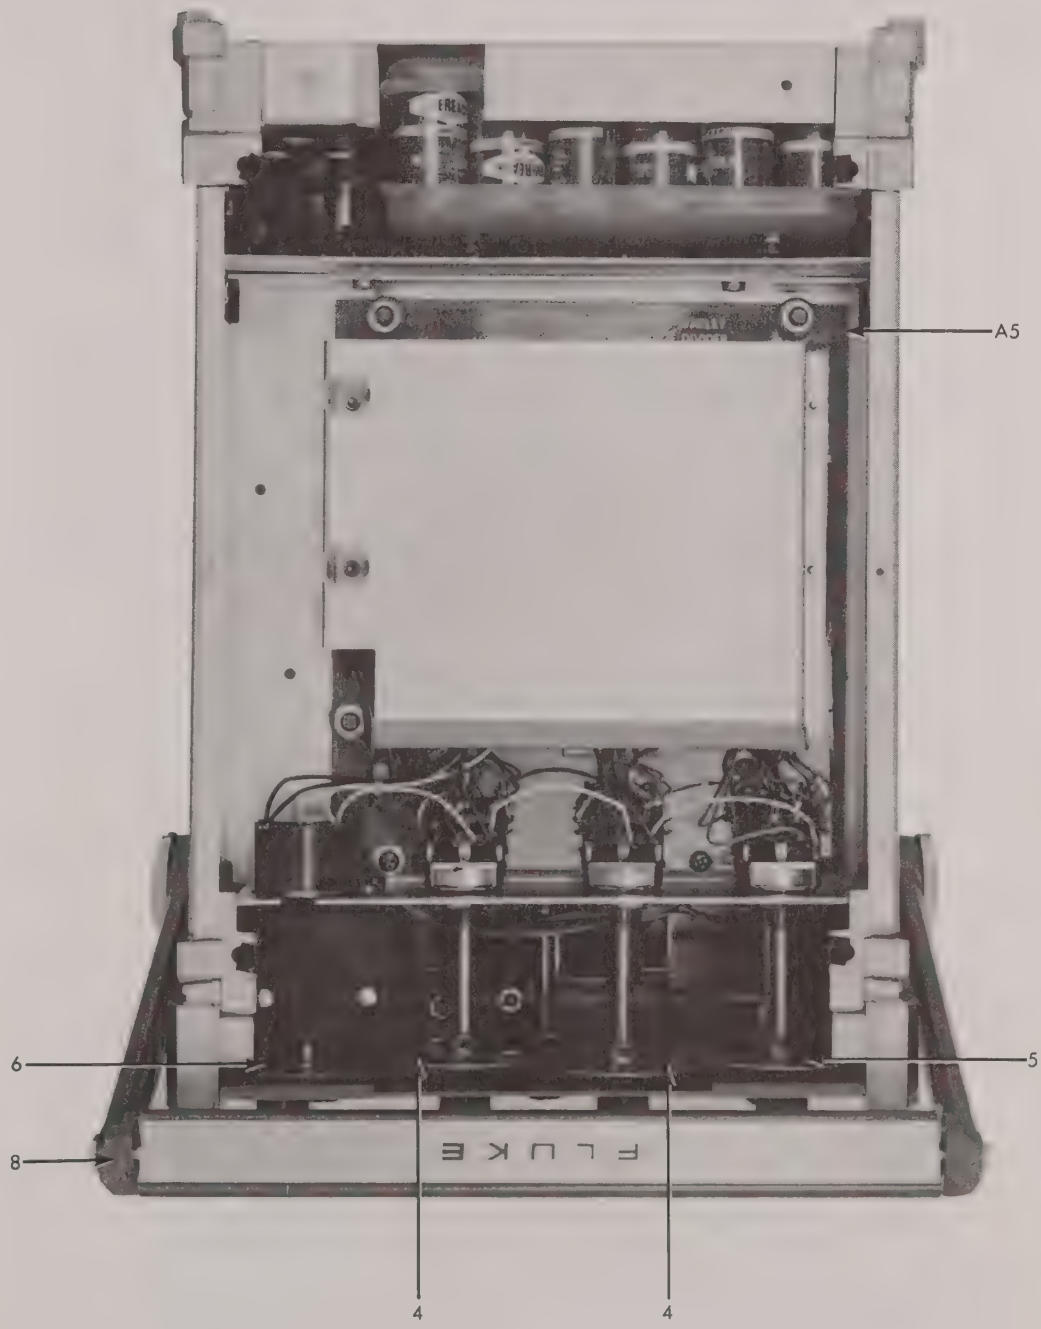

Figure 5-1. 891A DC DIFFERENTIAL VOLTMETER (Sheet 2 of 2)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A1		**FRONT PANEL ASSEMBLY (891A) Figure 5-2**						
C1		Cap, plstc, 0.047 uf ±20%, 1.2 kv (across J2 and J3)	182683	99217	MR473L12	2		
J1		Binding post, red, HI	226308	58474	DF21RC	2		
J2		Binding post, red, LO	226308	58474	DF21RC	REF		
J3		Binding post, black GROUND	226282	58474	DF21BC	1		
R8		Res, comp, 100M ±10%, ½w (across J2 and J3)	190520	01121	EB1071	1		
14		Knob, Digit	158949	89536	158949	4		
15		Knob, NULL SENS, POLARITY, RANGE	158956	89536	158956	3		
16		Knob, POWER	235689	89536	235689	1		
17		Link, shorting	101220	24655	938L	1		
18		Panel, front	231910	89536	231910	1		

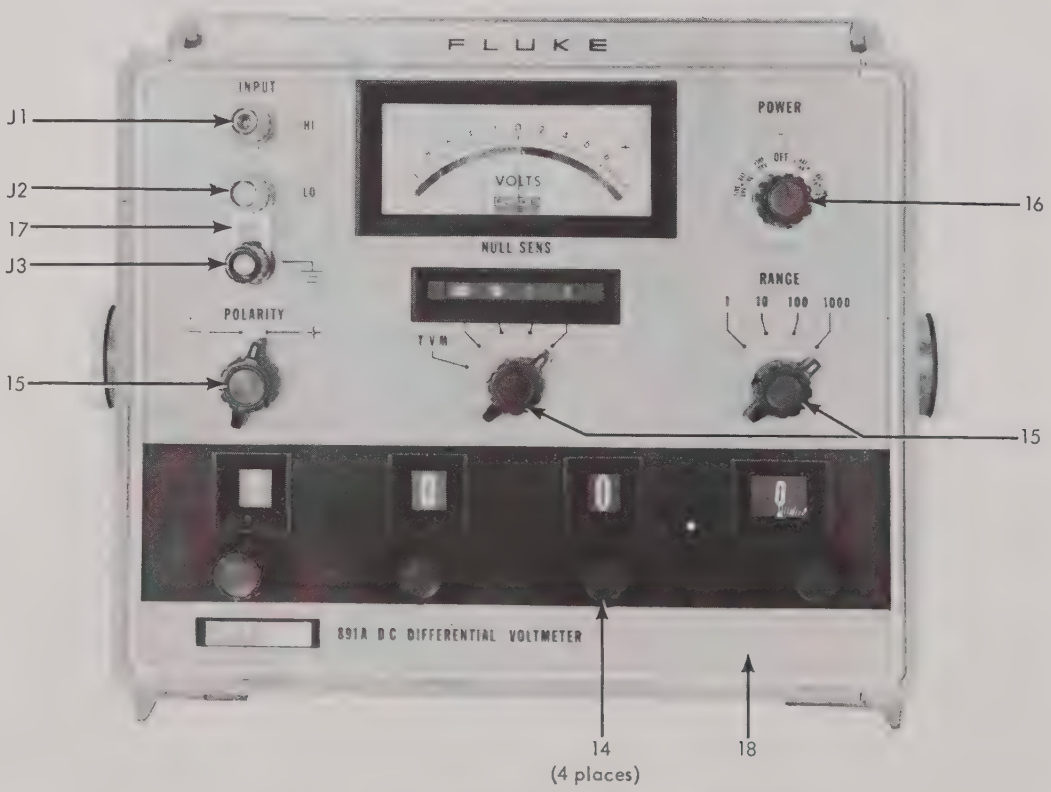

Figure 5-2. FRONT PANEL ASSEMBLY (891A)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A2		**REFERENCE AMPLIFIER P/C ASSEMBLY - Figure 5-3** NOTE: The Reference Amplifier P/C Assembly (A2), the Reference Inverter P/C Assembly (A3), and their intermatched resistor set can be ordered under one part number, 250209 (893A-4005).	232793 (891A-4001)	89536	232793	REF		
C1	E3-L5	Cap, elect, 400 uf +50/−10% 40v	185868	73445	C437ARG-400	2	1	
C2	C5-L5	Cap, elect, 400 uf +50/−10%, 40v	185868	73445	C437ARG-400	REF		
C3	E4-N4	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/P100K	9		I
C3	E4-N4	Cap, plstc, 0.22 uf ±20%, 250v	194803	73445	C280AE/P220K	2		J
C4	E2-M4	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/P100K	6		
C5	D2-M4	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/P100K	REF		
C6	B5-O4	Cap, plstc, 0.22 uf ±20%, 250v	194803	73445	C280AE/P220K	REF		
C7	G1-Q2	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/P100K	REF		
C8	H4-Q2	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/P100K	REF		
C9	H2-M2	Cap, Ta, 3.3 uf ±10%, 20v	182808	05397	K3R3C20K	1		F
CR1	H3-M2	Diode, silicon, 150 ma, 6 piv	113308	07910	CD13161	2	1	
CR2	D2-M4	Diode, silicon, 150 ma, 6 piv	113308	07910	CD13161	REF		
CR3	C3-O4	Diode, zener, matched	1					
CR4	C4-O5	Diode, zener, matched	1					
CR5	H4-M2	Diode, zener, 15v	246033	07910	IN965A	1	1	B
CR6	E1-O3	Diode, silicon, 100 ma @ 1.5v	261370	22767	S1330	1	1	K
Q1	G3-O3	Tstr, silicon, PNP	203364	07263	2N3638	1		C
	G3-O3	Tstr, silicon, PNP	229898	04713	MPS6522	2	1	D
Q2	H1-N4	Tstr, silicon, NPN	183004	95303	40250	3	1	
Q3	D5-N5	Tstr, silicon, NPN	220087	03508	12E-1516	1	1	
Q4	F5-M1	Tstr, silicon, NPN	168708	03508	2N3391	9	1	
Q5	C3-M4	Tstr, silicon, NPN	168708	03508	2N3391	REF		
Q6	C3-N2	Tstr, silicon, NPN	169708	03508	2N3391	REF		

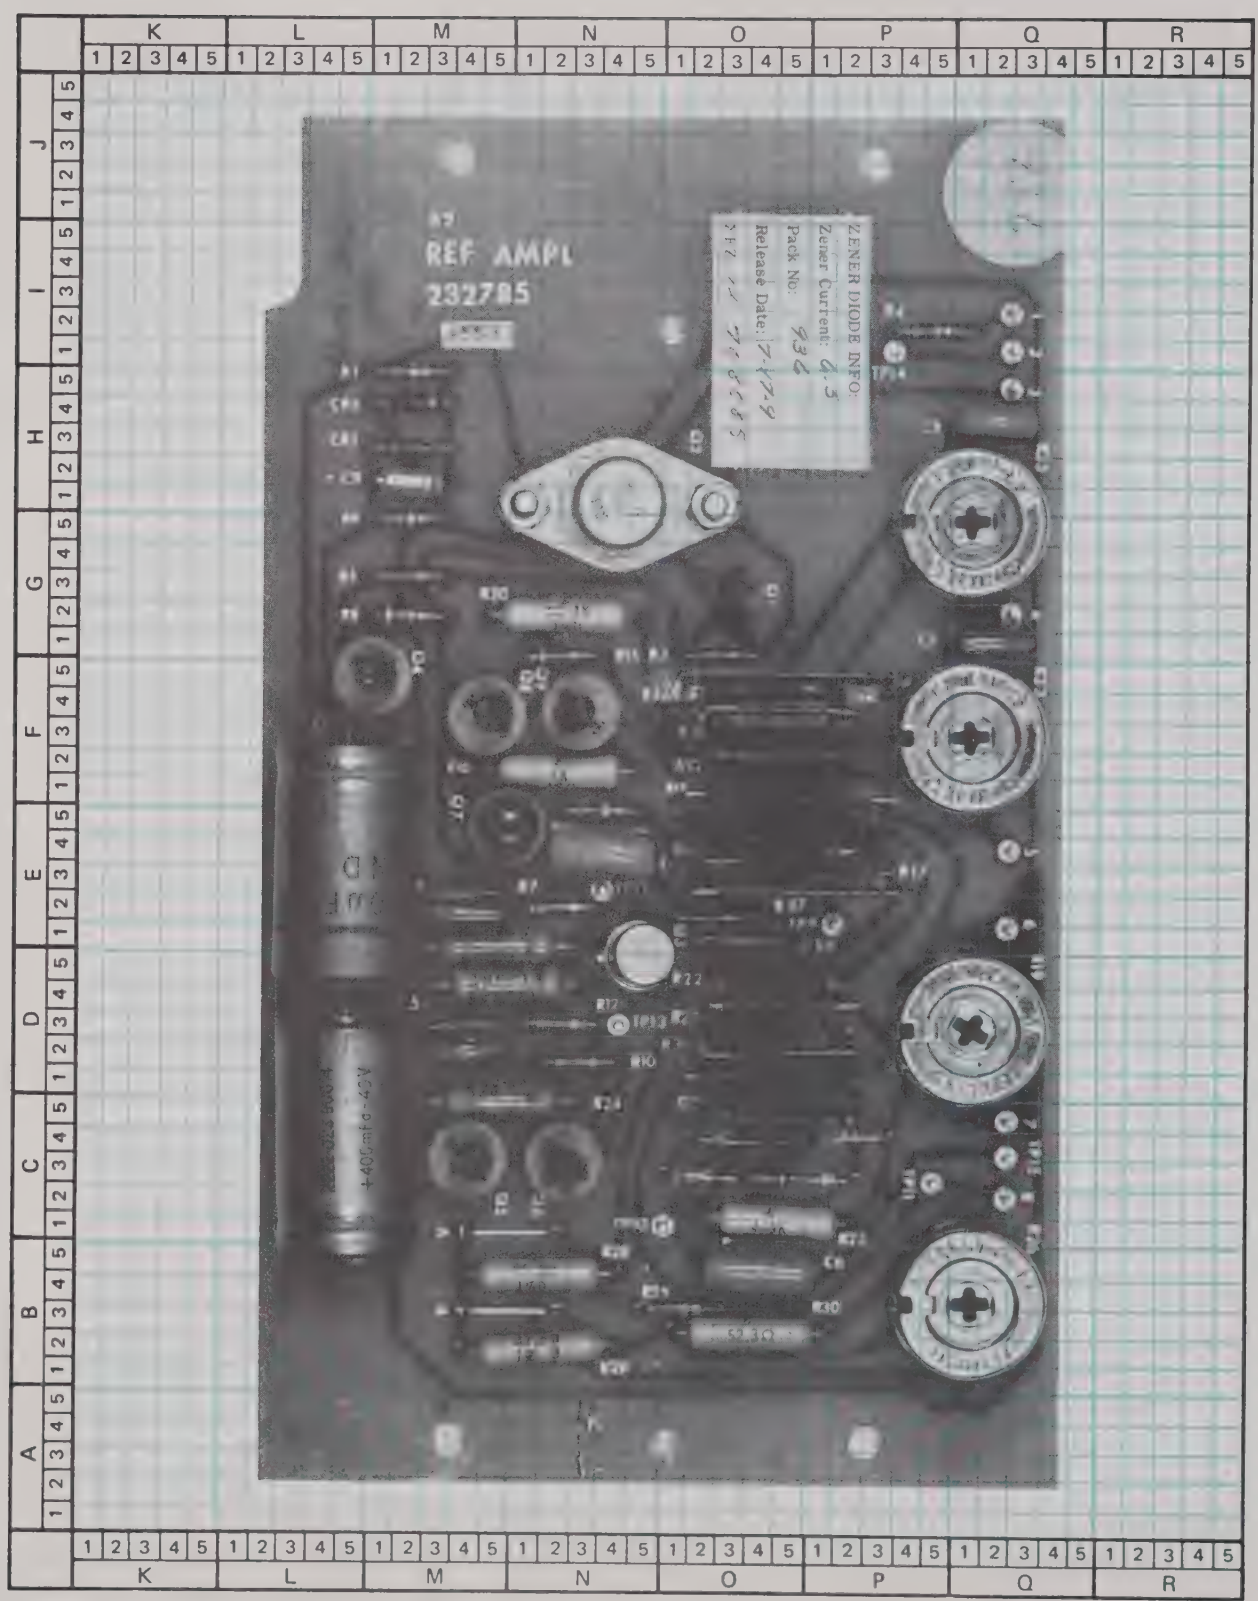

Figure 5-3. REFERENCE AMPLIFIER P/C ASSEMBLY

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
Q7	E5-M5	Tstr, silicon, PNP	203364	07263	2N3638	1	1	
Q8	F4-M5	Tstr, silicon, NPN	168708	03508	2N3391	REF		
Q9	F4-N3	Tstr, silicon, NPN	168708	03508	2N3391	REF		
R1	H5-M2	Res, comp, 15k ±5%, ¼w	148114	01121	CB1535	1		
R2		Res, comp, 27k ±5%, ¼w	148148	01121	CB2735	1		A
R3	G1-O3	Res, comp, 2.7k ±5%, ¼w	170720	01121	CB2725	1		
R4	I2-P5	Res, comp, 62k ±5%, ¼w	220053	01121	CB6235	1		
R5	G3-M2	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	7		
R6	E1-M5	Res, met flm, 196k ±1%, ½w	161513	75042	Type CEC-TO	2		
R7	E2-N2	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	REF		
R8	G2-M2	Res, comp, 47k ±5%, ¼w	148163	01121	CB4735	1		
R9	G5-M2	Res, comp, 680k ±5%, ¼w	188433	01121	CB6845	2		
R10	D2-N3	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	REF		
R11	D4-M5	Res, met flm, 196k ±1%, ½w	161513	75042	Type CEC-TO	REF		
R12	D3-N2	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	REF		
R13	E5-N4	Res, comp, 100k ±5%, ¼w	148189	01121	CB1045	2		
R14	E4-O5	Res, ww, matched	1					
R15	G1-N2	Res, comp, 3k ±5%, ¼w	193508	01121	CB3025	1		
R16	F2-N2	Res, met flm, 9k ±1%, ½w	159434	75042	Type CEC-TO	1		
R17	E3-P3	Res, ww, 4k ±0.03%, 1w	131672	89536	131672	1		
R18	F1-O2	Res, ww, 10k ±0.05%, 1w	131664	89536	131664	1		
R19	D4-Q2	Res, var, ww, 3k ±10%, 1¼w	112458	71450	Type 110	1		
R20	G2-N2	Res, met flm, 60.4k ±1%, ½w	161067	75042	Type CEC-TO	1		
R21	C5-O3	Res, ww, 12.525k, matched	2					
R22	D4-O3	Res, ww, 12.525k, matched	2					
R23	C1-O5	Res, met flm, 499k ±1%, ½w	151332	75042	Type CEC-TO	2		
R24	C5-N1	Res, met flm, 34k ±1%, ½w	151241	75042	Type CEC-TO	1		
R25	B3-O1	Res, comp, 22k ±5%, ¼w	148130	01121	CB2235	1		

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
R26	B4-Q2	Res, var, ww, 1k ±20%, 1¼w	111575	71450	Type 110	2		
R27	D2-O3	Res, ww, matched	1					
R28	B4-N2	Res, met flm, 95.3Ω ±1%, ½w	155127	75042	Type CEC-TO	1		
R29	B2-N2	Res, met flm, 47.5Ω ±1%, ½w	151290	75042	Type CEC-TO	1		
R30	B2-O4	Res, met flm, 52.3Ω ±1%, ½w	155069	75042	Type CEC-TO	1		
R31	D1-O2	Res, ww, 49.488k ±0.05%, 1w	163444	89536	163444	1		
R32	F2-O4	Res, ww, matched	1					
R33	F4-Q2	Res, var, ww, 25Ω ±10%, 1¼w	161703	71450	Type 110	2		
R34	F5-O2	Res, ww, 49.488k, matched	3					
R35	H1-Q2	Res, var, ww, 25Ω ±10%, 1¼w	161703	71450	Type 110	REF		
R36	F4-O3	Res, ww, 5.481k, matched	3					
R37	E2-O3	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	REF		M

1 CR3, CR4, R14, R27 & R32 are a factory matched set and must be replaced as an entire set. For replacement, order Zener-Resistor Set, part number 219303.

2 A2R21, A2R22/A3R12, A3R13, A3R15 & A3R16 are factory matched for tolerance and temperature coefficient. Individual resistors can be replaced by giving model, serial number, full reference designation and all information stamped on the resistor.

3 R34 & R36 are factory matched and must be replaced as a set. For replacement, order Reference Divider Resistor Set, part number 219295.

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A3		**REFERENCE INVERTER P/C ASSEMBLY - Figure 5-4** This assembly installed in the following instruments: 891A S/N 123 thru 265 891AR S/N 123 thru 192 For replacement, order the new assembly, part number, 250175 (893A-4002). NOTE: The Reference Amplifier P/C Assembly (A2), the Reference Inverter P/C Assembly (A3) and their intermatched resistor set can be ordered under one part number, 250209 (893A-4005).	232801 (891A-4002)	89536	232801	REF		G
C1	F3-T2	Cap, elect, 400 uf +50/−10%, 25v	168153	73445	C437ARF400	2	1	
C2	H5-P4	Cap, elect, 400 uf +50/−10%, 25v	168153	73445	C437ARF400	REF		
C3	E2-T4	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/ P100K	REF		
C4	G4-R4	Cap, elect, 5 uf +50/−10%, 64v	218966	73445	C426ARH5	2	1	
C5	G4- R2	Cap, elect, 5 uf +50/−10%, 64v	218966	73445	C426ARH5	REF		
C6	G2-T1	Cap, elect, 10 uf +75/−10%, 150v	106351	56289	30D106G150-DF4	1	1	
C7	G1-Q4	Cap, plstc, 0.47 uf ±20%, 600v	105494	72928	363-114M	2		
C8	G2-P2	Cap, plstc, 0.47 uf ±20%, 600v	105494	72928	363-114M	REF		
C9	I4-P5	Cap, plstc, 0.047 uf ±20%, 1.2 kv	182683	99217	MR473L12	REF		
CR1	E1-T4	Diode, germanium, 80 ma, 100 piv	149187	49956	IN270	3	1	
CR2	F3-R4	Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	6	1	
CR3	F3-R2	Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	REF		
CR4	F3-Q1	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	4	1	
CR5	G3-Q1	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	REF		
CR6	F3-P5	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	REF		
CR7	G3-P5	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	REF		
Q1	E1-S4	Tstr, silicon, NPN	183004	95303	40250	REF		
Q2	C3-S4	Tstr, silicon, NPN	183004	95303	40250	REF		
R1	E5-T5	Res, comp, 2Ω ±5%, ½w	218735	01121	EB20G5	1		
R2	E4-T4	Res, comp, 10k ±5%, ¼w	148106	01121	CB1035	4		
R3	D4-T5	Res, comp, 33Ω ±5%, ¼w	175034	01121	CB3305	2		
R4	D2-T4	Res, comp, 33Ω ±5%, ¼w	175034	01121	CB3305	REF		
R5	C1-T4	Res, var, ww, 1k ±20%, 1¼w	111575	71450	Type 110	REF		

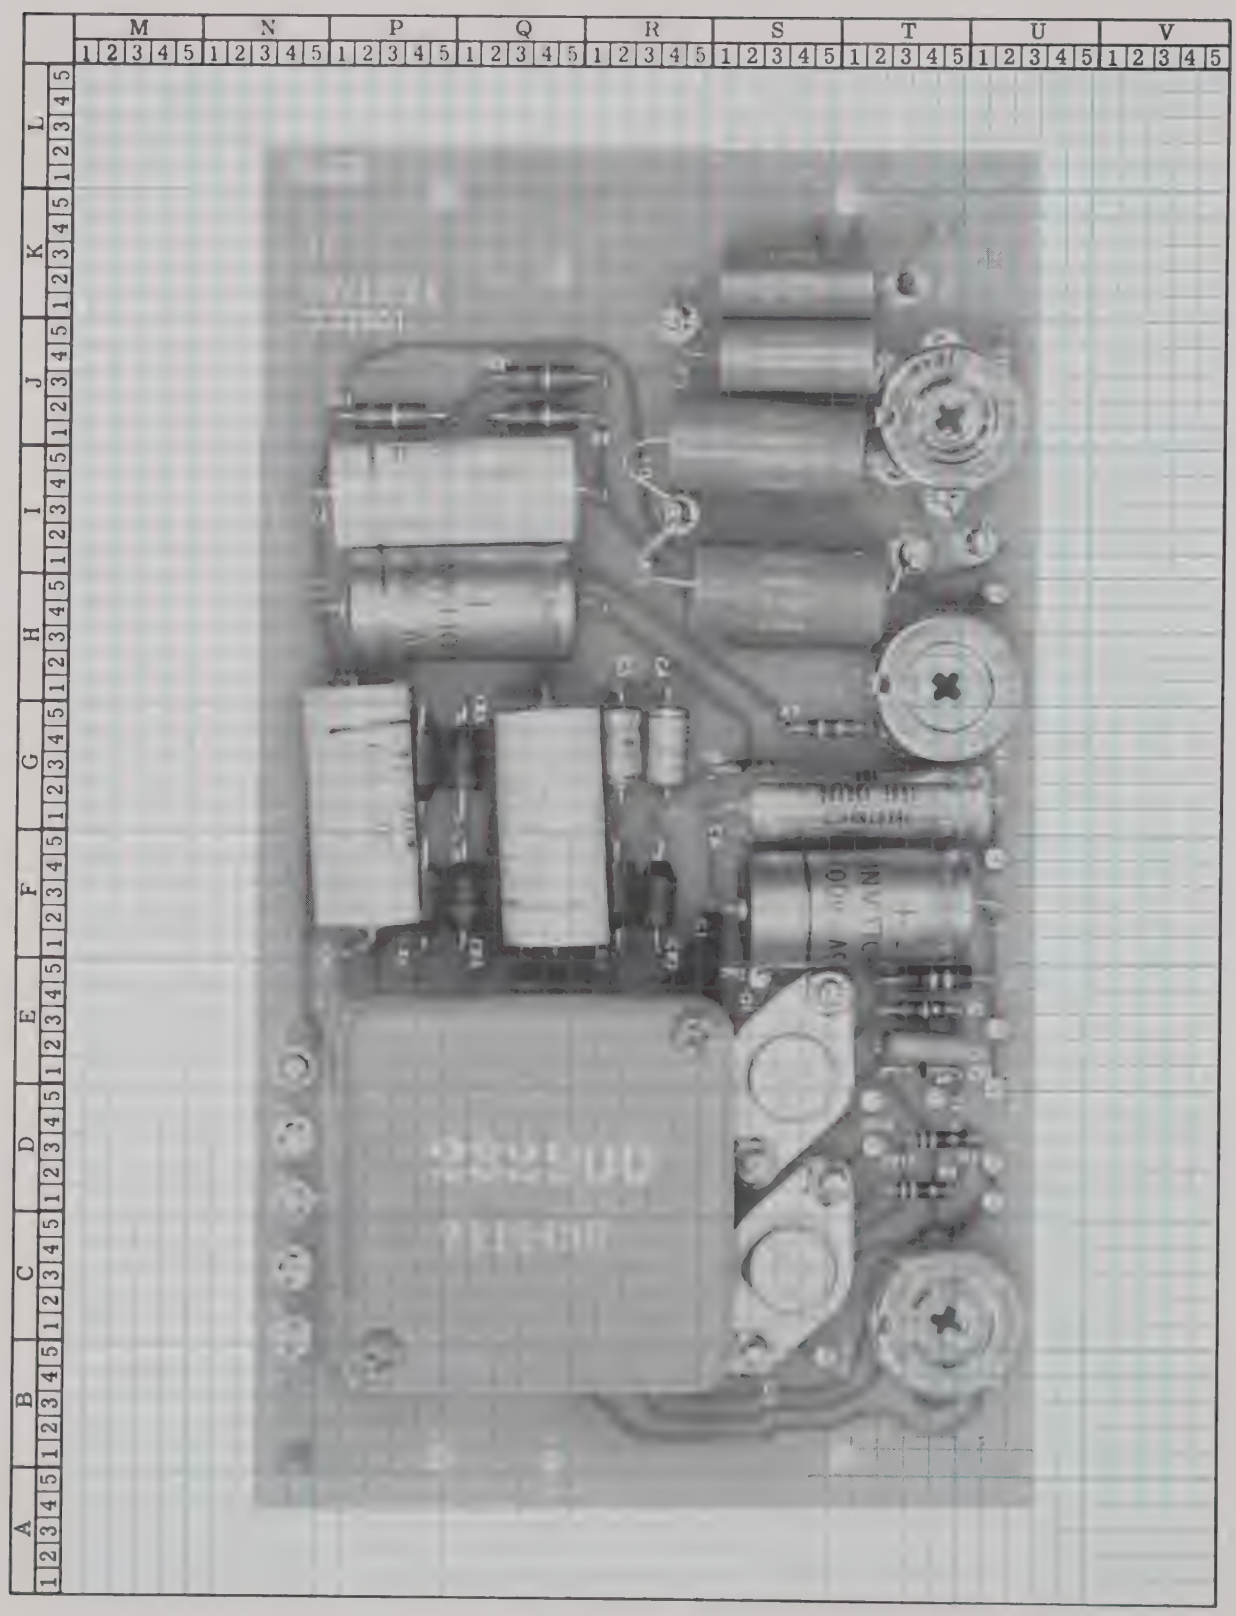

Figure 5-4. REFERENCE INVERTER P/C ASSEMBLY (891A S/N123 thru 265, 891AR S/N 123 thru 192)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
R6	C3-S2	Res, comp, 100Ω ±5%, ¼w	147926	01121	CB1015	1		
R7	G5-S5	Res, comp, 5.1k ±5%, ¼w	193342	01121	CB5125	1		
R8	H1-T4	Res, var, ww, 6k ±5%, 1¼w	113209	71450	Type 110	1		
R9	J2-Q4	Res, comp, 5.6M ±10%, ½w	178558	01121	EB5651	3		
R10	J3-Q4	Res, comp, 5.6M ±10%, ½w	178558	01121	EB5651	REF		
R11	J2-P3	Res, comp, 5.6M ±10%, ½w	178558	01121	EB5651	REF		
R12	H5-S4	Res, ww, 1M, matched	2					
R13	J1-S3	Res, ww, 1M, matched	2					
R14	J2-T4	Res, var, ww, 100Ω ±20%, 1¼w	112797	71450	Type 110	1		
R15	J4-S4	Res, ww, 98.582k, matched	2					
R16	K2-S4	Res, ww, 98.582k, matched	2					
T1	C5-Q5	Transformer, toroid	232900	89536	232900	1		

2 A2R21, A2R22/A3R12, A3R13, A3R15 & A3R16 are factory matched for tolerance and temperature coefficient. Individual resistors can be replaced by giving model, serial number, full reference designation and all information stamped on the resistor.

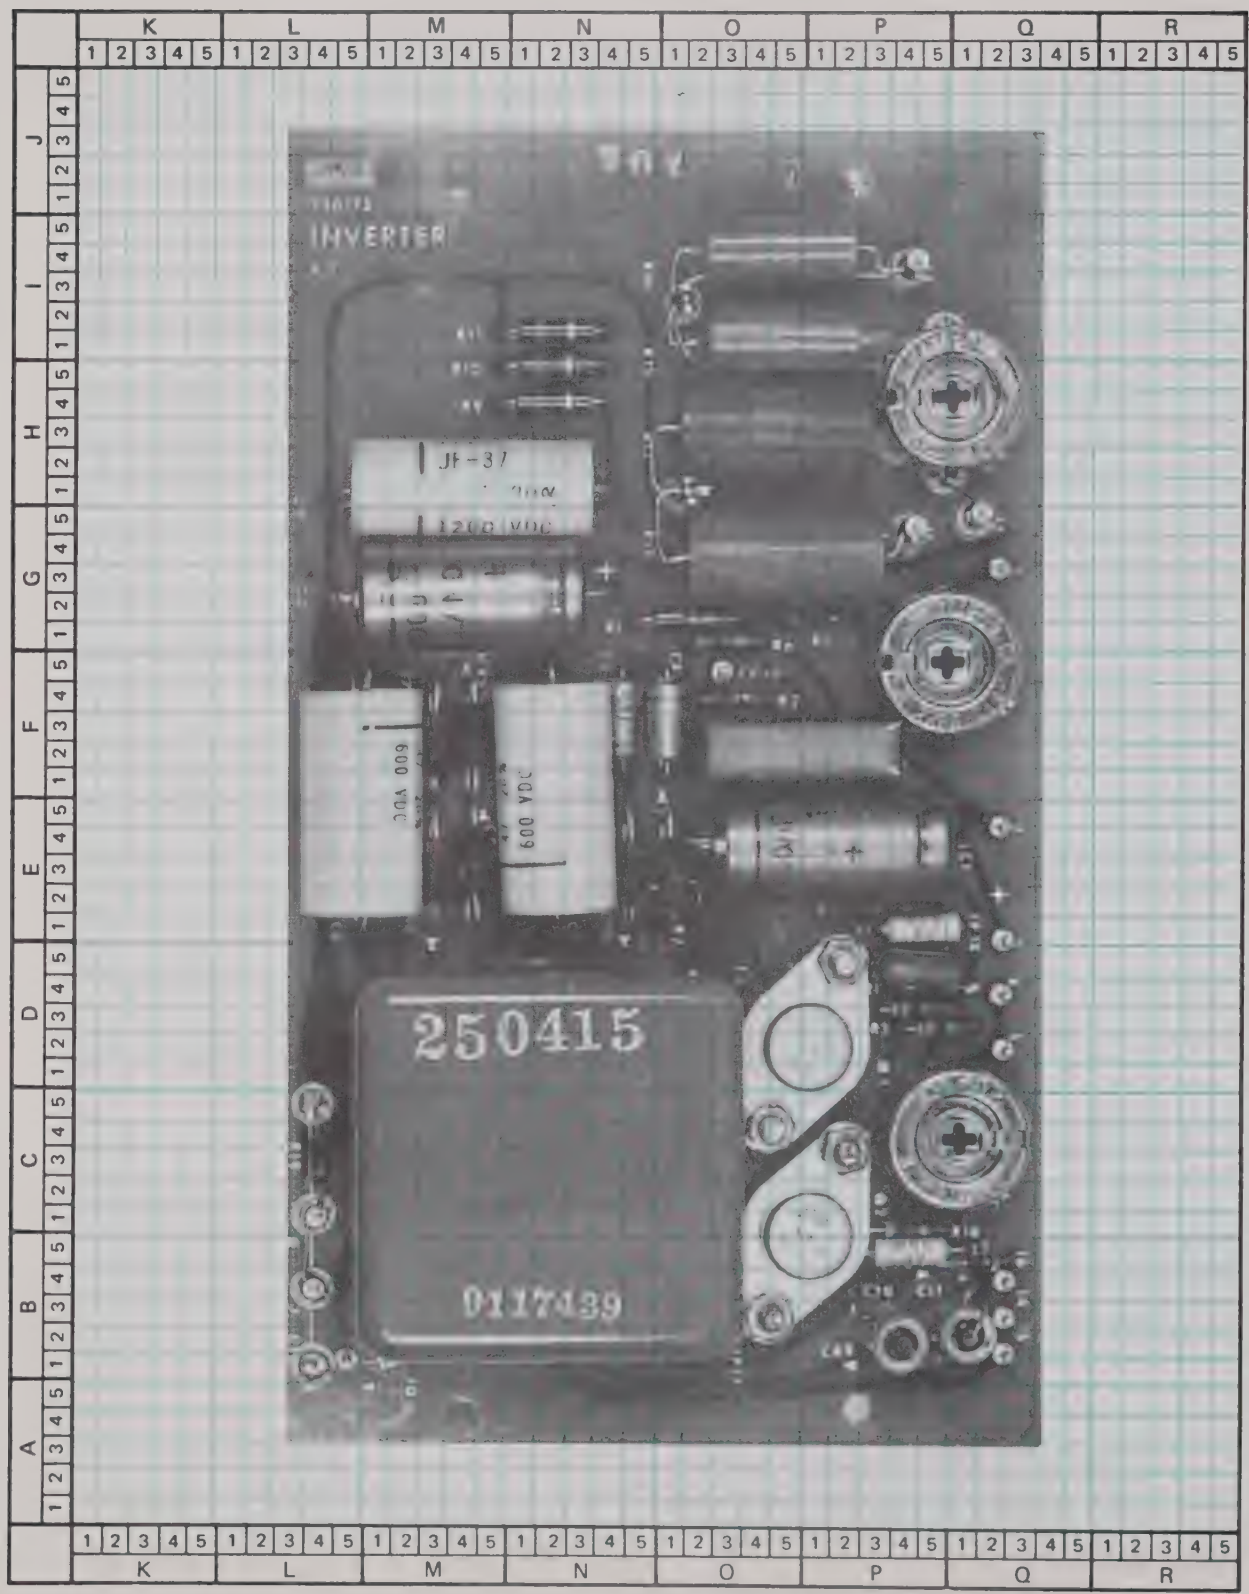

Figure 5-5. REFERENCE INVERTER P/C ASSEMBLY (891A S/N 266 and on; 891AR S/N 193 and on)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A3		**REFERENCE INVERTER P/C ASSEMBLY - Figure 5-5** This assembly installed in the following instruments: 891A S/N 266 and on 891AR S/N 193 and on Order this assembly for replacement for all serial numbers. NOTE: The Reference Amplifier P/C Assembly (A2), the Reference Inverter P/C Assembly (A3), and their intermatched resistor set can be ordered under one part number, 250209 (893A-4005).	250175 (893A-4002)	89536	250175	REF		H
C1	E4-P1	Cap, elect, 400 uf +50/−10%, 25v	168153	73445	C437ARF400	2	1	
C2	G3-M4	Cap, elect, 400 uf +50/−10%, 25v	168153	73445	C437ARF400	REF		
C3	D5-P4	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/ P100K	REF		
C4	F4-O1	Cap, elect, 5 uf +50/−10%, 64v	218966	73445	C426ARH5	2	1	
C5	F4-N5	Cap, elect, 5 uf +50/−10%, 64v	218966	73445	C426ARH5	REF		
C6	F2-O5	Cap, plstc, 1 uf ±20%, 250v	190330	73445	C280AE/ P1M	1	1	
C7	E5-N2	Cap, plstc, 0.47 uf ±20%, 600v	105494	72928	363-114M	2		
C8	E5-M1	Cap, plstc, 0.47 uf ±20%, 600v	105494	72928	363-114M	REF		
C9	H1-M4	Cap, plstc, 0.047 uf ±20%, 1.2 kv	182683	99217	MR473L12	REF		
C10	B2-P4	Cap, Ta, 68 uf ±10%, 15v	182824	05397	K68C15K	2		
C11	B2-Q1	Cap, Ta, 68 uf ±10%, 15v	182824	05397	K68C15K	REF		
C12	B2-L4	Cap, cer, 0.05 uf +80/−20%, 500v	105676	56289	33C58	1		M
CR1	D4-P5	Diode, germanium, 80 ma, 100 piv	149187	49956	IN270	5	1	
CR2	E3-O1	Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	6	1	
CR3	E3-N5	Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	REF		
CR4	E3-M4	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	4	1	
CR5	F3-M4	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	REF		
CR6	E3-M3	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	REF		
CR7	F3-M3	Diode, silicon, 1 amp, 600 piv	112383	05277	IN4822	REF		
CR8	B5-Q2	Diode, germanium, 80 ma, 100 piv	149187	49956	IN270	REF		
CR9	B1-P5	Diode, germanium, 80 ma, 100 piv	149187	49956	IN270	REF		
L1	E1-P5	Choke, 47 uh, 420 ma	147850	72259	WEE-47	2		M
L2	B5-P4	Choke, 47 uh, 420 ma	147850	72259	WEE-47	REF		M

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
Q1	D2-P1	Tstr, silicon, NPN	183004	95303	40250	REF		
Q2	C1-P1	Tstr, silicon, NPN	183004	95303	40250	REF		
R1	G2-O2	Res, comp, 2Ω ±5%, ½w	218735	01121	EB20G5	1		
R2	F4-O3	Res, comp, 10k ±5%, ¼w	148106	01121	CB1035	4		
R3	D3-P5	Res, comp, 33Ω ±5%, ¼w	175034	01121	CB3305	2		
R4	D4-P4	Res, comp, 33Ω ±5%, ¼w	175034	01121	CB3305	REF		
R5	C5-Q1	Res, var, ww, 1k ±20%, 1¼w	111575	71450	Type 110	REF		
R6	G1-O3	Res, comp, 100Ω ±5%, ¼w	147926	01121	CB1015	2		
R7	G2-P1	Res, comp, 5.1k ±5%, ¼w	193342	01121	CB5125	1		
R8	G1-Q1	Res, var, ww, 6k ±5%, 1¼w	113209	71450	Type 110	1		
R9	H4-N2	Res, comp, 5.6M ±10%, ½w	178558	01121	EB5651	3		
R10	H5-N2	Res, comp, 5.6M ±10%, ½w	178558	01121	EB5651	REF		
R11	I2-N2	Res, comp, 5.6M ±10%, ½w	178558	01121	EB5651	REF		
R12	G4-O4	Res, ww, 1M, matched	2					
R13	H3-O4	Res, ww, 1M, matched	2					
R14	H5-Q1	Res, var, ww, 100Ω ±20%, 1¼w	112797	71450	Type 110	1		
R15	I1-O4	Res, ww, 98.582k, matched	2					
R16	I4-O4	Res, ww, 98.582k, matched	2					
R17	E2-P3	Res, comp, 470Ω ±5%, ¼w	147983	01121	CB4715	2		M
R18	C1-P4	Res, comp, 470Ω ±5%, ¼w	147983	01121	CB4715	REF		M
R19	C3-L4	Res, comp, 100Ω ±5%, ¼w	147926	01121	CB1015	REF		M
T1	C1-N1	Transformer, toroid	250415	89536	250415	1		

2 A2R21, A2R22/A3R12, A3R13, A3R15 & A3R16 are factory matched for tolerance and temperature coefficient. Individual resistors can be replaced by giving model, serial number, full reference designation and all information stamped on the resistor.

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A4		**NULL DETECTOR P/C ASSEMBLY Figure 5-6**	232819 (891A-4003)	89536	232819	REF		
C1	G1-Q5	Cap, plstc, 0.1 uf ±20%, 120v	167460	99217	Type SEC	2		
C2	G4-Q5	Cap, plstc, 0.1 uf ±20%, 120v	167460	99217	Type SEC	REF		
C3	I2-R5	Cap, plstc, 0.047 uf ±10%, 80v	195099	56289	192P4739R8	1		
C4	H4-S5	Cap, cer, 3 pf ±10%, 500v	226316	00656	Type C1-1	1		
C5	G5-T1	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/ P100K	REF		
C6	J1-Q4	Cap, elect, 50 uf +50/–10%, 25v	168823	73445	C426ARF50	3	1	
C7	H3-Q3	Cap, plstc, 0.0047 uf ±20%, 200v	106054	56289	192P47202	1		
C8	J1-S2	Cap, plstc, 0.01 uf ±10%, 200v	168450	14655	DMF2S1	1		
C9	K1-Q5	Cap, elect, 50 uf +50/–10%, 25v	168823	73445	C426ARF50	REF		
C10	I3-Q3	Cap, mica, 2,200 pf ±5%, 500v	148346	14655	CD19F222J	1		
C11	J4-Q5	Cap, elect, 50 uf +50/–10%, 25v	168823	73445	C426ARF50	REF		
C12	E1-Q5	Cap, elect, 10 uf +50/–10%, 25v	170266	73445	C426ARF10	1	1	
C13	E3-Q5	Cap, elect, 400 uf + 50/–10%, 4v	187773	73445	C426ARB400	1	1	
C14	C2-S2	Cap, plstc, 0.022 uf ±5%, 200v	233973	56289	192P22352	2		
C15	C3-S2	Cap, plstc, 0.022 uf ±5%, 200v	233973	56289	192P22352	REF		
C16	D1-P3	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/ P100K	REF		N
C17	B5-P3	Cap, plstc, 0.1 uf ±20%, 250v	161992	73445	C280AE/ P100K	REF		N
C18	D3-P3	Cap, elect, 125 uf +50/–100%, 16v	186296	73445	C426ARE125	2	1	
C19	C2-P3	Cap, elect, 125 uf +50%–10%, 16v	186296	73445	C426ARE125	REF		
C20	F1-S4	Cap, elect, 80 uf +50/–10%, 16v	192914	73445	C426ARE80	1	1	
CR1	F4-S3	Diode, silicon, treated	180885	89536	180885	2	1	
CR2	F4-S2	Diode, silicon, treated	180885	89536	180885	REF		
CR3	C5-P3	Diode, germanium, 80 ma, 100 piv	149187	49956	IN270	REF		
CR4	B4-P2	Diode, germanium, 80 ma, 100 piv	149187	49956	IN270	REF		
Q1	H4-R5	Tstr, MOS, P-channel	229674	07263	2N4065	1	1	I
	H4-R5	Tstr, MOS, P-channel	226043	07263	FT704	1	1	J
Q2	I1-Q4	Tstr, silicon, NPN	194456	89536	194456	1	1	I
	I1-Q4	Tstr, silicon, NPN	242065	04713	2N5089	2	1	J
Q3	I3-P3	Tstr, silicon, NPN	168716	07263	S19254	1		I
	I3-P3	Tstr, silicon, NPN	242065	04713	2N5089	REF		J

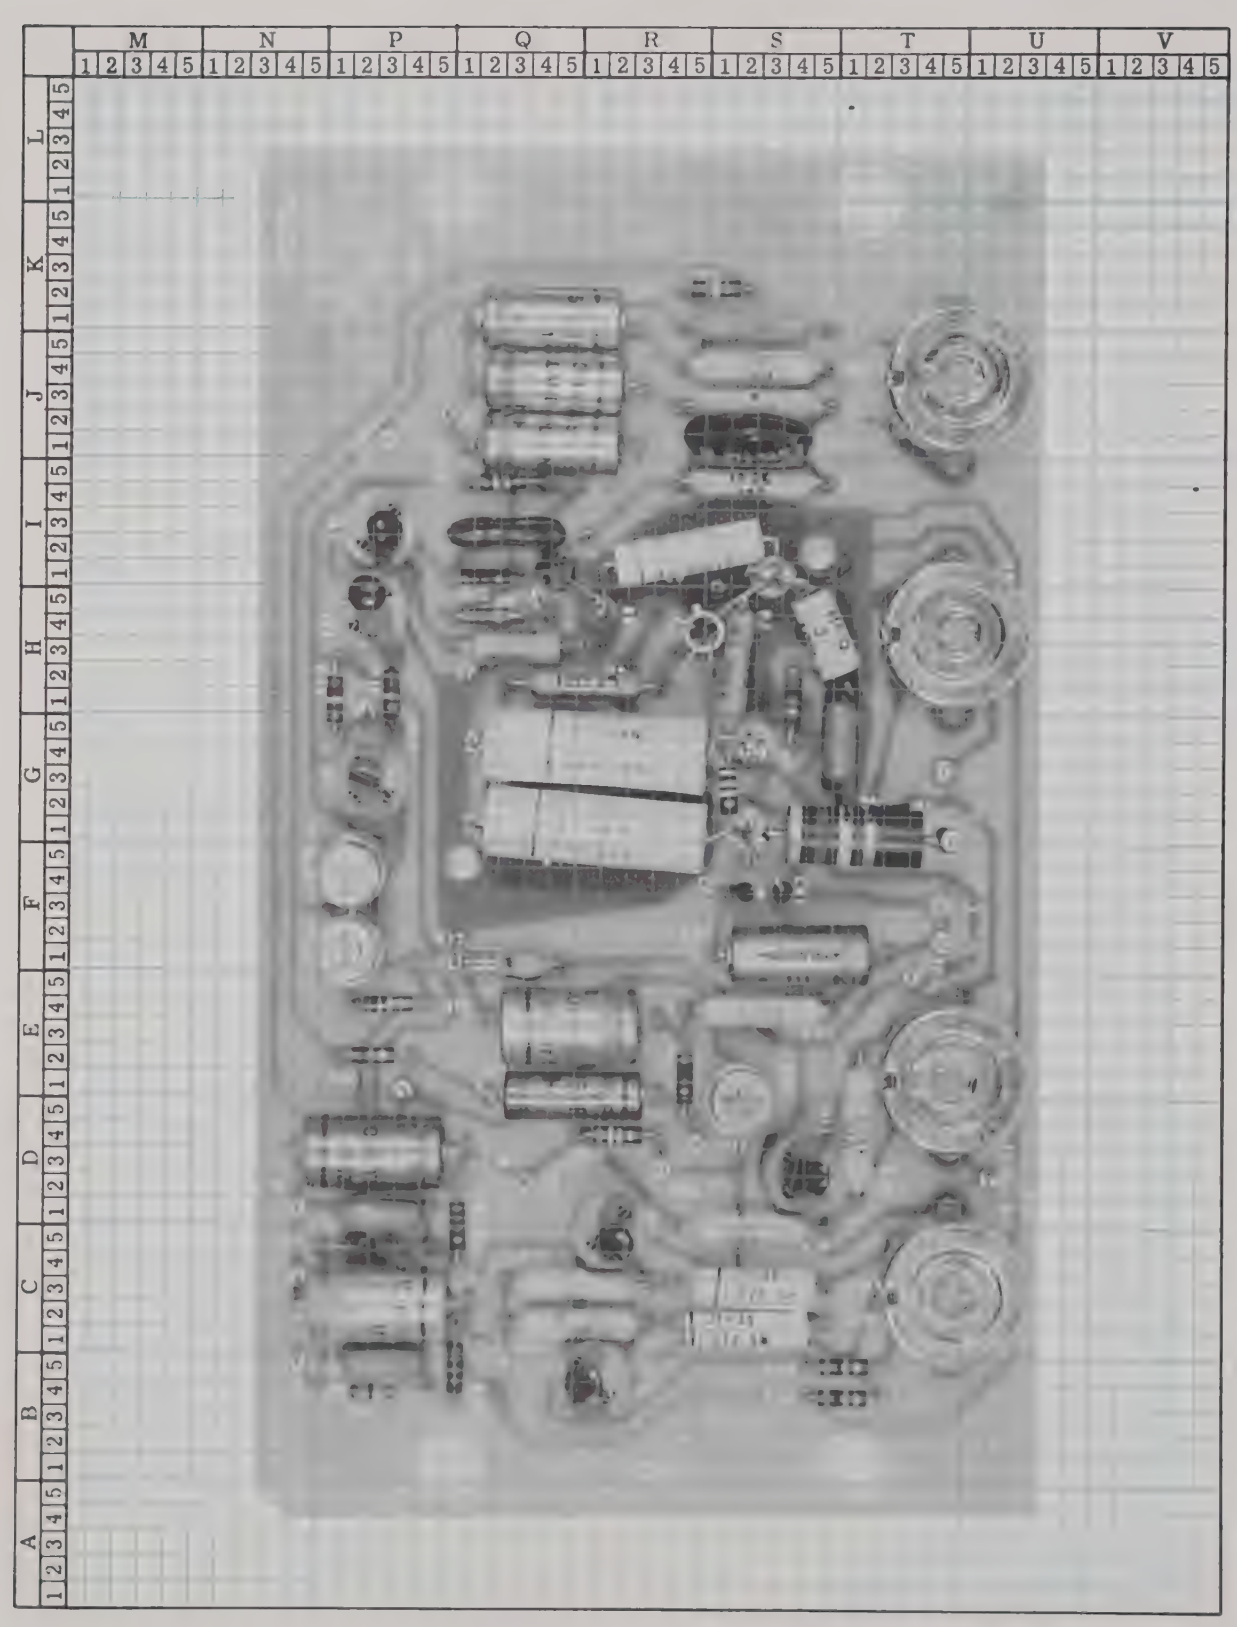

Figure 5-6. NULL DETECTOR P/C ASSEMBLY

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
Q4	H5-P2	Tstr, silicon, NPN	168708	03508	2N3391	REF		
Q5	G3-P2	Tstr, silicon, PNP	229898	04713	MPS6522	REF		
Q6	F4-P2	Tstr, germanium, NPN	117127	01295	2N1304	1		
Q7	F1-P2	Tstr, germanium, PNP	190298	95303	2N1305	1	1	
Q8	D5-S2	Tstr, germanium, NPN	182691	01295	GA2875	1	1	
Q9	C5-R2	Tstr, silicon, NPN	168708	03508	2N3391	REF		
Q10	B4-R1	Tstr, silicon, NPN	168708	03508	2N3391	REF		
Q11	D2-S5	Tstr, silicon, NPN	168708	03508	2N3391	REF		
R1	G1-S5	Res, comp, 470k ±10%, 2w	110247	01121	HB4741	1		
R2	G3-S1	Res, comp, 470k ±5%, ¼w	188441	01121	CB4745	1		
R3	H3-S2	Res, car flm, 330k ±1%, ½w	107359	75042	Type C12	1		
R4	G2-T1	Res, comp, 56Ω ±5%, ¼w	147900	01121	CB5605	1		
R5	H3-T4	Res, var, ww, 500Ω ±10%, 1¼w	112433	71450	Type 110	1		
R6	H2-R1	Res, car flm, 10Ω ±1%, ½w	107789	75042	Type C12	1		
R7	H1-S4	Res, comp, 10M ±5%, ¼w	194944	01121	CB1065	1		
R8	H5-R1	Res, comp, 3.3M ±10%, ½w	108282	01121	EB3351	1		
R9	H5-Q2	Res, comp, 1.5M ±5%, ¼w	182857	01121	CB1555	1		
R10	J4-S2	Res, met flm, 169Ω ±1%, ½w	151183	75042	Type CEC-TO	2		
R11	K2-S1	Res, comp, 680k ±5%, ¼w	188433	01121	CB6845	REF		
R12	I1-Q2	Rec, comp, 1M ±5%, ¼w	182204	01121	CB1055	1		
R13	I5-Q2	Res, comp, 27k ±5%, ¼w	148148	01121	CB2735	2		
R14	H1-P3	Res, comp, 10k ±5%, ¼w	148106	01121	CB1035	REF		
R15	I5-S2	Res, met flm, 42.2k ±1%, ½w	182501	75042	Type CEC-TO	1		E
R15	I5-S2	Res, met flm, 80.6k ±1%, ½w	150680	75042	Type CEC-TO	1		F
R16	J3-S2	Res, met flm, 169Ω ±1%, ½w	151183	75042	Type CEC-TO	REF		
R17	J3-T4	Res, var, ww, 10k ±20%, 1¼w	112862	71450	Type 110	4		
R18	K1-S2	Res, met flm, 17.8k ±1%, ½w	162545	75042	Type CEC-TO	1		E
R18	K1-S2	Res, met flm, 10k ±1%, ½w	151274	75042	Type CEC-TO	1		F
R19	E4-P3	Res, comp, 27k ±5%, ¼w	148148	01121	CB2735	REF		

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
R20	E2-P2	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	REF		
R21	E1-R5	Res, comp, 1k ±5%, ¼w	148023	01121	CB1025	REF		
R22	E4-S3	Res, met flm, 2.55k ±1%, ½w	176362	75042	Type CEC-TO	2		
R23	D4-R2	Res, comp, 39k ±5%, ¼w	188466	01121	CB3935	1		
R24	C2-Q5	Res, met flm, 383k ±1%, ½w	176388	75042	Type CEC-TO	1		
R25	C3-Q5	Res, met flm, 499k ±1%, ½w	151332	75042	Type CEC-TO	REF		
R26	B4-T1	Res, comp, 10k ±5%, ¼w	148106	01121	CB1035	REF		
R27	C2-T4	Res, var, ww, 10k ±20%, 1¼w	112862	71450	Type 110	REF		
R28	B5-T1	Res, comp, 10k ±5%, ¼w	148106	01121	CB1035	REF		
R29	D1-S2	Res, met flm, 825Ω ±1%, ½w	155119	75042	Type CEC-TO	1		E
R29	D1-S2	Res, met flm, 309Ω ±1%, ½w	172130	75042	Type CEC-TO	1		F
R30	D4-T1	Res, met flm, 2.55k ±1%, ½w	176362	75042	Type CEC-TO	REF		
R31	E1-T4	Res, var, ww, 10k ±20%, 1¼w	112862	71450	Type 110	REF		
R32	F1-Q1	Res, car flm, 10k ±1%, ½w	107128	75042	Type C12	1		
R33	D1-Q1	Res, comp, 110Ω ±5%, ¼w	193474	01121	CB1115	2		N
R34	B5-Q1	Res, comp, 110Ω ±5%, ¼w	193474	01121	CB1115	REF		N
R35	H1-P1	Res, comp, 100k ±5%, ¼w	148189	01121	CB1045	REF		
		Shield (not illustrated)	232082	89536	232082	1		

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A5		**KELVIN-VARLEY P/C ASSEMBLY - Figure 5-7**	232827 (891A-4004)	89536	232817	REF		
C1	G1-R4	Cap, plstc, 1 uf ±20%, 200v	106450	84411	Type X633F	1		
C2	F3-R5	Cap, plstc, 1 uf ±20%, 120v	193748	84411	JF-11	1		
R1	G3-S4	Res, ww, 100k	4					
R2	G4-S4	Res, ww, 100k						
R3	H1-S4	Res, ww, 100k						
R4	H3-S4	Res, ww, 100k						
R5	H4-S4	Res, ww, 100k						
R6	I1-S4	Res, ww, 100k						
R7	I3-S4	Res, ww, 100k						
R8	I4-S5	Res, ww, 100k						
R9	I5-S5	Res, ww, 100k						
R10	J2-S5	Res, ww, 100k						
R11	J4-S4	Res, ww, 100k						
R12	K1-S4	Res, ww, 100k						
R13	G2-R1	Res, ww, 20k						
R14	H3-Q3	Res, ww, 20k						
R15	H4-Q3	Res, ww, 20k						
R16	H5-Q3	Res, ww, 20k						
R17	H5-Q4	Res, ww, 20k						
R18	I3-Q3	Res, ww, 20k						
R19	I5-Q3	Res, ww, 20k						
R20	J2-Q3	Res, ww, 20k						
R21	J3-Q3	Res, ww, 20k						
R22	J5-Q3	Res, ww, 20k						
R23	J5-Q4	Res, ww, 20k						
R24	G5-P2	Res, ww, 4k						
R25	H1-P2	Res, ww, 4k						
R26	H3-P2	Res, ww, 4k						
R27	H5-P2	Res, ww, 4k						
R28	I1-P2	Res, ww, 4k	4					

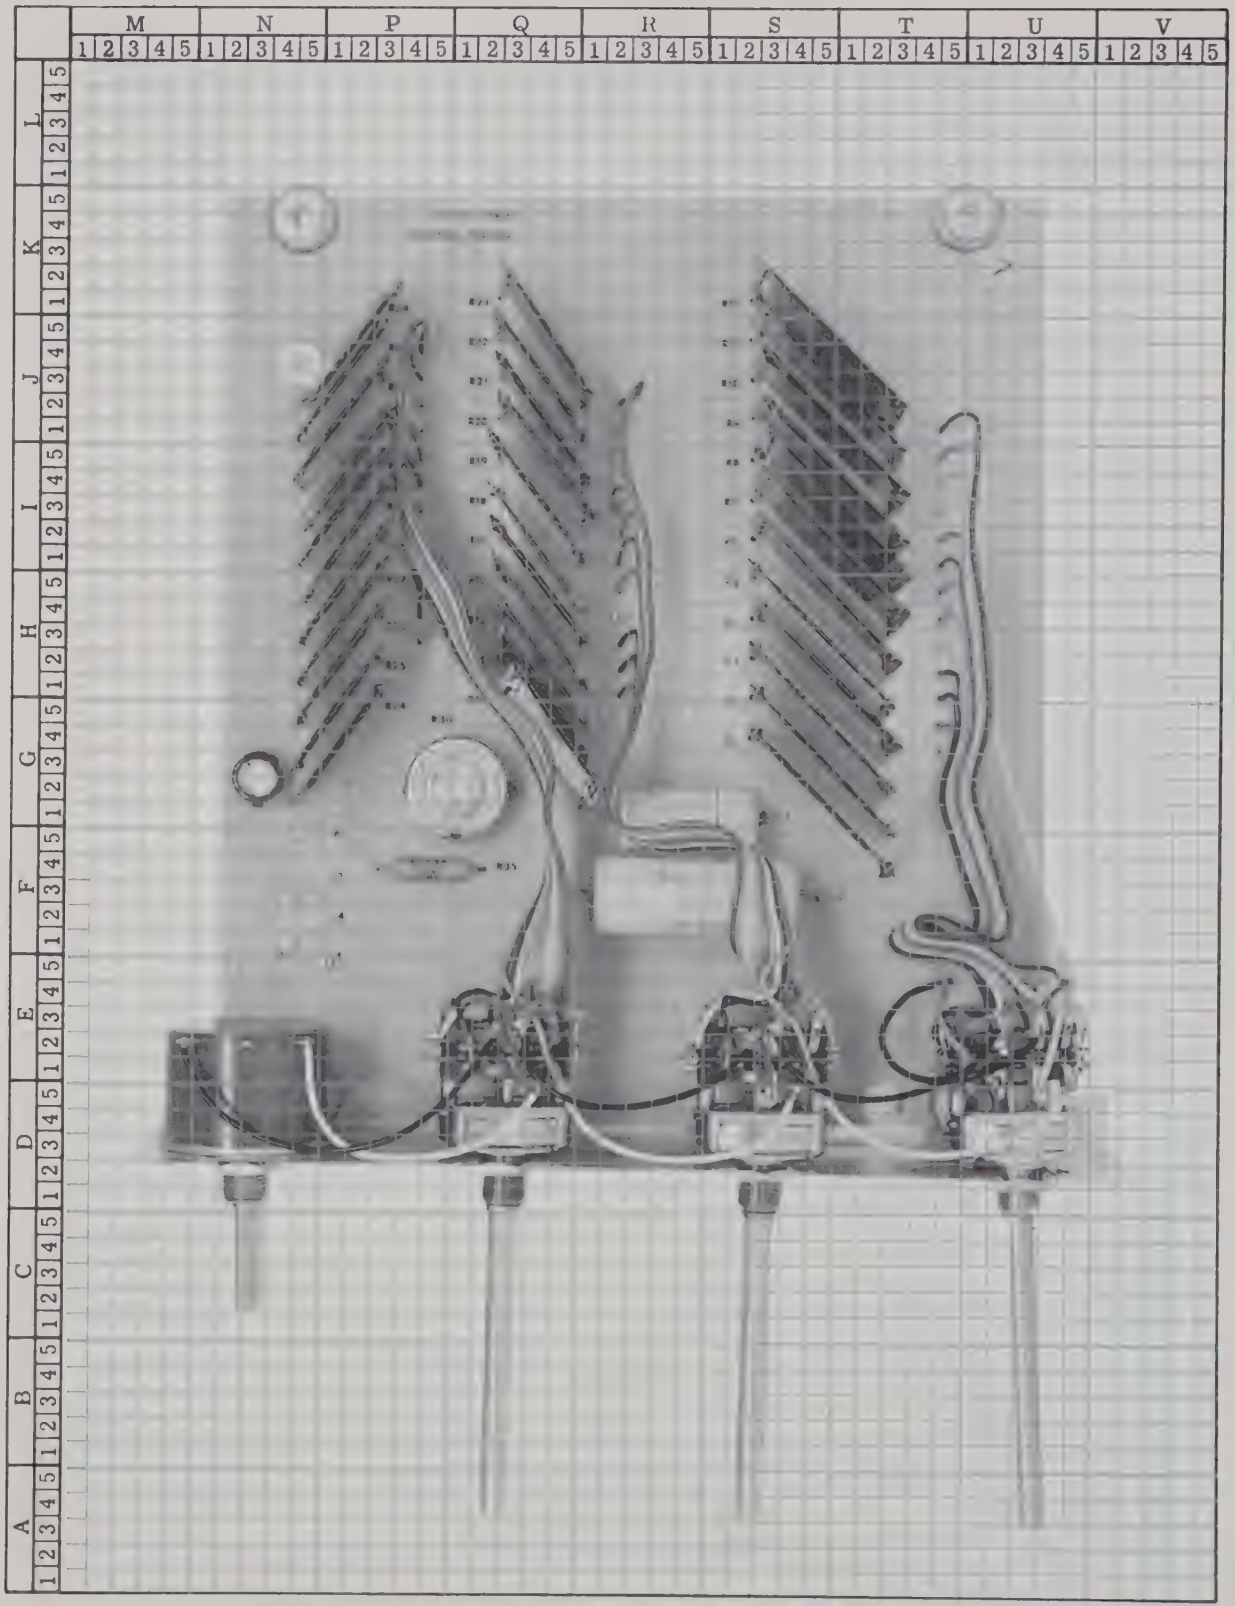

Figure 5-7. KELVIN–VARLEY P/C ASSEMBLY

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
R29	I1-P1	Res, ww, 4k	4					
R30	I4-P2	Res, ww, 4k						
R31	I5-P2	Res, ww, 4k						
R32	J1-P1	Res, ww, 4k						
R33	J1-N5	Res, ww, 4k						
R34	J4-P1	Res, ww, 4k	4					
R35	F4-P5	Res, met flm, 34k ±1%, ½w	151241	75042	Type CEC-TO	REF		N
R35	F4-P5	Res, met flm, 34.8k ±1%, ½w	236711	75042	Type CEC-TO	1		O
R36	G2-P5	Res, var, ww, 10k ±20%, 1¼w	112862	71450	Type 110	REF		
R37	E1-N3	Res, var, ww, 10k ±2.5%	232868	89536	232868	1		
S6	D4-U2	Switch, rotary, KV Dial "A"	242891	89536	242891	1		
S7	D4-S2	Switch, rotary, KV Dial "B"	242909	89536	242909	2		
S8	D4-Q4	Switch, rotary, KV Dial "C"	242909	89536	242909	REF		
		Cover (not illustrated)	235697	89536	235697	1		

4 R1 through R34 are factory matched for tolerance and temperature coefficient. Individual resistors can be replaced by giving model, serial number, full reference designation and all information stamped on the resistor.

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A7		**REAR PANEL ASSEMBLY (891A) Figure 5-8**						
CR1		Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	REF		
CR2		Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	REF		
CR3		Diode, silicon, 1 amp, 100 piv (not illustrated)	116111	05277	IN4817	REF		
CR4		Diode, silicon, 1 amp, 100 piv (not illustrated)	116111	05277	IN4817	REF		
F1		Fuse, slow blow, 1/8 amp, 250v (for 115v operation) (not illustrated)	166488	71400	Type MDL	1	2	
F1		Fuse, slow blow, 1/16 amp, 250v (for 230v operation) (not illustrated)	163030	71400	Type MDL	1	2	
J4		Connector, male, 3 contact	222612	82389	AC3G	1		
S5		Switch, slide	226274	82389	46256-LF	1		
T1		Transformer, power	223990	89536	223990	1		
XF1		Holder, fuse	160846	75915	342004	1		
19		Panel, rear	231928	89536	231928	1		

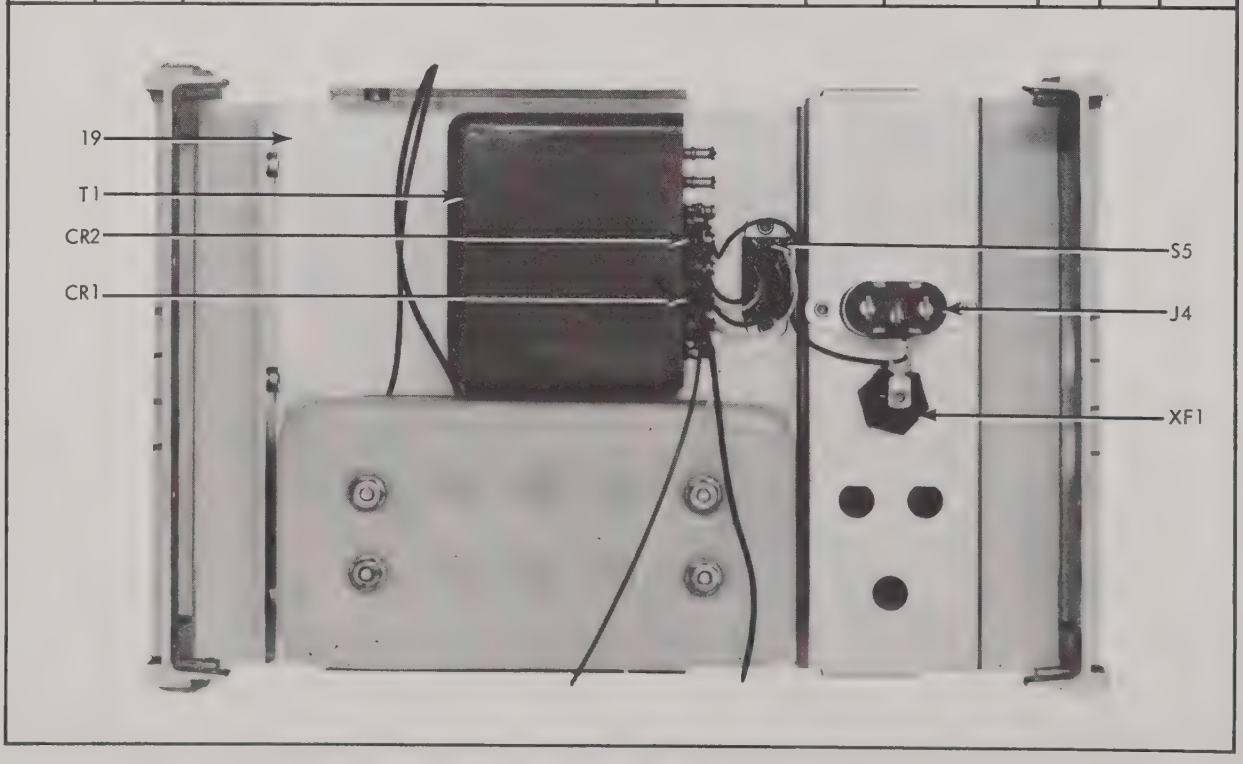

Figure 5-8. REAR PANEL ASSEMBLY (891A)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
		DC DIFFERENTIAL VOLTMETER Figure 5-9	891AR					
A1		Front Panel Assembly (See Figure 5-10)						
A2		Reference Amplifier P/C Assembly (See Figure 5-3)	232793 (891A-4001)	89536	232793	1		
A3		Reference Inverter P/C Assembly (See Figure 5-4)	232801 (891A-4002)	89536	232801	1		G
A3		Reference Inverter P/C Assembly (See Figure 5-5)	250175 (891A-4002)	89536	250175	1		H
A4		Null Detector P/C Assembly (See Figure 5-6)	232819 (891A-4003)	89536	232819	1		
A5		Kelvin-Varley P/C Assembly (See Figure 5-7)	232827 (891A-4004)	89536	232827	1		
A7		Rear Panel Assembly (See Figure 5-11)						
M1		Meter, 100-0-100 ua	236513	89536	236513	1		
P1, P2		Line cord	226100	91934	2270	1		
R1		Res, car flm, 90M ±1%, 2w	192138	75042	MEHT-X	1		
R2		Res, car flm, 9M ±0.5%, 1w	107557	75042	Type C13	1		
R3		Res, car flm, 1M ±1%, ½w	107219	75042	Type C12	1		
R4		Res, car flm, 90k ±0.5%, ½w	107292	75042	Type C12	1		
R5		Res, car flm, 9k ±0.5%, ½w	107250	75042	Type C12	1		
R6		Res, car flm, 900Ω ±0.5%, ½w	107771	75042	Type C12	1		
R7		Res, car flm, 100Ω ±0.5%, ½w	107730	75042	Type C12	1		
R9		Res, comp, 1k ±10%, 1w	109371	01121	GB1021	1		
R10		Res, comp, 100k ±5%, ½w	168054	01121	EB1045	1		M
S1		Switch, rotary, RANGE	242867	89536	242867	1		
S2		Switch, rotary, POWER	242917	89536	242917	1		
S3		Switch, rotary, NULL	242875	89536	242875	1		
S4		Switch, rotary, POLARITY	242883	89536	242883	1		
20		Coupler, power switch	104505	89536	104505	1		
21		Cover, bottom (not illustrated)	230383	89536	230383	1		
22		Cover, top (not illustrated)	230375	89536	230375	1		
23		Dial, 0-9	232215	89536	232215	2		
24		Dial, 0-10	232207	89536	232207	1		
25		Dial, 0-100	242859	89536	242859	1		

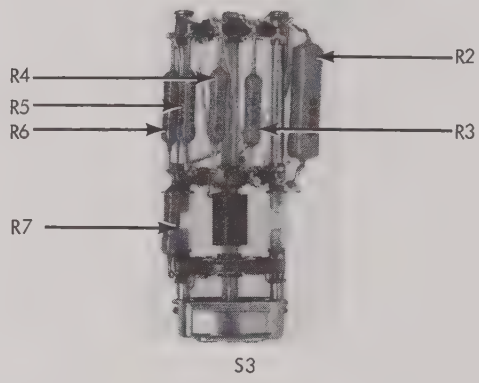

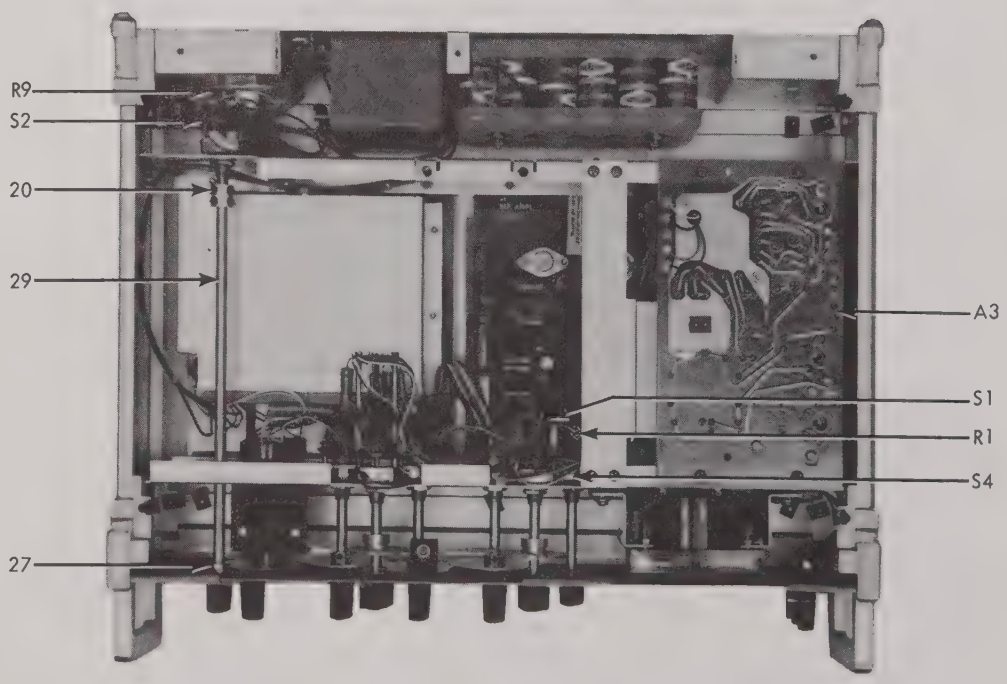

Figure 5-9. 891AR DC DIFFERENTIAL VOLTMETER (Sheet 1 of 2)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
26		Foot, plastic (not illustrated)	230037	89536	230037	4		
27		Indicator, ON-OFF flag	231886	89536	231886	1		
28		Rack Mounting Kit (not illustrated)	243287	89536	243287	1		
29		Shaft, power switch	231860	89536	231860	1		
30		Tilt stand (not illustrated)	231407	89536	231407	1		
31		Trin strip, front (not illustrated)	230813	89536	230813	2		
32		Trim strip, rear (not illustrated)	231852	89536	231852	2		
33		Trim strip, side insert (not illustrated)	230888	89536	230888	2		

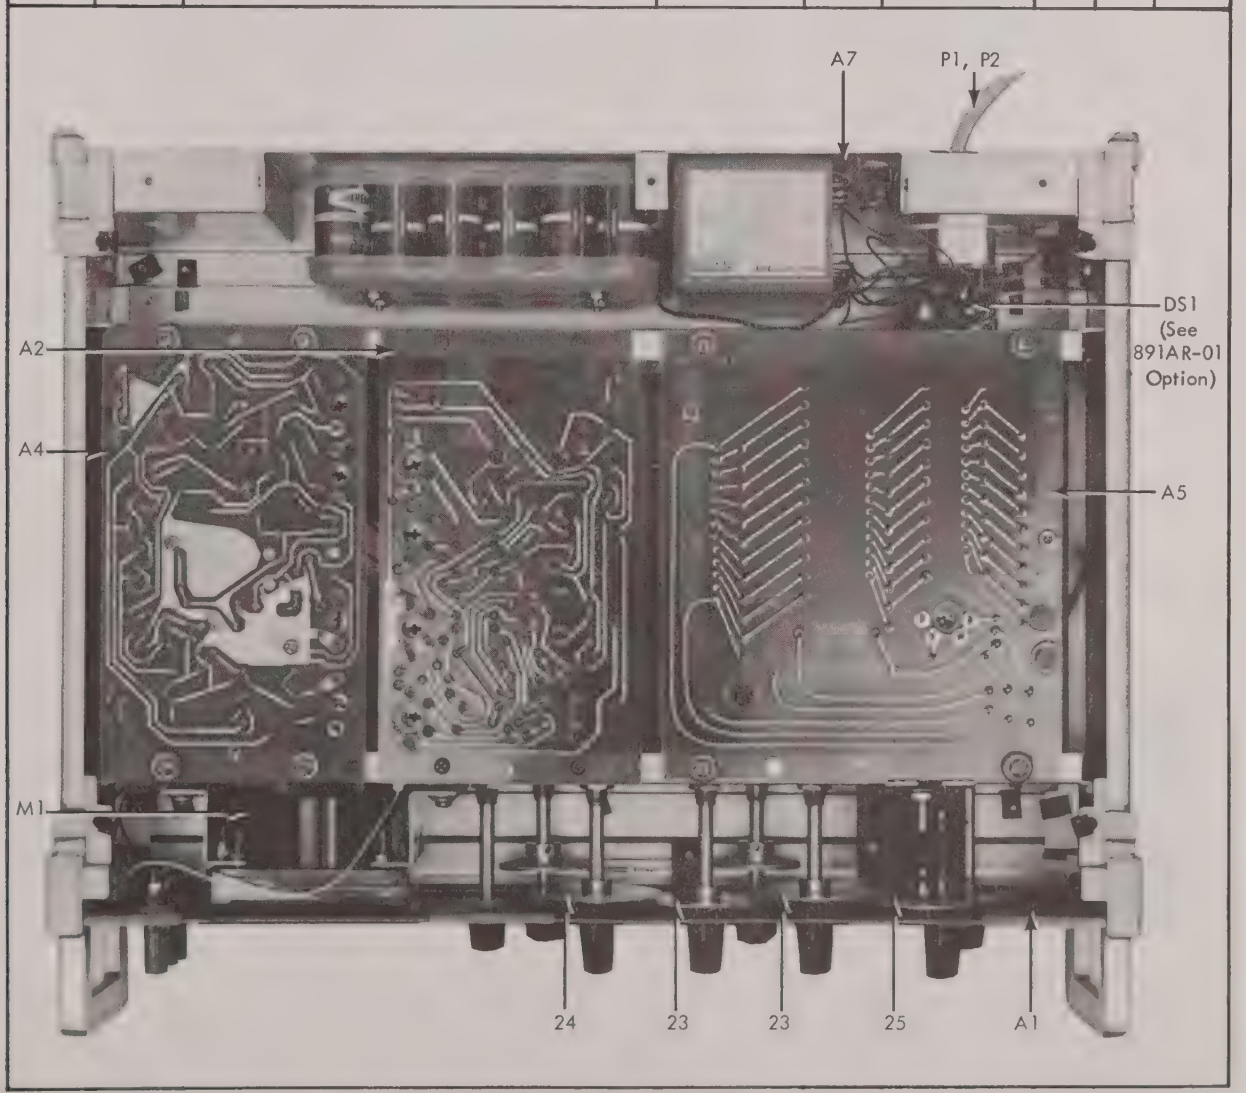

Figure 5-9. 891AR DC DIFFERENTIAL VOLTMETER (Sheet 2 of 2)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A1		**FRONT PANEL ASSEMBLY (891AR) - Figure 5-10**						
C1		Cap, plstc, 0.047 uf ±20%, 1.2 kv	182683	99217	MR473L12	2		
J1		Binding post, red, HI	226308	58474	DF21RC	2		
J2		Binding post, red, LO	226308	58474	DF21RC	REF		
J3		Binding post, black, GROUND	226282	58474	DF21BC	1		
R8		Res, comp, 100M ±10%, ½w	190520	01121	EB1071	1		
34		Handle	231647	89536	231647	2		
35		Knob, Digit	158949	89536	158949	4		
36		Knob, NULL SENS, POLARITY, RANGE	158956	89536	158956	3		
37		Knob, POWER	235689	89536	235689	1		
38		Link, shorting	101220	24655	938L	1		
39		Panel, front	231787	89536	231787	1		

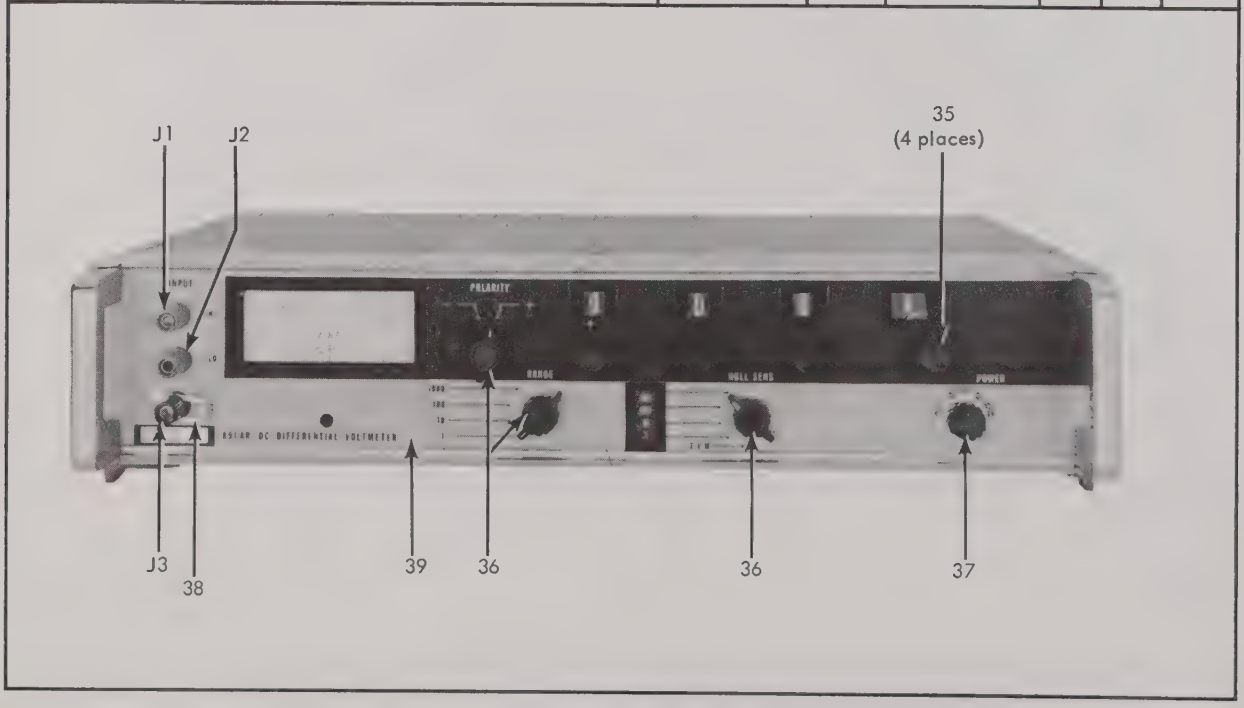

Figure 5-10. FRONT PANEL ASSEMBLY (891AR)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
A7		**REAR PANEL ASSEMBLY (891AR) - Figure 5-11**						
CR1		Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	REF		
CR2		Diode, silicon, 1 amp, 100 piv	116111	05277	IN4817	REF		
CR3		Diode, silicon, 1 amp, 100 piv (not illustrated)	116111	05277	IN4817	REF		
CR4		Diode, silicon, 1 amp, 100 piv (not illustrated)	116111	05277	IN4817	REF		
F1		Fuse, slow blow, 1/8 amp, 250v (for 115v operation) (not illustrated)	166488	71400	Type MDL	1	2	
F1		Fuse, slow blow, 1/16 amp, 250v (for 230v operation) (not illustrated)	163030	71400	Type MDL	1	2	
J4		Connector, male, 3 contact	222612	82389	AC3G	1		
S5		Switch, slide	226274	82389	46256-LF	1		
T1		Transformer, power	223990	89536	223990	1		
XF1		Holder, fuse	160846	75915	342004	1		
40		Panel, rear	231795	89536	231795	1		

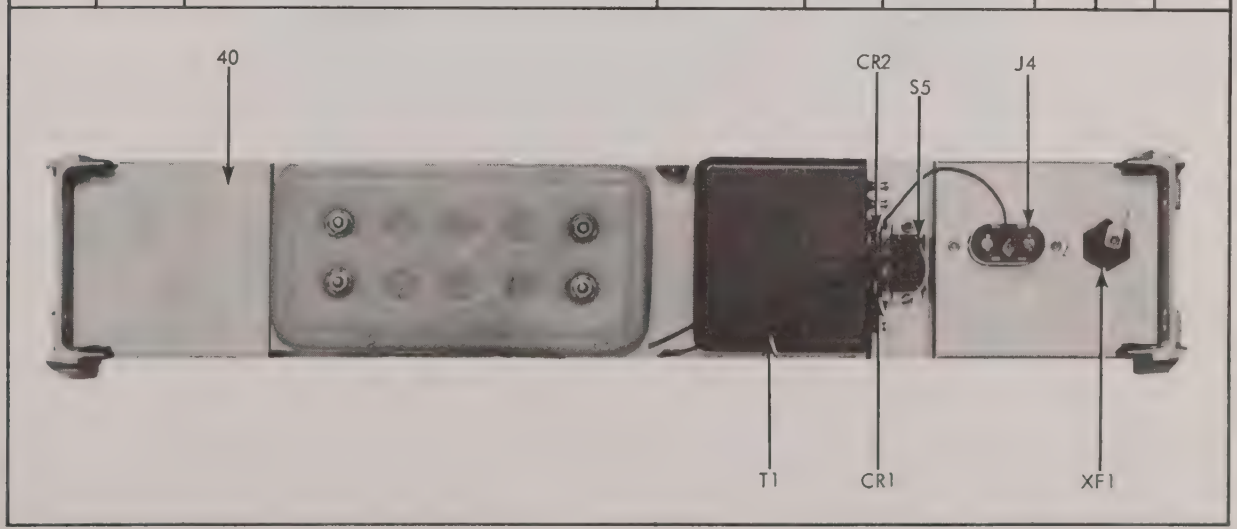

Figure 5-11. REAR PANEL ASSEMBLY (891AR)

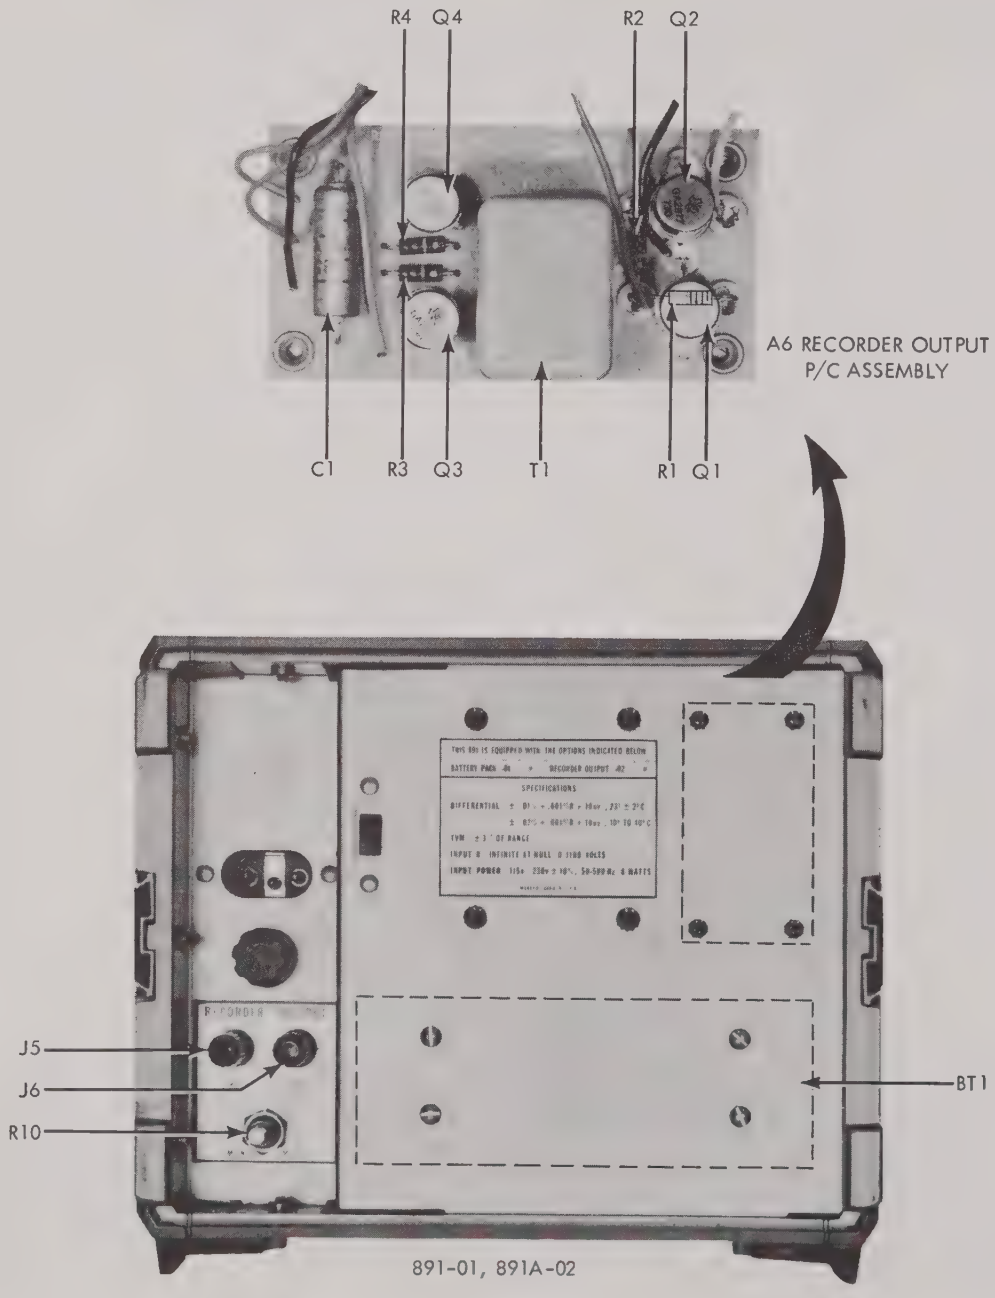

Figure 5-12. BATTERY AND RECORDER OUTPUT OPTIONS

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
		DC DIFFERENTIAL VOLTMETER - BATTERY OPTION - Figure 5-12	891A-01 891AR-01					
		NOTE: The basic Model 891A or 891AR can be modified in the field by installing the Battery Option Kit, part number 2906-242420. The kit includes BT1, DS1 and the power knob.						
BT1		Battery pack	232496	89536	232496	1		
		Battery, Ni-Cad, 1.2v	160390	83740	C1.2T	18		
		Holder, battery	232488	89536	232488	2		
DS1		Lamp, incandescent, 24v (See Figures 5-1 and 5-9)	218354	71744	1252	1		
		Knob, POWER	235671	89536	235671	1		
		DC DIFFERENTIAL VOLTMETER-RECORDER OUTPUT OPTION Figure 5-12	891A-02 891AR-02					
		NOTE: The basic Model 891A or 891AR can be modified in the field by installing the Recorder Output Option Kit, part number 2906-242438. The kit includes J5, J6, R10, R11 and the A6 P/C assembly.						
A6		Recorder Output P/C Assembly (See Figure 5-12)	239301 (891A-4201)	89536	239301	1		
J5		Binding post, red, HI	226308	58474	DF21RC	1		
J6		Binding post, black, LO	226282	58474	DF21BC	1		
R10		Res, var, comp, 10k ±20%, ½w	162800	12697	Series 37	1		
R11		Res, comp, 10k ±5%, ¼w (mounted on R10)	148106	01121	CB1035	1		
A6		**RECORDER OUTPUT P/C ASSEMBLY Figure 5-12**	239301 (891A-4201)	89536	239301	REF		
C1		Cap, elect, 10 uf +50%–10%, 25v	170266	73445	C426ARF10	1	1	
Q1		Tstr, germanium, NPN	182691	01295	GA2875	2	1	
Q2		Tstr, germanium, PNP	182709	01295	GA2877	2	1	
Q3		Tstr, germanium, PNP	182709	01295	GA2877	REF		
Q4		Tstr, germanium, NPN	182691	01295	GA2875	REF		

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
R1		Res, comp, 22k ±5%, ¼w	148130	01121	CB2235	4		
R2		Res, comp, 22k ±5%, ¼w	148130	01121	CB2235	REF		
R3		Res, comp, 22k ±5%, ¼w	148130	01121	CB2235	REF		
R4		Res, comp, 22k ±5%, ¼w	148130	01121	CB2235	REF		
T1		Transformer, recorder output	242347	89536	242347	1		

5-9. SERIAL NUMBER EFFECTIVITY

5-10. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 891A and 891AR. Each part for which a use code has been assigned may be identified with a particular instrument serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all instruments with serial numbers above 123.

USE CODE	EFFECTIVITY
NO CODE	Model 891A and 891AR serial number 123 and on.
A	Model 891A serial number 123 thru 125.
B	Model 891A serial number 126 and on.
C	Model 891A serial number 123 thru 237. Model 891AR serial number 123 thru 192.
D	Model 891A serial number 238 and on. Model 891AR serial number 193 and on.
E	Model 891A serial number 123 thru 262. Model 891AR serial number 123 thru 192.
F	Model 891A serial number 263 and on. Model 891AR serial number 193 and on.
G	Model 891A serial number 123 thru 265. Model 891AR serial number 123 thru 192.
H	Model 891A serial number 266 and on. Model 891AR serial number 193 and on.
I	Model 891A serial number 123 thru 267. Model 891AR serial number 123 thru 232.
J	Model 891A serial number 268 and on. Model 891AR serial number 233 and on.
K	Model 891A serial number 318 and on. Model 891AR serial number 233 and on.
L	Model 891A serial number 123 thru 363. Model 891AR serial number 123 thru 272.
M	Model 891A serial number 364 and on. Model 891AR serial number 273 and on.
N	Model 891A serial number 123 thru 367. Model 891AR serial number 123 thru 272.
O	Model 891A serial number 368 and on. Model 891AR serial number 273 and on.

APPENDIX A

FEDERAL SUPPLY CODE FOR MANUFACTURERS

A-1. CODE TO NAME

A-2. The following five-digit code numbers are listed in numerical sequence along with the manufacturer's name and address to which the code has been assigned. The Federal Supply Code has been taken from Cataloging Handbook H 4-2, Code to Name.

00213	Sage Electronics Corp. Rochester, New York
00327	Welwyn International, Inc. Westlake, Ohio
00656	Aerovox Corp New Bedford, Massachusetts
00779	AMP Inc. Harrisberg, Pennsylvania
01121	Allen-Bradley Co. Milwaukee, Wisconsin
01281	TRW Semiconductors Lawndale, California
01295	Texas Instruments, Inc. Semiconductor Components Div. Dallas, Texas
01686	RCL Electronics Inc. Manchester, New Hampshire
01730	Deleted
01884	Dearborn Electronics Inc. Orlando, Florida
02114	Ferroxcube Corp Saugerties, New York
02606	Replaced by 15801
02660	Amphenol-Borg Elect. Corp. Broadview, Illinois
02799	Arco Capacitors, Inc. Los Angeles, California
03614	Replaced by 71400
03651	Replaced by 44655
03797	Eldema Corp. Compton, California
03877	Transitron Electronic Corp. Wakefield, Massachusetts
03888	Pyrofilm Resistor Co., Inc. Cedar Knolls, New Jersey
03911	Clairex Corp. New York, New York
03980	Muirhead Instruments, Inc. Mountainside, New Jersey
04009	Arrow Hart and Hegemen Electronic Company Hartford, Connecticut
04062	Replaced by 72136
04202	Replaced by 81312
04217	Essex Wire Corp Wire & Cable Div. Anaheim, California
04221	Aemco Div. of Midtex Inc. Mankato, Minnesota
04645	Replaced by 75376
04713	Motorola Semiconductor Products Inc. Phoenix, Arizona
05082	Replaced by 94154
05236	Jonathan Mfg. Co. Fullerton, California
05277	Westinghouse Electric Corp. Semiconductor Dept. Youngwood, Pennsylvania
05278	Replaced by 43543
05397	Union Carbide Corp. Electronics Div. Cleveland, Ohio
05571	Sprague Electric Co Pacific Div. Los Angeles, California
05704	Alac, Inc. Glendale, California
05820	Wakefield Engineering Ind. Wakefield, Massachusetts
06001	General Electric Company Capacitor Department Irmo, South Carolina
06136	Replaced by 63743
06473	Amphenol Space & Missile Sys. Chatsworth, California
06555	Beede Electrical Instrument Co. Penacook, New Hampshire
06739	Electron Corp. Littletown, Colorado
06743	Clevite Corp. Cleveland, Ohio
06751	Semcor Div. Components Phoenix, Arizona
06860	Gould National Batteries Inc. City of Industry, California
06980	Eitel-McCullough, Inc. San Carlos, California
07115	Replaced by 14674
07138	Westinghouse Electric Corp Electronic Tube Div. Elmira, New York
07263	Fairchild Semiconductor Div. of Fairchild Camera & Instrument Corp. Mountain View, California
07344	Bircher Co., Inc. Rochester, New York
07792	Lerma Engineering Corp Northampton, Massachusetts
07910	Continental Device Corp. Hawthorne, California
08530	Reliance Mica Corp. Brooklyn, New York
08792	CBS Electronics Semiconductor Operations-Div. of CBS Inc. Lowell, Massachusetts
08806	General Electric Co. Miniature Lamp Dept. Cleveland, Ohio
08863	Nylomatic Corp. Norrisville, Pennsylvania
08988	Skottie Electronics Inc. Archbald, Pennsylvania
09922	Burndy Corp. Norwalk, Connecticut
11237	Chicago Telephone of Calif. Inc. South Pasadena, California
11358	CBS Electronics Div. of CBS Inc. Newburyport, Massachusetts
11403	Best Products Co. Chicago, Illinois
11503	Keystone Mfg Div. of Avis Industrial Corp. Warren, Michigan
12014	Chicago Rivet & Machine Co. Bellwood, Illinois
12040	National Semiconductor Corp. Danburry, Connecticut
12060	Diodes, Inc. Chatsworth, California
12136	Philadelphia Handle Co. Camden, New Jersey
12323	Presin Co., Inc. Shelton, Connecticut
12327	Freeway Washer & Stamping Co. Cleveland, Ohio
12400	Replaced by 75042
12617	Hamlin Inc. Lake Mills, Wisconsin
12697	Clarostat Mfg. Co. Dover, New Hampshire
12749	James Electronics Chicago, Illinois

12856	Micrometals Sierra Madre, California
12954	Dickson Electronics Corp. Scottsdale, Arizona
13606	Sprague Electric Co. Transistor Div. Concord, New Hampshire
13859	Replaced by 23732
14099	Semtech Corp. Newbury Park, California
14193	California Resistor Corp. Santa Monica, California
14298	American Components, Inc. Conshohocken, Pennsylvania
14655	Cornell-Dubilier Electronics Newark, New Jersey
14674	Corning Glass Works Corning, New York
14752	Electro Cube Inc. San Gabriel, California
14869	Replaced by 96853
15636	Elec-Trol Inc. Northridge, California
15801	Fenwal Electronics Inc. Framingham, Massachusetts
15818	Amelco Semiconductor Div. of Teledyne Inc. Mountain View, California
15849	Useco, Inc. Mt. Vernon, New York
15909	Replaced by 17870
16332	Replaced by 28478
16473	Cambridge Scientific Ind. Inc. Cambridge, Maryland
16742	Paramount Plastics Downey, California
16758	Delco Radio Div. of General Motors Kokomo, Indiana
17069	Circuit Structures Lab. Upland, California
17856	Siliconix, Inc. Sunnyvale, California
17870	Daven-Div. of Thomas A. Edison Ind. --McGraw-Edison Co. Manchester, New Hampshire
18083	Deleted
18178	Vactec Inc. Maryland Heights, Missouri
18736	Voltronics Corp. Hanover, New Jersey
19429	Montronics, Inc. Seattle, Washington
19451	Perine Machinery & Supply Co. Seattle, Washington
19701	Electra Mfg. Co. Independence, Kansas
20584	Enochs Mfg. Co. Indianapolis, Indiana
22767	ITT Semiconductors Div. of ITT Palo Alto, California
23732	Tracor Rockville, Maryland
24248	Southco Div. of South Chester Corp. Lester, Pennsylvania
24655	General Radio Co. West Concord, Massachusetts
25403	Amperex Electronic Corp Semiconductor & Receiving Tube Division Slatersville, Rhode Island
28478	Deltrol Controls Corp. Milwaukee, Wisconsin
28520	Heyman Mfg. Co. Kenilworth, New Jersey
30323	Illinois Tool Works Inc. Chicago, Illinois
33173	General Electric Co. Tube Dept. Owensboro, Kentucky
37942	Mallory, P. R., & Co., Inc. Indianapolis, Indiana
38315	Honeywell Inc. Precision Meter Div. Manchester, New Hampshire
42498	National Company Melrose, Massachusetts
43543	Nytronics Inc. Transformer Co. Div. Alpha, New Jersey
44655	Ohmite Mfg. Co. Skokie, Illinois
49671	Radio Corp. of America New York, New York
49956	Raytheon Company Lexington, Maine
53021	Sangamo Electric Co. Springfield, Illinois
55026	Simpson Electric Company Chicago, Illinois
56289	Sprague Electric Co. North Adams, Massachusetts
58474	Superior Electric Co. Bristol, Connecticut
60399	Torrington Mfg. Co. Torrington, Connecticut
62460	Deleted
63743	Ward Leonard Electric Co. Mount Vernon, New York
64834	West Mfg. Co. San Francisco, California
65092	Weston Instruments Inc. Newark, New Jersey
66150	Winslow Tele-Tronics Inc. Asbury Park, New Jersey
70563	Amperite Company Union City, New Jersey
70903	Belden Mfg. Co. Chicago, Illinois
71002	Birnbach Radio Co., Inc. New York, New York
71400	Bussmann Mfg. Div. of McGraw-Edison Co. St. Louis, Missouri
71450	CTS Corp. Elkhart, Indiana
71468	ITT Cannon Electric Inc. Los Angeles, California
71482	Clare, C P & Co. Chicago, Illinois
71590	Centralab Div. of Globe Union Inc. Milwaukee, Wisconsin
71707	Coto Coil Co., Inc. Providence, Rhode Island
71744	Chicago Miniature Lamp Works Chicago, Illinois
71785	Cinch Mfg. Co. & Howard B Jones Div. Chicago, Illinois
72005	Driver, Wilber B., Co. Newark, New Jersey
72092	Replaced by 06980
72136	Electro Motive Mfg. Co. Willimantic, Connecticut
72259	Nytronics Inc. Berkeley Heights, New Jersey
72354	Deleted
72619	Dialight Corp Brooklyn, New York
72653	G. C. Electronics Rockford, Illinois
72665	Replaced by 90303
72794	Dzus Fastener Co., Inc. West Islip, New York
72928	Gudeman Co. Chicago, Illinois
72982	Erie Tech. Products Inc. Erie, Pennsylvania
73138	Beckman Instruments Inc. Helipot Division Fullerton, California
73293	Hughes Aircraft Co. Electron Dynamics Div. Newport Beach, California
73445	Amperex Electronic Corp. Hicksville, New York
73559	Carling Electric Inc. Hartford, Connecticut
73586	Circle F Industries Trenton, New Jersey
73734	Federal Screw Products, Inc. Chicago, Illinois
73743	Fischer Special Mfg. Co. Cincinnati, Ohio
73899	JFD Electronics Co. Brooklyn, New York
73949	Guardian Electric Mfg. Co. Chicago, Illinois
74199	Quam Nichols Co. Chicago, Illinois
74217	Radio Switch Corp. Marlboro, New Jersey
74276	Signalite Inc. Neptune, New Jersey
74306	Piezo Crystal Co. Carlisle, Pennsylvania
74542	Hoyt Elect. Instr. Works Penacook, New Hampshire
74970	Johnson, E. F., Co. Waseca, Minnesota
75042	IRC Inc. Philadelphia, Pennsylvania
75376	Kurz-Kasch, Inc. Dayton, Ohio
75382	Kulka Electric Corp. Mt. Vernon, New York
75915	Littlefuse Inc. Des Plaines, Illinois
76854	Oak Mfg. Co. Crystal Lake, Illinois
77342	Potter & Brumfield Div. of Amer. Machine & Foundry Princeton, Indiana
77969	Rubbercraft Corp. of Calif. LTD. Torrance, California

78189	Shakeproof Div. of Illinois Tool Works Elgin, Illinois
78277	Sigma Instruments, Inc. South Braintree, Massachusetts
78488	Stackpole Carbon Co. St. Marys, Pennsylvania
78553	Tinnerman Products Cleveland, Ohio
79136	Waldes Kohinoor Inc. Long Island City, New York
79497	Western Rubber Company Goshen, Indiana
79963	Zierick Mfg. Corp. New Rochelle, New York
80031	Mepco Div. of Sessions Clock Co. Morristown, New Jersey
80145	API Instruments Co. Chesterland, Ohio
80183	Sprague Products North Adams, Massachusetts
80294	Bourns Inc. Riverside, California
80583	Hammarlund Co., Inc. Mars Hill, North Carolina
80640	Stevens, Arnold Inc. Boston, Massachusetts
81073	Grayhill Inc. La Grange, Illinois
81312	Winchester Electronics Div. of Litton Industries Oakville, Connecticut
81439	Therm-O-Disc Inc. Mansfield, Ohio
81483	International Rectifier Corp. El Segundo, California
81590	Korry Mfg. Co. Seattle, Washington
82376	Deleted
82389	Switchcraft Inc. Chicago, Illinois
82415	Price Electric Corp. Frederick, Maryland
82872	Roanwell Corp. New York, New York
82877	Rotron Mfg. Co., Inc. Woodstock, New York
82879	ITT Wire & Cable Div. Pawtucket, Rhode Island
83003	Varo Inc. Garland, Texas
83298	Bendix Corp. Electric Power Division Eatontown, New Jersey
83330	Smith, Herman H., Inc. Brooklyn, New York
83478	Rubbercraft Corp. of America New Haven, Connecticut
83594	Burroughs Corp. Electronic Components Div. Plainfield, New Jersey
83740	Union Carbide Corp. Consumer Products Div. New York, New York
84171	Arco Electronics, Inc. Great Neck, New York
84411	TRW Ogallala, Nebraska
86577	Precision Metal Products Stoneham, Massachusetts
86684	Radio Corp. of America Electronic Components & Devices Harrison, New Jersey
86689	Deleted
87034	Marco-Oak Inc. Anaheim, California
88419	Use 14655
88690	Replaced by 04217
89536	Fluke, John Mfg. Co., Inc. Seattle, Washington
89730	Replaced by 08806
90201	Mallory Capacitor Co. Indianapolis, Indiana
90215	Best Stamp & Mfg. Co. Kansas City, Missouri
90211	Square D Co. Chicago, Illinois
90303	Mallory Battery Co. Tarrytown, New York
91293	Johanson Mfg. Co. Boonton, New Jersey
91407	Replaced by 58474
91637	Dale Electronics Inc. Columbus, Nebraska
91662	Elco Corp. Willow Grove, Pennsylvania
91737	Gremar Mfg. Co., Inc. Wakefield, Massachusetts
91802	Industrial Devices, Inc. Edgewater, New Jersey
91836	King's Electronics Tuckahoe, New York
91929	Honeywell Inc. Micro Switch Div. Freeport, Illinois
91934	Miller Electric Co., Inc. Pawtucket, Rhode Island
93332	Sylvania Electric Products Semiconductor Products Div. Woburn, Massachusetts
94145	Replaced by 49956
94154	Tung-Sol Div. of Wagner Electric Corp. Newark, New Jersey
95146	Alco Electronics Products Inc. Lawrence, Massachusetts
95263	Leecraft Mfg. Co. Long Island City, New York
95264	Replaced by 98278
95275	Vitramon Inc. Bridgeport, Connecticut
95303	Radio Corp. of America Solid State & Receiving Tube Div. Cincinnati, Ohio
95354	Methode Mfg. Corp. Rolling Meadows, Illinois
95712	Dage Electric Co., Inc. Franklin, Indiana
95987	Weckesser Co., Inc. Chicago, Illinois
96733	San Fernando Electric Mfg. Co. San Fernando, California
96853	Rustrak Instrument Co. Manchester, New Hampshire
96881	Thomson Industries, Inc. Manhasset, New York
97540	Master Mobile Mounts Div. of Whitehall Electronics Corp. Los Angeles, California
97913	Industrial Electronic Hdware Corp. New York, New York
97945	White, S. S. Co. Plastics Div. New York, New York
97966	Replaced by 11358
98094	Replaced by 49956
98278	Microdot Inc. Pasadena, California
98291	Sealectro Corp. Conhex Div Mamaroneck, New York
98388	Accurate Rubber & Plastics Culver City, California
98743	Replaced by 12749
98925	Deleted
99120	Plastic Capacitors, Inc. Chicago, Illinois
99217	Southern Electronics Corp. Burbank, California
99515	Marshall Industries Capacitor Div. Monrovia, California

Revised August 1, 1968
Using H4-1 and H4-2
Dated June , 1968

WARRANTY

The JOHN FLUKE MFG. CO., INC. warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operation, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken.

1. Notify the John Fluke Mfg. Co., Inc., giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate of the charges will be made before the work begins, provided the instrument is not covered by the Warranty.

SHIPPING

All shipments of John Fluke Mfg. Co., Inc. instruments should be made via Railway Express prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc. Upon receipt of this report you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc. will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to:

JOHN FLUKE MFG. CO., INC., P. O. BOX 7428, SEATTLE 33, WASHINGTON

SALES & SERVICE REPRESENTATIVES

ALABAMA

HUNTSVILLE
BCS Associates, Inc.
3322 South Memorial Parkway
Tel. (205) 881-6220
Zip 35801

ALASKA

SEATTLE
Instrument Specialists, Inc.
5950 Sixth Ave. South
Suite 106
Seattle, Washington 98108
Tel. (206) 767-4260

ARIZONA

PHOENIX
Barnhill Associates
4900 E. Indian School Road
Tel. (602) 959-2115
Zip 85251

CALIFORNIA

LOS ANGELES
Instrument Specialists, Inc.
1109 S. Central Ave.
Glendale, California 91204
Tel. (213) 245-9404

SAN FRANCISCO
Instrument Specialists, Inc.
2359 De La Cruz
Santa Clara, California 95050
Tel. (408) 244-1505

SAN DIEGO
Instrument Specialists Inc.
10459 A Roselle Street
San Diego, California 92121
Tel. (714) 453-1833

COLORADO

DENVER
Barnhill Associates
1170 S. Sheridan Blvd.
Tel. (303) 934-5505
Zip 80226

CONNECTICUT

HARTFORD
Instrument Representatives, Inc.
P.O. Box 165
Glastonbury, Connecticut 06033
Tel. (203) 633-0777

FLORIDA

ORLANDO
BCS Associates, Inc.
940 N. Fern Creek Ave.
Tel. (305) 843-1510
Zip 32803

HAWAII

HONOLULU
Industrial Electronics, Inc.
646 Queen Street
Tel. (808) 506-095
Zip 96813

ILLINOIS

CHICAGO
Cossens & Cudahy, Inc.
9501 W. Devon Ave.
Rosemont, Illinois 60018
Tel. (312) 825-1144

INDIANA

INDIANAPOLIS
Cozzens & Cudahy, Inc.
647 Mulford Court
Tel. (317) 244-2456
Zip 46234

MARYLAND

BALTIMORE
Electronic Marketing Assoc.
11501 Huff Court
Kensington, Maryland 20795
Tel. (301) 881-5300

MASSACHUSETTS

BOSTON
Instrument Representatives, Inc.
1046 Massachusetts Avenue
Arlington, Massachusetts 02174
Tel. (617) 646-1034

MICHIGAN

DETROIT
Technitron, Inc.
13657 Grand River Ave.
Tel. (313) 838-7324
Zip 48227

MINNESOTA

MINNEAPOLIS
Cozzens & Cudahy, Inc.
7710 Computer Ave.
Tel. (612) 920-1022
Zip 55435

MISSOURI

ST. LOUIS
Cozzens & Cudahy, Inc.
P.O. Box 10013
Lambert Field 63145
Tel. (314) 423-1234

NEW JERSEY

NEWARK
SBM Associates, Inc.
1519 Stuyvesant Avenue
Union, New Jersey 07083
Tel. (201) 687-8737

NEW MEXICO

ALBUQUERQUE
Barnhill Associates
827 Pennsylvania N.E.
Tel. (505) 265-7766
Zip 87110

NEW YORK

NEW YORK
SBM Associates, Inc.
28 Hobby Street
Pleasantville, New York 10570
Tel. (914) 769-1811

LONG ISLAND
SBM Associates, Inc.
528 Old Country Road
Plainview, Long Island 11803
Tel. (516) 433-1421

ROCHESTER
SBM Associates, Inc.
800 Linden Avenue
Tel. (716) 381-8330
Zip 14625

SYRACUSE
SBM Associates, Inc.
138 Pickard Bldg.
5858 E. Molloy Road
Tel. (315) 454-9377
Zip 13211

NORTH CAROLINA

GREENSBORO
BCS Associates, Inc.
1039 E. Wendover Avenue
Tel. (919) 273-1918
Zip 27405

OHIO

CLEVELAND
Technitron, Inc.
23203 Lorain Road
North Olmsted, Ohio 44070
Tel. (216) 734-0960

DAYTON
Technitron, Inc.
1250 W. Dorothy Lane
Tel. (513) 298-9964
Zip 45409

OREGON

SEATTLE
Instrument Specialists, Inc.
5950 Sixth Ave. South
Suite 106
Seattle, Washington 98108
Tel. (206) 767-4260

PENNSYLVANIA

PHILADELPHIA
Electronic Marketing Assoc.
210 Goddard Blvd. - Suite 100
King of Prussia, Pennsylvania
Tel. (215) 248-5050
Zip 19406

PITTSBURGH
Technitron, Inc.
114 Spring Grove Road
Tel. (412) 371-1231
Zip 15235

TEXAS

DALLAS
Barnhill Associates
Ste. 220
312 N. Central Express Way
Richardson, Texas
Tel. (214) 231-2573
Zip 75080

HOUSTON
Barnhill Associates
Suite 332
3810 Westheimer
Tel. (713) 621-0040
Zip 77027

WASHINGTON

SEATTLE
Instrument Specialists, Inc.
5950 Sixth Ave. South
Suite 106
Seattle, Washington 98108
Tel. (206) 767-4260

WASHINGTON, D.C.

Electronic Marketing Associates
11501 Huff Court
Kensington, Maryland 20795
Tel. (301) 881-5300

CANADA

BRITISH COLUMBIA

VANCOUVER
Allan Crawford Associates, Ltd.
721 Aldford Ave.
Annacis Industrial Estate
New Westminster
Tel. (604) 524-1161

ONTARIO

OTTAWA, 3
Allan Crawford Associates, Ltd.
376 Churchill Avenue — Suite 106
Tel. (613) 725-3354

TORONTO
Allan Crawford Associates, Ltd.
65 Martin Ross Avenue
Downsview, Ontario
Tel. (416) 636-4910

QUEBEC

MONTREAL, 8
Allan Crawford Associates, Ltd.
1285 Hodge Street
Tel. (514) 747-9849

INTERNATIONAL REPRESENTATIVES

AUSTRALIA
Elmeasco Instruments
7 Chard Road
P.O. Box 334
Brookvale, N.S.W., Australia 2100

Elmeasco Instruments Pty. Ltd.
P.O. Box 213
Mt. Waverley, Vic. Australia 3149

AUSTRIA
Omni Ray AG
Tech. Beratung
Mollardgasse 54
Vienna VI, Austria

BELGIUM
C.N. Rood S/A
30 Rue Leon Frederic
Brussels 4, Belgium

DENMARK
Tage Olsen A/S
1, Ronnegade
Copenhagen, Denmark

FINLAND
Oy Findip AB
Postbox 52025
Helsinki 25, Finland

FRANCE
Radio Equipment Antares
9, Rue Ernest Cognac Q
92 Levallois
Perret, France

HONG KONG
Gilman & Co. Ltd.
P.O. Box 56
Hong Kong, Hong Kong

ISRAEL
R.D.T. Electronics Eng, Ltd.
P.O. Box 21082
Tel-Aviv, Israel

ITALY
Elettronucleonica s.p.a.
7, P.zza DeAngeli
20146 Milano, Italy

JAPAN
Toyo Trading Co., Ltd.
P.O. Box 5014
Tokyo, Japan

Toyo Trading Co., Ltd.
2-38 Junkeicho-dori minami-ku
Osaka, Japan

KOREA
M. - C International
I.P.O. Box 1355
Seoul, Korea

MALAYSIA
O'Connor's (Pte.) Limited
P.O. Box 1197
Kota, Kinabalu
East Malaysia

O'Connor's (Pte.) Limited
P.O. Box 91
Petaling Jaya
West Malaysia

THE NETHERLANDS
C.N. Rood N.V.
Post Office Box 4542
Rijswijk (Z.H.) The Netherlands

Fluke (Nederland) N.V.
Post Office Box 5053
Tilburg, The Netherlands

NORWAY
Morgenstierne & Co. A/S
P.B. 6688 Rodelokka
Oslo 6, Norway

SINGAPORE
O'Connor's (Pte.) Limited
Maybank House
Robinson Road
Singapore

SOUTH AFRICA
K. Baker (Pty.) Ltd.
P.O. Box 1257
Johannesburg, So. Africa

K. Baker (Pty.) Ltd.
P.O. Box 3641
Cape Town, So. Africa

K. Baker (Pty.) Ltd.
P.O. Box 2143
Durban, Natal, So. Africa

K. Baker (Pty.) Ltd.
P.O. Box 210
Swaziland, So. Africa

SPAIN
REMA
General Sanjurjo, 18
Madrid, Spain

SWEDEN
Erik Ferner AB
Box 56
161.26 Stockholm
Bromma, Sweden

SWITZERLAND
Omni Ray AG
Dufourstrasse 56
8008 Zurich, Switzerland

TAIWAN
Heighten Trading Co., Ltd.
P.O. 1408
Taipei, Taiwan

THAILAND
G. Simon Radio Ltd.
30 Patpong Avenue
Suriwong
Bangkok, Thailand

THE UNITED KINGDOM
Fluke International Corp.
Garnett Close
Watford, England
WD2-4TT

WEST GERMANY
Rohde & Schwarz Vertriebs - Gmbh
5000 Koeln
Hohe Strasse 160-168
West Germany

Rohde & Schwarz Handels - Gmbh
1000 Berlin 10
Ernst - Reuter - Platz 10
West Germany

Rohde & Schwarz Vertriebs - Gmbh
2000 Hamburg 50
Grosse Bergstrasse 213-217
West Germany

Rohde & Schwarz Vertriebs - Gmbh
7500 Karlsruhe
Kriegsstrasse 39
West Germany

Rohde & Schwarz Vertriebs - Gmbh
8000 Muenchen
Deachauer Strasse 109
West Germany

In Europe contact FLUKE NEDERLAND, N. V., Post Office Box 5053, Tilburg, The Netherlands

List of Factory Authorized Service Centers

ARIZONA

PHOENIX

Arizona Standards Laboratory
4430 N. 19th Ave.
Tel. (602) 264-9351

CALIFORNIA

LOS ANGELES

Instrument Specialists, Inc.
P. O. Box 39908
2870 Los Feliz Place
Tel. (213) 665-5181
TWX: 910-321-3914

COLORADO

BOULDER

Ball Brothers Research Corp.
Standardization Laboratory
Tel. (303) 444-5300
TWX: 910-940-3241

FLORIDA

ORLANDO

BCS Associates, Inc.
P. O. Box 6578
940 N. Fern Creek Ave.
Tel. (305) 425-2764
TWX. 810-850-0185

HAWAII

HONOLULU

Industrial Electronics
P. O. Box 135
646 Queen Street
Tel. (808) 506-095
TWX. 63238

MARYLAND

KENSINGTON

Electronic Marketing Associates
11501 Huff Court
Tel. (301) 946-0300
TWX. 710-825-9645

MASSACHUSETTS

ARLINGTON

Instrument Representatives, Inc.
1046 Massachusetts Ave.
Tel. (617) 646-1034

NEW MEXICO

ALBUQUERQUE

EG & G Standards and Calibration Laboratory
P. O. Box 4339, Station A
933 Bradbury Drive S. E.
Tel. (505) 842-4084

NEW YORK

PLEASANTVILLE

SBM Associates
28 Hobby Street
Tel. (914) 769-1811
TWX. 710-572-2193

ROCHESTER

SBM Associates
800 Linden Ave.
Tel. (716) 381-8330
TWX. 510-253-6145

OHIO

CLEVELAND

Honeywell Metrology Service
1001 E. 55th St.
Tel. (216) 881-0300

FAIRBORN

Honeywell Metrology Service
600 East Dayton Dr.
Tel. (513) 878-2551

TEXAS

GARLAND

Tucker Electronics Company
326 Kirby Street
Tel. (214) 272-3404

HOUSTON

Linear Standards Laboratory
8207 Millet
Tel. (713) 923-2796

UTAH

SALT LAKE CITY

Stabro Laboratory
23 Kensington Ave.
Tel. (801) 467-8011

CANADA

TORONTO

Allen Crawford Associates Ltd.
65 Martin Ross Ave.
Downsview, Ontario
Tel. (416) 636-4910
TWX. 610-492-2119

INTERNATIONAL

THE NETHERLANDS

Fluke Netherland N. V.
P. O. Box 5053
Tilburg, The Netherlands

UNITED KINGDOM

Fluke International Corp
P. O. Box 102
Watford-Herts, England

For information regarding service centers in other foreign locations, contact the nearest Sales and Service Representative in your area.

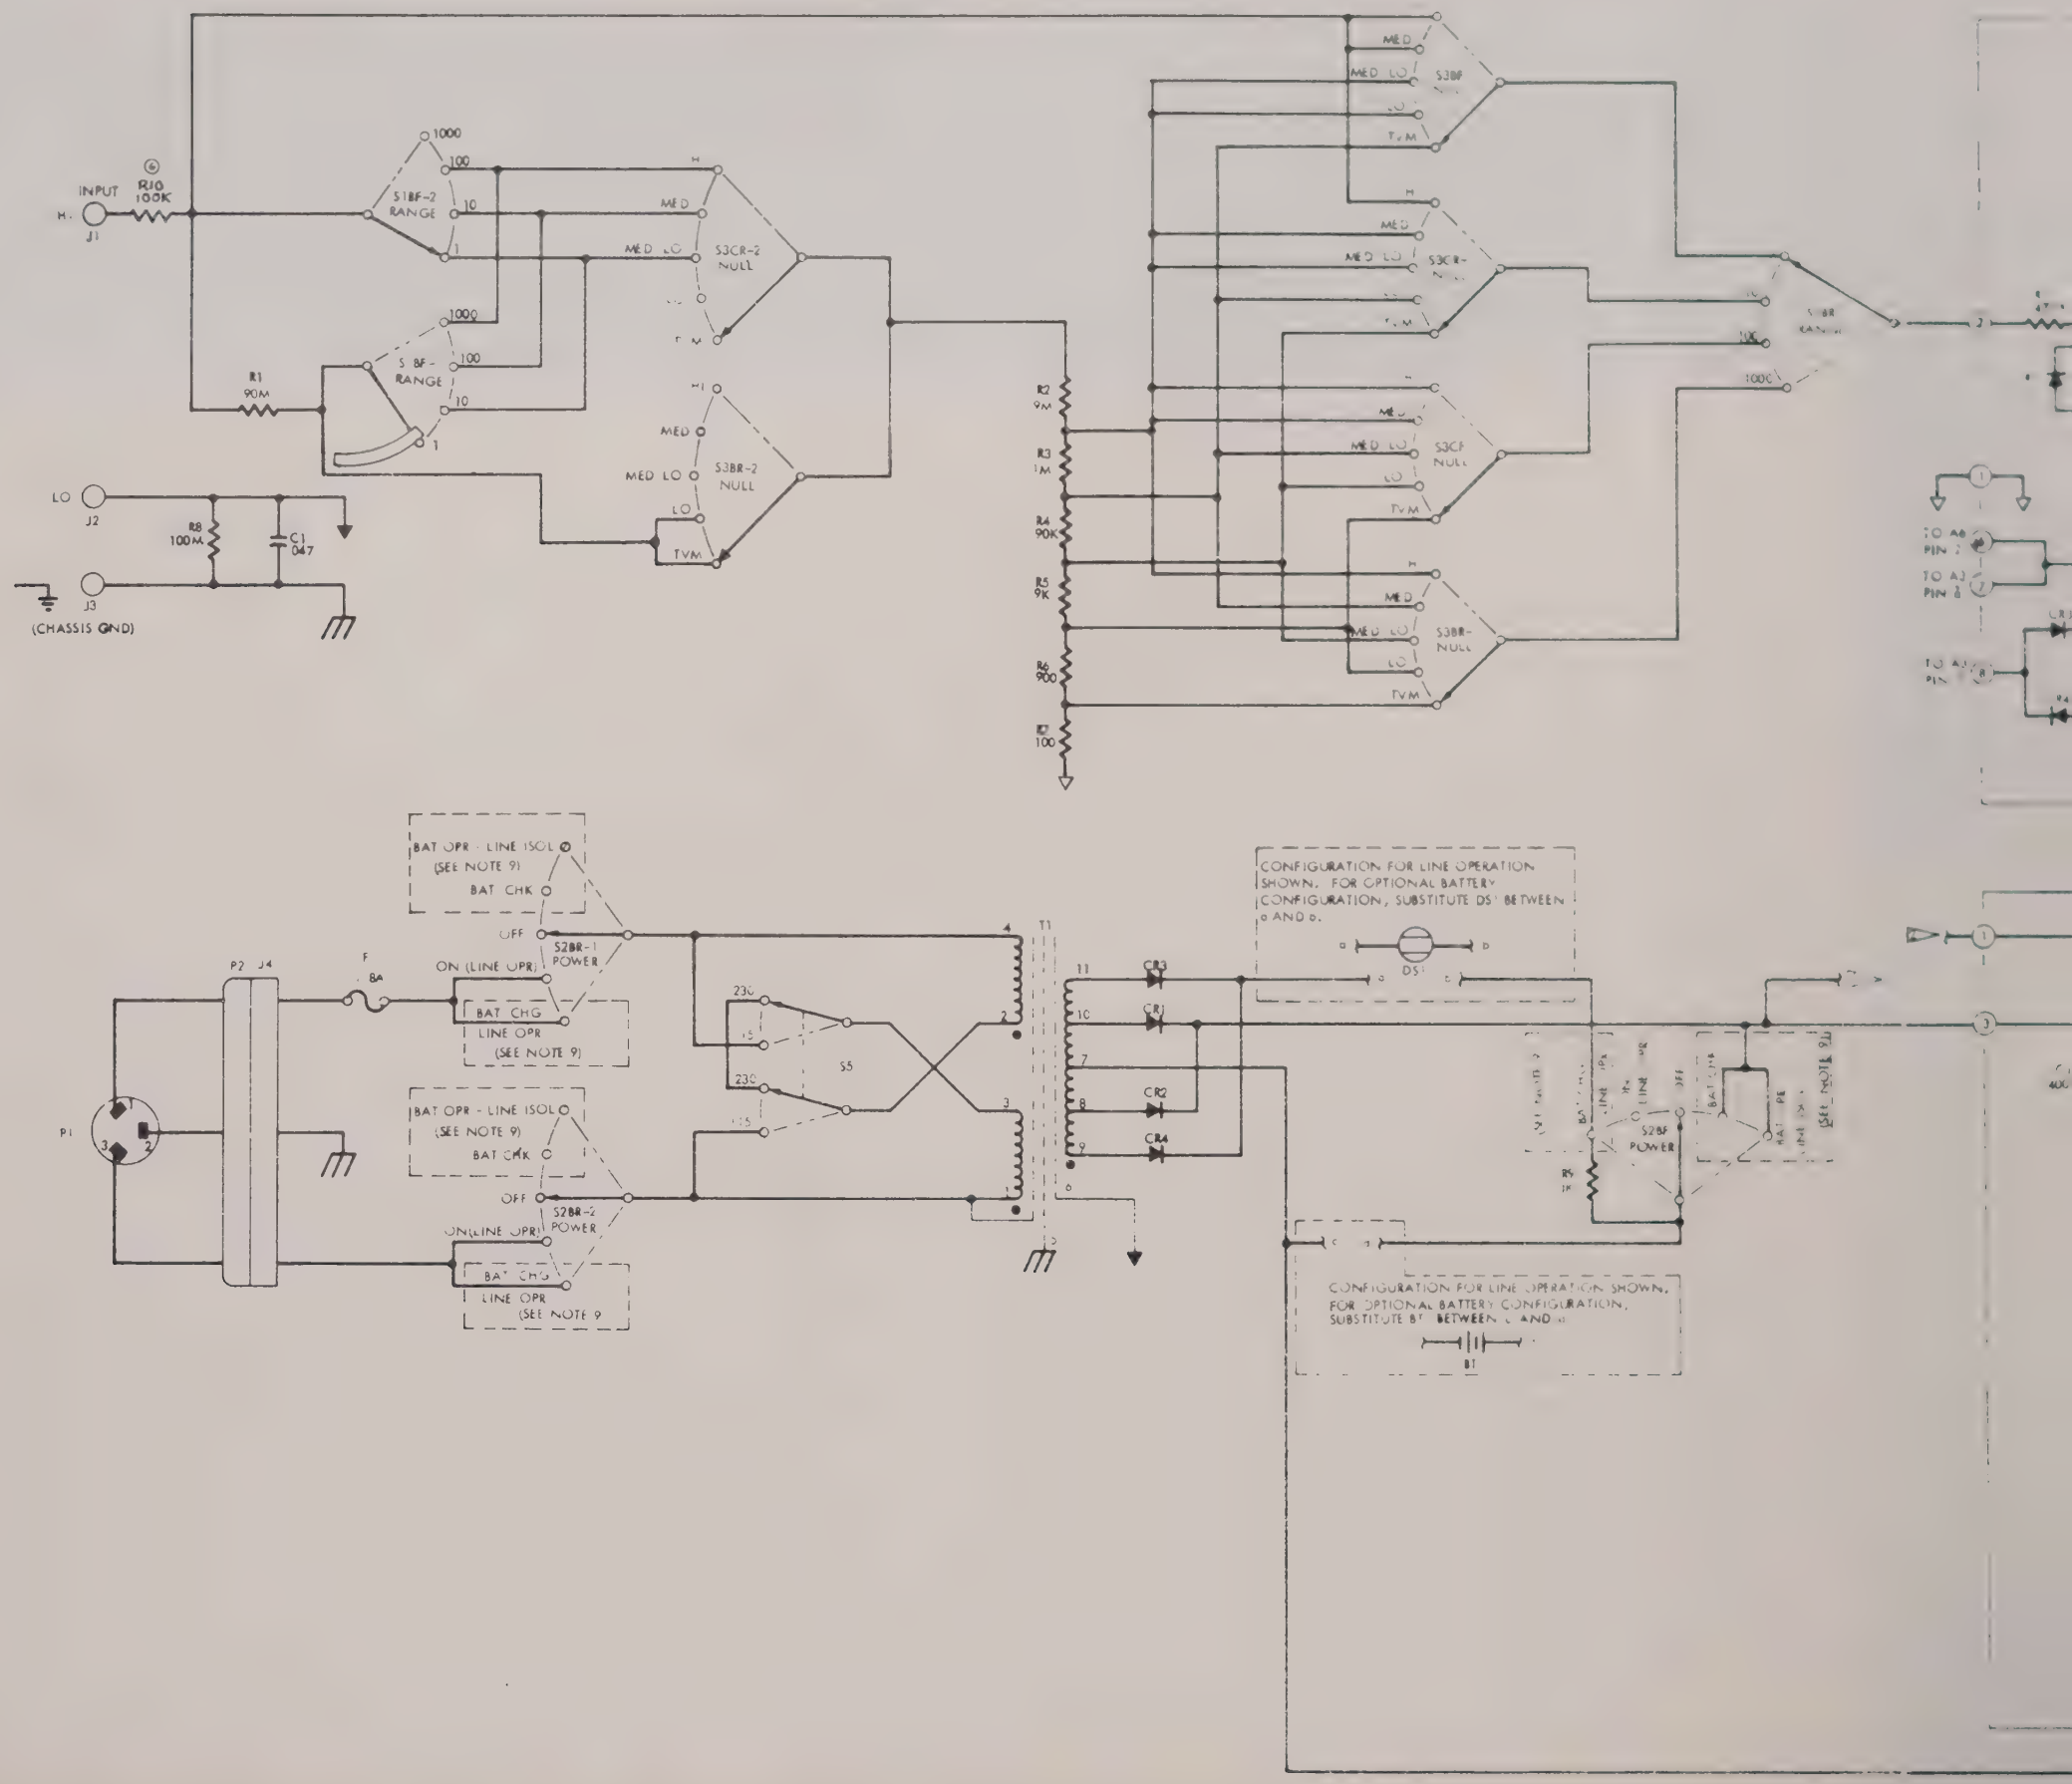
INPUT
J1
R10
100K
S1BF-2
RANGE
1000
100
10
1
S3CR-2
NULL
S3BR-2
NULL
S3BF
S3CR
S3CF
S3BR
MED
MED LO
LO
TVM
R1
90M
R2
9M
R3
1M
R4
90K
R5
9K
R6
900
R7
100
LO
J2
J3
(CHASSIS GND)
R8
100M
C1
.047
BAT OPR - LINE ISOL
(SEE NOTE 9)
BAT CHK
OFF
ON (LINE OPR)
BAT CHG
LINE OPR
S2BR-1
POWER
S2BR-2
POWER
P1
P2
J4
F
.8A
S5
T1
CR3
CR1
CR2
CR4
CONFIGURATION FOR LINE OPERATION SHOWN. FOR OPTIONAL BATTERY CONFIGURATION, SUBSTITUTE DS1 BETWEEN a AND b.
DS1
CONFIGURATION FOR LINE OPERATION SHOWN, FOR OPTIONAL BATTERY CONFIGURATION, SUBSTITUTE B1 BETWEEN c AND d.
B1
S2BF
POWER
TO A6
PIN 7
TO A3
PIN 8
TO A3
PIN 1

A 4
NULL DETECTOR
ASSEMBLY 4003

A 2
REFERENCE
AMPLIFIER
ASSEMBLY
4001

A3
REFERENCE INVERTER
ASSEMBLY 4002

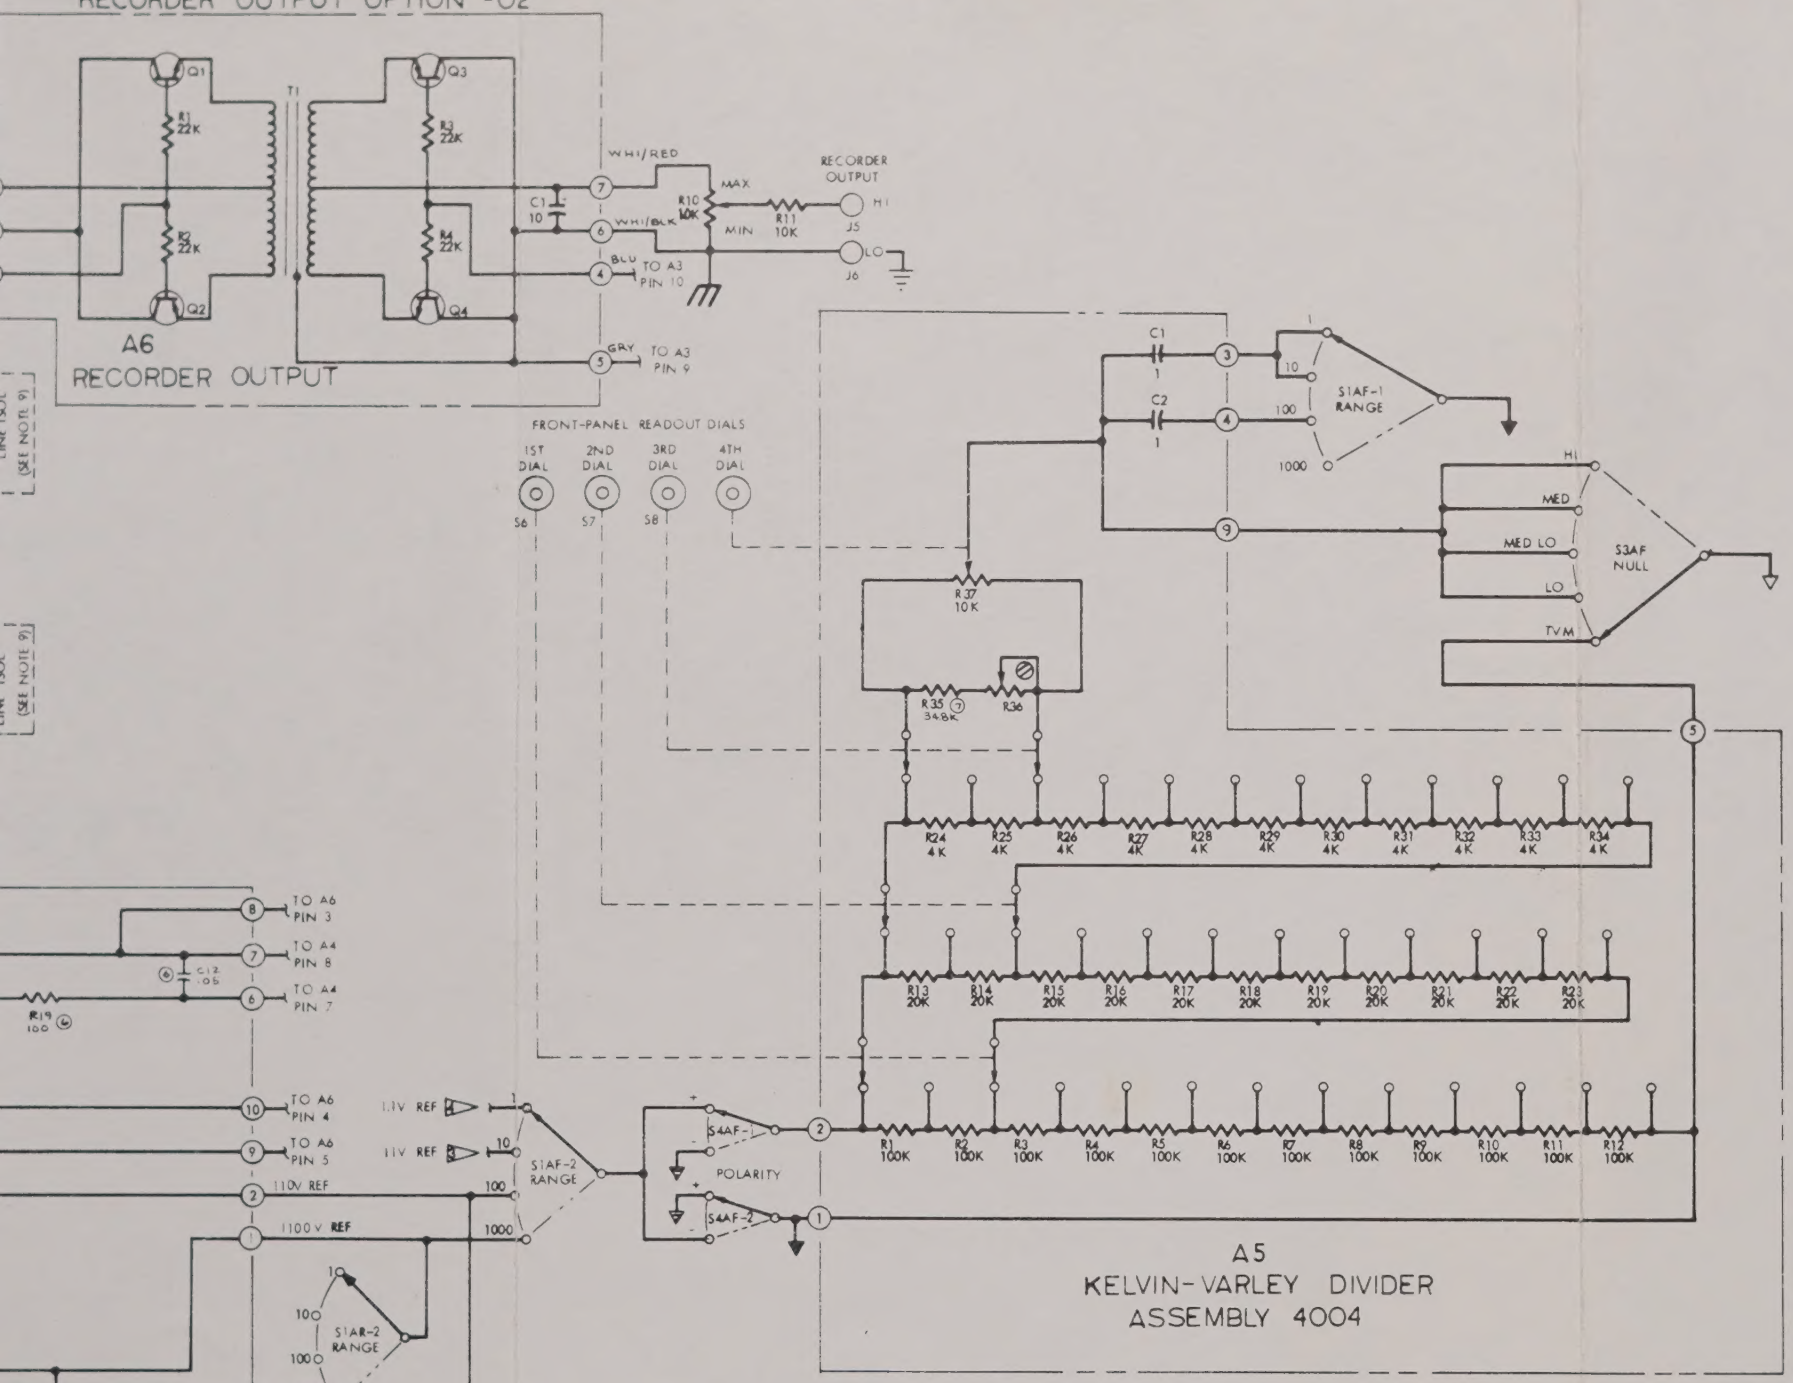

NOTES

1. LO INPUT COMMON
2. NULL DETECTOR COMMON
3. 1.1V, 11V, 110V, & 1100V REFERENCE COMMON
4. * FACTORY SELECTED COMPONENT
5. INTERNAL ADJUSTMENT
6. TEST POINT
7. FLAGS WITH THE SAME NUMBERS ARE CONNECTED
8. ALL RESISTANCE VALUES ARE IN OHMS AND ALL CAPACITANCE VALUES ARE IN MICROFARADS UNLESS OTHERWISE INDICATED.
9. POWER SWITCH (S2) POSITIONS WITHIN DASHED LINES ARE USED ONLY IN UNITS CONTAINING THE OPTIONAL RECHARGEABLE BATTERY SUPPLY.
10. ALL VOLTAGE MEASUREMENTS SHOWN ARE TAKEN UNDER THE FOLLOWING CONDITIONS:
    - (A) POWER SWITCH IN LINE OPERATE.
    - (B) LINE VOLTAGE AT 115-230 VOLTS, 50-440 HERTZ.
    - (C) ALL VOLTAGES MEASURED WITH A 3% 10 MEGOHM VOLTMETER FROM SPECIFIED TERMINAL TO REFERENCE SUPPLY NULL DETECTOR COMMON. THE COMMON POST IS REFERENCE SUPPLY NULL DETECTOR COMMON WHEN IN THE TVM MODE OR WHEN IN A NULL MODE WITH ALL VOLTAGE DIALS SET TO 0 AND POLARITY SWITCH SET TO +.
    - (D) SOME VOLTAGES MAY VARY AS MUCH AS 15 TO 20%.
    - (E) BIAS VOLTAGES (DIFFERENCE BETWEEN EMMITER AND BASE VOLTAGES) SHOULD REMAIN APPROXIMATELY THE SAME.
    - (F) ALL VOLTAGES ARE DC UNLESS OTHERWISE INDICATED.
11. BELOW IS A BRIEF EXPLANATION OF THE COMPLETE REFERENCE DESIGNATIONS OF SWITCHES S1 THRU S4. NULL SWITCH S3BR 2 IS USED AS AN EXAMPLE.
    - (S3) THE BASIC REFERENCE DESIGNATION.
    - (B) THE SWITCH DECK LOCATION AS VIEWED FROM THE FRONT PANEL. "B" IS THE SECOND DECK FROM THE FRONT PANEL OF SWITCH S3.
    - (R) "R" INDICATES THE REAR SECTION OF THE ABOVE DECK. AN "F" INDICATES THE FRONT SECTION.
    - (2) INDICATES WHICH FUNCTION OF THE ABOVE DECK SECTION IS ILLUSTRATED. NO NUMBER IN THIS POSITION INDICATES THAT ONLY ONE FUNCTION IS ACCOMPLISHED BY THE DECK SECTION.

CHANGES

① 891A S/N 126 & ON
A2CR5 REPLACES A2R2, 27K

② 891A S/N 123 THRU 262
891AR S/N 123 THRU 292
A2C9 NOT INSTALLED
A4R15 WAS 42.2K
A4R18 WAS 17.8K
A4R29 WAS 82.5Ω

③ 891A S/N 123 THRU 265
891AR S/N 123 THRU 192
A3C6 WAS 10 uf
A3C10, C11 NOT INSTALLED
A3CR8, CR9 NOT INSTALLED

④ 891A S/N 123 THRU 267
891AR S/N 123 THRU 232
A2C3 WAS 0.1 uf

⑤ 891A S/N 123 THRU 317
891AR S/N 123 THRU 232
A2CR6 NOT INSTALLED

⑥ 891A S/N 123 THRU 363
891AR S/N 123 THRU 272
R10 NOT INSTALLED
A3C12 NOT INSTALLED
A3L1 47 uh NOT INSTALLED
A3L2 NOT INSTALLED
A3R17 NOT INSTALLED
A3R18 NOT INSTALLED
A3R19 NOT INSTALLED
A2R37 NOT INSTALLED

⑦ 891A S/N 123 THRU 367
891AR S/N 123 THRU 272
A5R35 WAS 34K

⑧ 891A S/N 368 AND ON
891AR S/N 273 AND ON
A4C16 DELETED
A4C17 DELETED
A4R33 DELETED
A4R34 DELETED

⑨ 891A S/N 266 THRU 363
891AR S/N 193 THRU 272
A3L1 470 uh INSTALLED

FUNCTIONAL SCHEMATIC DIAGRAM

MODEL 891A & 891AR

DC DIFFERENTIAL VOLTMETER

SER NO 123 & ON | REV 9

FLUKE JOHN FLUKE MFG. CO., INC.
P.O. Box 7428 Seattle Washington 98133

www.manualsplus.com
1029820